# **SINAMICS S120**

**AC Drive** 

Manual 10/2008

**SINAMICS** 



# **SIEMENS**

**SINAMICS** 

S120 AC Drive

Manual

Foreword	
System overview	1
Line-side power components	2
Power Modules	3
DC link components	4
Motor-side power components	5
Control Units	6
Supplementary system components and encoder system integration	7
Accessories	8
Cabinet design and EMC for components, Blocksize format	9
Cooling circuit and coolant properties	10
Service and maintenance	11
Appendix A	Α

### Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

### DANGER

indicates that death or severe personal injury will result if proper precautions are not taken.

### ∕!\WARNING

indicates that death or severe personal injury may result if proper precautions are not taken.

### /!\CAUTION

with a safety alert symbol, indicates that minor personal injury can result if proper precautions are not taken.

#### **CAUTION**

without a safety alert symbol, indicates that property damage can result if proper precautions are not taken.

#### NOTICE

indicates that an unintended result or situation can occur if the corresponding information is not taken into account.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

#### **Qualified Personnel**

The device/system may only be set up and used in conjunction with this documentation. Commissioning and operation of a device/system may only be performed by qualified personnel. Within the context of the safety notes in this documentation qualified persons are defined as persons who are authorized to commission, ground and label devices, systems and circuits in accordance with established safety practices and standards.

#### Proper use of Siemens products

Note the following:

#### / WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be adhered to. The information in the relevant documentation must be observed.

#### **Trademarks**

All names identified by ® are registered trademarks of the Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

### **Foreword**

### **SINAMICS Documentation**

The SINAMICS documentation is organized in 2 parts:

- General documentation / catalogs
- Manufacturer/service documentation

You can find more information on the following topics at http://www.siemens.com/motioncontrol/docu:

Ordering documentation

Here you can find an up-to-date overview of publications

Downloading documentation

Further links for downloading files from Service & Support

Researching documentation online

Information on DOConCD and direct access to the publications in DOConWeb.

 For customizing documentation based on Siemens content using My Documentation Manager (MDM), see

http://www.siemens.com/mdm

My Documentation Manager provides you with a range of features for creating your own machine documentation

Training and FAQs

Information about training courses and FAQs (Frequently Asked Questions) can be found using the page navigation.

### Usage phases and the available tools/documents

Table 1 Usage phase and the available tools / documents

Usage phase	Tools/documents
Orientation	SINAMICS S Sales Documentation
Planning/configuration	SIZER engineering tool Configuration Manuals, Motors
Decision making / ordering	SINAMICS S catalogs
Installation / assembly	<ul> <li>SINAMICS S120 Manual for Control Units and Supplementary System Components</li> <li>SINAMICS S120 Manual Power Modules Booksize</li> <li>SINAMICS S120 Manual for Power Modules in built-in units</li> <li>SINAMICS S150 operating instructions</li> </ul>

Usage phase	Tools/documents
Commissioning	STARTER parameterization and commissioning tool
	SINAMICS S120 Getting Started
	SINAMICS S120 Commissioning Manual
	SINAMICS S120 CANopen Commissioning Manual
	SINAMICS S List Manual
	SINAMICS S150 Operating Instructions
Usage / operation	SINAMICS S120 Commissioning Manual
	SINAMICS S List Manual
	SINAMICS S150 Operating Instructions
Maintenance/servicing	SINAMICS S120 Commissioning Manual
	SINAMICS S List Manual
	SINAMICS S150 Operating Instructions

### **Target group**

This documentation is aimed at machine manufacturers, commissioning engineers, and service personnel who use SINAMICS.

### **Benefits**

This documentation contains the comprehensive information about parameters, function diagrams and faults and alarms required to commission and service the system.

This manual should be used in addition to the other manuals and tools provided for the product.

### Standard scope

The scope of the functionality described in this document can differ from the scope of the functionality of the drive system that is actually supplied.

- Other functions not described in this documentation might be able to be executed in the
  drive system. This does not, however, represent an obligation to supply such functions
  with a new control or when servicing.
- Functions can be described in the documentation that are not available in a particular product version of the drive system. The functionality of the supplied drive system should only be taken from the ordering documentation.
- Extensions or changes made by the machine manufacturer must be documented by the machine manufacturer.

For reasons of clarity, this documentation does not contain all of the detailed information on all of the product types. This documentation cannot take into consideration every conceivable type of installation, operation and service/maintenance.

### Search tools

The following guides are provided to help you locate information in this manual:

- 1. General table of contents for the complete manual (after the preface).
- 2. List of abbreviations
- 3. References.
- 4. Index

### **Technical Support**

If you have any questions, please contact our hotline:

	Europe/Africa
Telephone	+49 180 5050 - 222
Fax	+49 180 5050 - 223
0.14 €/min from German landlines, call prices from cell phone networks may vary	
Internet	http://www.siemens.de/automation/support-request

	America
Telephone	+1 423 262 2522
Fax	+1 423 262 2200
E-mail	mailto:techsupport.sea@siemens.com

	Asia/Pacific
Telephone	+86 1064 757575
Fax	+86 1064 747474
E-mail	mailto:support.asia.automation@siemens.com

#### Note

You will find telephone numbers for other countries for technical support on the Internet: http://www.automation.siemens.com/partner

### Spare parts

Spare parts are available on the Internet at: http://support.automation.siemens.com/WW/view/de/16612315

#### Questions about the documentation

If you have any questions (suggestions, corrections) regarding this technical documentation, please fax or e-mail us at:

Fax	+49 9131 98 2176
E-mail	mailto:docu.motioncontrol@siemens.com

A fax form is at the end of this document.

### Internet address for SINAMICS

http://www.siemens.com/sinamics.

### **EC Declarations of Conformity**

The EC Declaration of Conformity for the EMC Directive can be found/obtained:

- in the Internet: http://support.automation.siemens.com under the Product/Order No. 15257461
- at the relevant regional office of the I DT MC Business Unit of Siemens AG

The EC Declaration of Conformity for the Low-Voltage Directive can be found/obtained

 in the Internet: http://support.automation.siemens.com under the Product/Order No. 22383669

### Note

When operated in dry areas, SINAMICS equipment conforms to the Low-Voltage Directive 73/23/EEC and 2006/95/EC.

#### Note

In the configuration specified in the corresponding EC Declaration of Conformity regarding EMC requirements and when the EMC installation guideline (order no. 6FC5297-0AD30-0\*P2) is observed, SINAMICS devices fulfill EMC Directive 89/336/EEC and 2004/108/EC. (\*A: German; \*B: English)

#### Note

The Manual describes a desired state which, if maintained, ensures reliable operation as desired and compliance with EMC limit values.

Should there be a deviation from the Manual requirements, appropriate actions (e.g. measurements) must be taken to check/prove that the desired reliable operation is ensured and EMC limit values are complied with.

### **ESD** information

### / CAUTION

Electrostatic sensitive devices (ESDs) are individual components, integrated circuits, or boards that may be damaged by either electrostatic fields or electrostatic discharge.

Regulations for handling ESD components:

When handling components, make sure that personnel, workplaces, and packaging are well earthed.

Personnel may only come into contact with electronic components, if

- They are grounded with an ESD wrist band, or
- They are in ESD areas with conductive flooring, ESD shoes or ESD grounding straps.

Electronic boards should only be touched if absolutely necessary. They must only be handled on the front panel or, in the case of printed circuit boards, at the edge.

Electronic boards must not come into contact with plastics or items of clothing containing synthetic fibers.

Boards must only be placed on conductive surfaces (work surfaces with ESD surface, conductive ESD foam, ESD packing bag, ESD transport container).

Do not place boards near display units, monitors, or television sets (minimum distance from screen: 10 cm).

Measurements can only be taken on electronic boards when the measuring device is grounded (e.g. via protective conductors) or when the measuring probe is briefly discharged before measurements are taken with an isolated measuring device (e.g. touching a bare metal housing).

### Safety information

### / DANGER

Commissioning must not start until you have ensured that the machine, in which the components described here are installed, complies with the Machinery Directive 98/37/EC.

Only appropriately qualified personnel may mount/install, commission and service the SINAMICS S units.

The personnel must take into account the information provided in the technical customer documentation for the product, and be familiar with and observe the specified danger and warning notices.

Operational electrical equipment and motors have parts and components which are at hazardous voltage levels, that if touched, can result in severe bodily injury or death.

All work on the electrical system must be carried out when the system has been disconnected from the power supply.

In combination with the drive system, the motors are generally approved for operation on TN and TT systems with a grounded neutral point and on IT systems.

In operation on IT systems, the occurrence of a first fault between an active part and ground must be signaled by a monitoring device. In accordance with IEC 60364-4-41 it is recommended that the first fault should be eliminated as quickly as practically possible.

In systems with a grounded external conductor, an isolating transformer with grounded neutral point (secondary side) must be connected between the supply and the drive system to protect the motor insulation from excessive stress. The majority of TT systems have a grounded external conductor, so in this case an isolating transformer must be used.

### / DANGER

Correct and safe operation of SINAMICS S drive units assumes correct transportation in the transportation packaging, correct long-term storage in the transport packaging, setup and installation, as well as careful operation and maintenance.

The details in the Catalogs and proposals also apply to the design of special equipment versions.

In addition to the danger and warning information provided in the technical customer documentation, the applicable national, local, and system-specific regulations and requirements must be taken into account.

To ensure compliance with EN 61800-5-1 and UL 508, only safety extra-low voltages from the electronics modules may be connected to connections and terminals.

### /!\DANGER

Using protection against direct contact via DVC A (PELV) is only permissible in areas with equipotential bonding and in dry rooms indoors. If these conditions are not fulfilled, then other protective measures against electric shock must be used (e.g. protection using protective impedances or limited voltage or using protective classes I and II).

### DANGER

Electrical, magnetic, and electromagnetic fields (EMF) occurring during operation can pose a danger to people in the direct vicinity of the product, especially people with pacemakers, implants, or similar.

The relevant directives and standards must be observed by the machine/plant operators and people present in the vicinity of the product. These are, for example, EMF Directive 2004/40/EEC and standards EN 12198-1 to -3 applying to the European Economic Area (EEA) and in Germany the accident prevention regulation BGV 11 and the associated rule BGR 11 "Electromagnetic fields" from the German employer's liability accident insurance association.

These state that a hazard analysis must drawn up for every workplace, from which measures for reducing dangers and their impact on people are derived and applied, and exposure and danger zones are defined and observed.

The relevant safety notes in each chapter must be observed.

### DANGER

As part of routine tests, SINAMICS S components will undergo a voltage test in accordance with EN 61800-5-1. Before the voltage test is performed on the electrical equipment of machines acc. to EN 60204-1, Section 19.4, all connectors of SINAMICS equipment must be disconnected/unplugged to prevent the equipment from being damaged.

Motors should be connected-up corresponding to the circuit diagram supplied with the motor (refer to the connection examples, Motor Modules). They must not be connected directly to the three-phase supply because this will damage them.

### / WARNING

Operating the equipment in the immediate vicinity (< 1.8 m) of mobile telephones with a transmitter power of > 1 W may cause the equipment to malfunction.

### **Explanation of symbols**

The symbols are in accordance with IEC 617-2.

Table 2 Symbols

Symbol	Meaning
	Protective earth (PE)
	Ground (e.g. M 24 V)
	Functional ground Equipotential bonding

### Residual risks of power drive systems

When carrying out a risk assessment of the machine in accordance with the EU Machinery Directive, the machine manufacturer must consider the following residual risks associated with the control and drive components of a power drive system (PDS).

- 1. Unintentional movements of driven machine components during commissioning, operation, maintenance, and repairs caused by, for example:
  - Hardware defects and/or software errors in the sensors, controllers, actuators, and connection technology
  - Response times of the controller and drive
  - Operating and/or ambient conditions not within the scope of the specification
  - Parameterization, programming, cabling, and installation errors
  - Use of radio devices / cellular phones in the immediate vicinity of the controller
  - External influences / damage
- 2. Exceptional temperatures as well as emissions of light, noise, particles, or gas caused by, for example:
  - Component malfunctions
  - Software errors
  - Operating and/or ambient conditions not within the scope of the specification
  - External influences / damage

- 3. Hazardous shock voltages caused by, for example:
  - Component malfunctions
  - Influence of electrostatic charging
  - Induction of voltages in moving motors
  - Operating and/or ambient conditions not within the scope of the specification
  - Condensation / conductive contamination
  - External influences / damage
- 4. Operational electrical, magnetic, and electromagnetic fields that can pose a risk to people with a pacemaker and/or implants or metallic objects if they are too close.
- 5. Release of environmentally hazardous materials and emissions during improper operation and / or improper disposal of components.

For more information about residual risks of the power drive system components, see the relevant chapters in the technical user documentation.

## Table of contents

	Forewor	d	5
1	System o	overview	23
	1.1	Field of application	23
	1.2	Platform concept and Totally Integrated Automation	24
	1.3	Overview, SINAMICS S120 AC Drive	25
	1.4	SINAMICS S120 components	26
	1.5	System data	28
	1.6	Standards	30
2	Line-side	e power components	33
	2.1	Introduction	
	2.2 2.2.1 2.2.2 2.2.3 2.2.4	Line connection variants	35 36 36
	2.3 2.3.1 2.3.2 2.3.3 2.3.4 2.3.5 2.3.6 2.3.7	Line filter  Description Safety information Dimension drawing, Blocksize Dimension drawing, Chassis. Installation Technical data, Blocksize line filter Technical data, Chassis line filter	
	2.4 2.4.1 2.4.2 2.4.3 2.4.4 2.4.5 2.4.6 2.4.7 2.4.8	Line reactors Description Safety information Dimension drawings, Blocksize line reactors Dimension drawing, Chassis line reactor Installation Electrical Connection Technical data, Blocksize Technical data, Chassis	
3	Power M	lodules	61
	3.1 3.1.1 3.1.2 3.1.3 3.1.3.1 3.1.3.2 3.1.3.3 3.1.3.4 3.1.3.5	Power Modules Blocksize (PM340)  Description  Safety information  Interface description  Overview  Line supply connection  Braking resistor and DC link connection  Motor connection  Connection to the option module, brake control	61 63 66 66 74 75

	3.1.4	Dimension drawings	
	3.1.5	Mounting	
	3.1.6	Technical data	87
	3.2	Power Modules Blocksize Liquid Cooled (PM340)	100
	3.2.1	Description	
	3.2.2	Safety information	
	3.2.3	Interface description	
	3.2.3.1	Overview	
	3.2.3.2	Line supply connection	106
	3.2.3.3	Braking resistor and DC link connection	107
	3.2.3.4	Motor connection	107
	3.2.3.5	Connection to the option module, brake control	107
	3.2.4	Dimension drawings	
	3.2.5	Installation	
	3.2.6	Electrical connection	
	3.2.7	Commissioning	
	3.2.8	Technical specifications	114
	3.3	Power Modules Chassis	122
	3.3.1	Description	
	3.3.2	Safety information	
	3.3.3	Interface description	
	3.3.3.1	Overview	
	3.3.3.2	Sample connection	
	3.3.3.3	Terminal Block X9	
	3.3.3.4	DCPS, DCNS connection for a dv/dt filter	129
	3.3.3.5	X41 EP terminal / temperature sensor connection	
	3.3.3.6	X42 terminal strip	
	3.3.3.7	X46 Brake control and monitoring	
	3.3.3.8	DRIVE-CLiQ interface X400-X402	
	3.3.3.9	Meaning of the LEDs on the Power Module	
	3.3.4	Dimension drawings	
	3.3.5	Mounting the CU310 in the Power Module Chassis	
	3.3.6	Electrical connection	
	3.3.7	Technical data	
	3.3.7.1	Characteristics	
	3.3.7.2	Current de-rating as a function of the pulse frequency	143
4	DC link	components	145
	4.1	Blocksize	145
	4.1.1	Braking resistors	
	4.1.1.1	Description	
	4.1.1.2	Safety information	
	4.1.1.3	Dimension drawings	
	4.1.1.4	Mounting	
	4.1.1.5	Technical data	
	4.2	Chassis	150
	4.2 4.2.1	Braking Modules	
	4.2.1.1	Description	
	4.2.1.1	Safety information	
	4.2.1.3	Braking Module for frame size FX	
	4.2.1.4	Braking Module for type GX	
	4.2.1.5	Sample connection	
	4.2.1.6	Braking resistor connection X1	
	4.2.1.7	X21 digital inputs/outputs	

	4.2.1.8	S1 Threshold switch	157
	4.2.1.9	Installing a Braking Module in a Power Module, frame size FX	158
	4.2.1.10	Installing a Braking Module in a Power Module, frame size GX	
		Technical data	
	4.2.2	Braking resistors	
	4.2.2.1	Description	
	4.2.2.2	Safety information	
	4.2.2.3	Dimension drawing	
	4.2.2.4	Electrical connection	
	4.2.2.5	Technical data	
5	Motor-sid	de power components	167
	5.1	Motor reactors	
	5.1.1	Blocksize	167
	5.1.1.1	Description	167
	5.1.1.2	Safety information	167
	5.1.1.3	Dimension drawings	168
	5.1.1.4	Mounting	
	5.1.1.5	Electrical connection	
	5.1.1.6	Technical data	
	5.1.2	Chassis	
	5.1.2.1	Description	
	5.1.2.2	Safety information	
	5.1.2.3	Dimension drawing	
	5.1.2.3	Technical data	
	3.1.2.4		
	5.2	Sinusoidal filter	
	5.2.1	Chassis	184
	5.2.1.1	Description	184
	5.2.1.2	Safety information	
	5.2.1.3	Dimension drawing	
	5.2.1.4	Technical data	
	5.3	dv/dt filter plus Voltage Peak Limiter	188
	5.3.1	Chassis	
	5.3.1.1	Description	
	5.3.1.2	Safety information	
	5.3.1.3	Interface description	
	5.3.1.4	Connecting the dv/dt filter plus Voltage Peak Limiter	
	5.3.1.5	Dimension drawing, dv/dt reactor	
	5.3.1.6	Dimension drawing of the voltage peak limiter	102
	5.3.1.7	Technical data	
6	Control U	Jnits	
	6.1	Introduction	197
	6.2	Control Unit CU310 DP (PROFIBUS)	200
	6.2.1	Description	
	6.2.2	Safety information	
	6.2.3	Interface description	
	6.2.3.1	Overview	
	6.2.3.1	Sample connection	
	6.2.3.2	X100 DRIVE-CLiQ interface	
	6.2.3.4	X120 EP terminals / temperature sensor	
	6.2.3.5	X121 digital inputs/outputs	
	6.2.3.6	Electronics power supply X124	
	6.2.3.7	X21 PROFIBUS	205

6.2.3.9 PROFIBUS address switches 6.2.3.10 X22 serial interface (RS232) 6.2.3.11 Measurement sockets T0, T1, and T2 6.2.3.12 Slot for the CompactFlash card 6.2.3.13 Description of the LEDs on the Control Unit 6.2.4 Dimension drawing 6.2.5 Mounting the CU310 on the Power Module Blocksize 6.2.6 Mounting the CU310 in the Power Module Chassis	209 209 210 210
6.2.3.11 Measurement sockets T0, T1, and T2	209 210 210 213
<ul> <li>6.2.3.12 Slot for the CompactFlash card</li> <li>6.2.3.13 Description of the LEDs on the Control Unit</li> <li>6.2.4 Dimension drawing</li> <li>6.2.5 Mounting the CU310 on the Power Module Blocksize</li> <li>6.2.6 Mounting the CU310 in the Power Module Chassis</li> </ul>	210 210 213
6.2.3.13 Description of the LEDs on the Control Unit	210 213
<ul> <li>6.2.4 Dimension drawing</li></ul>	213
<ul><li>6.2.5 Mounting the CU310 on the Power Module Blocksize</li><li>6.2.6 Mounting the CU310 in the Power Module Chassis</li></ul>	214
6.2.6 Mounting the CU310 in the Power Module Chassis	214
6.2.7 Technical data	
6.3 Control Unit CU310 PN (PROFINET)	210
6.3.1 Description	
6.3.2 Safety information	
6.3.3 Interface description	
6.3.3.1 Overview	
6.3.3.2 Sample connection	
6.3.3.3 X100 DRIVE-CLiQ interface	221
6.3.3.4 X120 EP terminals / temperature sensor	
6.3.3.5 X121 digital inputs/outputs	
6.3.3.6 Electronics power supply X124	
6.3.3.7 X200 - X201 PROFINET	
6.3.3.8 X23 HTL/TTL/SSI encoder interface	
6.3.3.9 X22 serial interface (RS232)	
6.3.3.11 Description of the LEDs on the Control Unit	
6.3.4 Dimension drawing	229
6.3.5 Mounting the CU310 on the Power Module Blocksize	
6.3.6 Technical data	
h // L'ontrol Linit //dontor / 11/1/27	222
6.4 Control Unit Adapter CUA31	
6.4.1 Description	232
6.4.1 Description	232 232
6.4.1 Description	232 232 233
6.4.1 Description	232 232 233 233
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply	232 232 233 233 234
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor	232 233 233 234 235
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31	232 233 233 234 235 235
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing	232 233 233 234 235 235 236
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing 6.4.5 Mounting	232 233 233 234 235 236 237 238
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing	232 233 233 234 235 236 237 238
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing 6.4.5 Mounting	232 233 233 234 235 235 236 237 239
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing 6.4.5 Mounting 6.4.6 Technical data 6.5 CUA32 Control Unit Adapter 6.5.1 Description	232 233 233 234 235 235 236 237 238 239
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing 6.4.5 Mounting 6.4.6 Technical data 6.5 CUA32 Control Unit Adapter 6.5.1 Description 6.5.2 Safety Information	232 233 233 234 235 236 237 238 239 240 240
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing 6.4.5 Mounting 6.4.6 Technical data 6.5 CUA32 Control Unit Adapter 6.5.1 Description 6.5.2 Safety Information 6.5.3 Interface description	232 233 233 234 235 236 237 238 239 240 240 241
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing 6.4.5 Mounting 6.4.6 Technical data 6.5 CUA32 Control Unit Adapter 6.5.1 Description 6.5.2 Safety Information 6.5.3 Interface description 6.5.3 Interface description 6.5.3.1 Overview	232 233 233 234 235 235 236 237 238 240 240 241
6.4.1       Description         6.4.2       Safety Information         6.4.3       Interface description         6.4.3.1       Overview         6.4.3.2       X200 - X202 DRIVE-CLiQ interface         6.4.3.3       X224 electronics power supply         6.4.3.4       X210 EP terminals / temperature sensor         6.4.3.5       Description of the LEDs on the Control Unit Adapter CUA31         6.4.4       Dimension drawing         6.4.5       Mounting         6.4.6       Technical data         6.5       CUA32 Control Unit Adapter         6.5.1       Description         6.5.2       Safety Information         6.5.3       Interface description         6.5.3.1       Overview         6.5.3.2       X200 - X202 DRIVE-CLiQ interface	232 233 233 234 235 236 237 238 239 240 240 241 241
6.4.1 Description	232 233 233 235 235 236 237 238 240 240 241 241 241
6.4.1       Description         6.4.2       Safety Information         6.4.3       Interface description         6.4.3.1       Overview         6.4.3.2       X200 - X202 DRIVE-CLiQ interface         6.4.3.3       X224 electronics power supply         6.4.3.4       X210 EP terminals / temperature sensor         6.4.3.5       Description of the LEDs on the Control Unit Adapter CUA31         6.4.4       Dimension drawing         6.4.5       Mounting         6.4.6       Technical data         6.5       CUA32 Control Unit Adapter         6.5.1       Description         6.5.2       Safety Information         6.5.3       Interface description         6.5.3.1       Overview         6.5.3.2       X200 - X202 DRIVE-CLiQ interface         6.5.3.3       X224 electronics power supply         6.5.3.4       X220 HTL/TTL/SSI encoder interface	232 233 233 234 235 236 237 238 239 240 240 241 241 243 243
6.4.1       Description         6.4.2       Safety Information         6.4.3       Interface description         6.4.3.1       Overview         6.4.3.2       X200 - X202 DRIVE-CLiQ interface         6.4.3.3       X224 electronics power supply         6.4.3.4       X210 EP terminals / temperature sensor         6.4.3.5       Description of the LEDs on the Control Unit Adapter CUA31         6.4.4       Dimension drawing         6.4.5       Mounting         6.4.6       Technical data         6.5       CUA32 Control Unit Adapter         6.5.1       Description         6.5.2       Safety Information         6.5.3       Interface description         6.5.3.1       Overview         6.5.3.2       X200 - X202 DRIVE-CLiQ interface         6.5.3.3       X224 electronics power supply         6.5.3.4       X220 HTL/TTL/SSI encoder interface         6.5.3.5       X210 EP terminals / temperature sensor	232 233 233 234 235 236 237 238 239 240 241 241 242 243 243
6.4.1 Description 6.4.2 Safety Information 6.4.3 Interface description 6.4.3.1 Overview 6.4.3.2 X200 - X202 DRIVE-CLiQ interface 6.4.3.3 X224 electronics power supply 6.4.3.4 X210 EP terminals / temperature sensor 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31 6.4.4 Dimension drawing 6.4.5 Mounting 6.4.6 Technical data 6.5 CUA32 Control Unit Adapter 6.5.1 Description 6.5.2 Safety Information 6.5.3 Interface description 6.5.3.1 Overview 6.5.3.2 X200 - X202 DRIVE-CLiQ interface 6.5.3.3 X224 electronics power supply 6.5.3.4 X220 HTL/TTL/SSI encoder interface 6.5.3.5 X210 EP terminals / temperature sensor 6.5.3.6 Description of the LEDs on the CUA32 Control Unit Adapter	232 233 234 235 236 237 238 239 240 241 241 242 243 245
6.4.1       Description         6.4.2       Safety Information         6.4.3       Interface description         6.4.3.1       Overview         6.4.3.2       X200 - X202 DRIVE-CLiQ interface         6.4.3.3       X224 electronics power supply         6.4.3.4       X210 EP terminals / temperature sensor         6.4.3.5       Description of the LEDs on the Control Unit Adapter CUA31         6.4.4       Dimension drawing         6.4.5       Mounting         6.4.6       Technical data         6.5       CUA32 Control Unit Adapter         6.5.1       Description         6.5.2       Safety Information         6.5.3       Interface description         6.5.3.1       Overview         6.5.3.2       X200 - X202 DRIVE-CLiQ interface         6.5.3.3       X224 electronics power supply         6.5.3.4       X220 HTL/TTL/SSI encoder interface         6.5.3.5       X210 EP terminals / temperature sensor	232 233 233 235 235 236 237 238 239 240 241 241 242 243 245 246

7	Supplen	nentary system components and encoder system integration	249
	7.1	Overview	249
	7.2	Basic Operator Panel BOP20	250
	7.2.1	Description	
	7.2.2	Interface description	
	7.2.3	Mounting	
	7.3	Sensor Module Cabinet-Mounted SMC10	254
	7.3.1	Description	254
	7.3.2	Safety Information	254
	7.3.3	Interface description	255
	7.3.3.1	Overview	255
	7.3.3.2	DRIVE-CLiQ interface X500	256
	7.3.3.3	X520 encoder system interface	256
	7.3.3.4	Electronics power supply X524	
	7.3.3.5	Significance of LEDs on the Sensor Module Cabinet-Mounted SMC10	
	7.3.4	Dimension drawing	259
	7.3.5	Installation	
	7.3.6	Technical data	261
	7.4	Sensor Module Cabinet-Mounted SMC20	263
	7.4.1	Description	
	7.4.2	Safety information	
	7.4.3	Interface description	
	7.4.3.1	Overview	
	7.4.3.2	DRIVE-CLiQ interface X500	
	7.4.3.3	X520 sensor system	
	7.4.3.4	Electronics power supply X524	
	7.4.3.5	Significance of LEDs on the Sensor Module Cabinet-Mounted SMC20	
	7.4.4	Dimension drawing	
	7.4.5	Mounting	
	7.4.6	Technical Specifications	
	7.5	Option modules, brake control	273
	7.5.1	Introduction	273
	7.5.2	Safe Brake Relay	273
	7.5.2.1	Safety Information	274
	7.5.2.2	Interface description	274
	7.5.2.3	Dimension drawing	276
	7.5.2.4	Mounting	277
	7.5.2.5	Technical data	279
8	Accesso	ories	281
	8.1	DRIVE-CLiQ cabinet gland	281
	8.1.1	Description	
	8.1.2	Safety Information	
	8.1.3	Interface description	
	8.1.3.1	Overview	
	8.1.4	Dimension drawing	
	8.1.5	Mounting	
	8.1.6	Technical data	
	8.2	DRIVE-CLiQ coupling	286
	8.2.1	Description	
	8.2.2	Safety Information	
	8.2.3	Interface description	
	00		

	8.2.3.1	Overview	
	8.2.4	Dimension drawing	
	8.2.5	Installation	
	8.2.6	Technical data	
	8.3	Screening Kit	
	8.3.1	Dimension drawings	
	8.3.2	Mounting	
9	Cabinet	design and EMC for components, Blocksize format	305
	9.1	Information	305
	9.1.1	General	305
	9.1.2	Safety information	306
	9.2	Selection of Devices Required for Operating SINAMICS	307
	9.2.1	General	
	9.2.2	Information about line disconnecting devices	
	9.2.3	Overcurrent protection using line fuses or circuit-breakers	
	9.2.4	Line filter	
	9.2.5	Line Contactors	
	9.3	24 V DC Supply Voltage	
	9.3.1	General	
	9.3.2	Selecting power supply units	
	9.3.3 9.3.4	24 V component current consumption	
	9.4	Arrangement of components and equipment	
	9.4.1 9.4.2	General Mounting Moun	
	• • • • • • • • • • • • • • • • • • • •	•	
	9.5	Information about Electromagnetic Compatibility (EMC) and Cable Routing	
	9.5.1	General	
	9.5.2 9.5.3	Cable Shielding and Routing Equipotential bonding	
	9.6	Connection Methods	
	9.6.1	Screw terminals	319
	9.7	Information on cabinet cooling	
	9.7.1	General	
	9.7.2	Ventilation	
	9.7.3	Power Loss of Components in Rated Operation	
10	Cooling	circuit and coolant properties	325
	10.1	Cooling circuit requirements	325
	10.1.1	Pressure	
	10.1.2	Installation	
	10.1.3	Preventing cavitation	
	10.1.4	Information about configuring cooling circuits	328
	10.2	Coolant requirements	332
	10.3	Anti-corrosion additives (inhibitors)	333
	10.4	Anti-freeze additives	333
	10.5	Biocide additives (only if required)	
	10.6	Anti-condensation measures	335

	10.7	Equipotential bonding	336
11	Service	and maintenance	337
	11.1	Safety information	337
	11.2	Spare parts	337
	11.3	Service and maintenance for components, Blocksize format	
	11.3.1	Replacing hardware components	
	11.3.2	Replacing the fan	338
	11.4	Service and maintenance for Chassis format components	343
	11.4.1	Maintenance	
	11.4.2	Installation equipment	
	11.4.3	Replacing components	
	11.4.3.1		
		Replacing the Powerblock, Power Module, frame size FX	
		Replacing the Powerblock, Power Module, frame size GX	
		Replacing the Control Interface Module, Power Module, frame size FX	
		Replacing the Control Interface Board, Power Module, frame size FX	
	11.4.3.6	Replacing the Control Interface Module, Power Module, frame size GX	362
	11.4.3.7	Replacing the Control Interface Board, Power Module, frame size GX	364
	11.4.3.8	Replacing the fan, Power Module, frame size FX	366
	11.4.3.9	Replacing the fan, Power Module, frame size GX	368
Α	Appendi	x A	371
	A.1	List of abbreviations	371
	Index		385

System overview

### 1.1 Field of application

SINAMICS is the new family of drives from Siemens for industrial machines and plant construction. SINAMICS offers solutions for all drive tasks:

- Simple pump and fan applications in the process industry.
- Complex individual drives in centrifuges, presses, extruders, elevators, as well as conveyor and transport systems.
- Drive line-ups in textile, plastic film, and paper machines, as well as in rolling mill plants.
- Highly dynamic servo drives for machine tools, as well as packaging and printing machines.

Depending on the application, the SINAMICS range offers the ideal version for any drive task.



Figure 1-1 SINAMICS applications

### 1.2 Platform concept and Totally Integrated Automation

All SINAMICS versions are based on a platform concept. Joint hardware and software components, as well as standardized tools for design, configuration, and commissioning tasks ensure high-level integration across all components. SINAMICS handles a wide variety of drive tasks with no system gaps. The different SINAMICS versions can be easily combined with each other.

SINAMICS is part of Siemens "Totally Integrated Automation". Integrated SINAMICS systems covering configuration, data storage, and communication at automation level ensure low-maintenance solutions with SIMATIC, SIMOTION, and SINUMERIK.

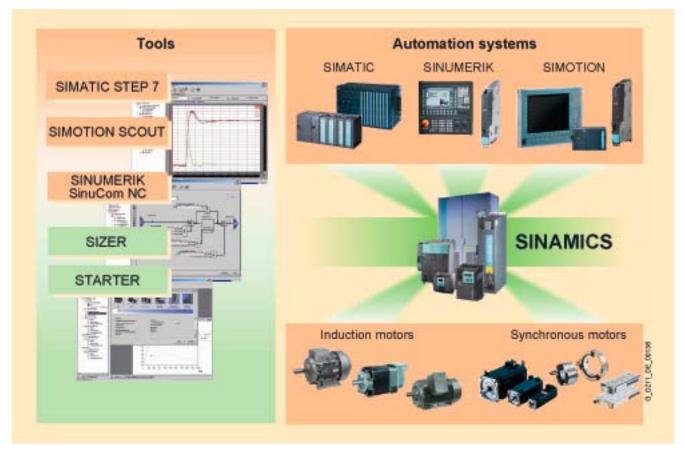


Figure 1-2 SINAMICS as part of the Siemens modular automation system

### 1.3 Overview, SINAMICS S120 AC Drive

SINAMICS S120 AC Drive is a modular drive system for individual axes and addresses sophisticated drive tasks for an extremely wide range of industrial applications.

Applications include:

- Machine concepts with a central drive (e.g. presses, printing, packaging)
- Modular machine concepts where the machine modules broken down to single axes
- Single-motor drives that when compared to standard drives have a high accuracy, stability and smooth running requirements in machinery and industrial plant construction
- Single-motor drives for transport applications (conveying, raising, lowering)
- Drives without regenerative feedback into the line supply (wire-drawing, extruding)
- Drive groups with high requirements placed on the availability (when the infeed fails, this may not cause all of the axes to fail)

The combination of a power unit (Power Module) and a Control Unit (CU) or a Control Unit Adapter form a single-motor drive in a compact design for machinery and plant construction.

SIZER, a high-performance engineering tool, makes it easier to choose and determine the optimum drive configuration. The drive can be simply commissioned a user-friendly fashion using the STARTER commissioning tool.

SINAMICS S120 AC Drive is supplemented by a wide range of motors. Whether synchronous or induction, whether rotary or linear motors, all motor types are supported by SINAMICS S120 AC Drive.

### 1.4 SINAMICS S120 components

This overview includes components from SINAMICS S120 AC Drive.



Figure 1-3 Component overview, SINAMICS S120 AC Drive

The following system components are available:

- Line-side power components, such as fuses, contactors, reactors and line filters for switching the power supply and complying with EMC regulations.
- Power Modules (either with or without integrated line filter) and an integrated braking chopper to provide power to the connected motor

To address the required functions, SINAMICS S120 AC Drive is equipped with:

- Control Units that provide the drive and technological functions.
- Supplementary system components that enhance functionality and offer different interfaces for encoders and process signals.

The SINAMICS S120 AC Drive components were developed for installation in cabinets.

They have the following features and characteristics:

- Easy to handle, simple installation and wiring
- Practical connection system, cable routing in accordance with EMC requirements
- Standard design

## 1.5 System data

Table 1- 1 General technical specifications

Electrical data	
Line supply voltage Blocksize format units	1-ph. 200 V to 240 V AC ±10 % 3-ph. 380 V to 480 V AC ±10 %
Built-in unit format units	3-ph. 380 V to 480 V AC ±10 % Above 2000 m installation altitude, refer to the characteristic for voltage de-rating.
Rated pulse frequency Blocksize format units Chassis format units	4 kHz 2 kHz At higher pulse frequencies, the associated characteristic for current de-rating must be taken into account.
Line frequency	47 Hz to 63 Hz
Output voltage Blocksize format units	0 V to rated line supply voltage at 3-ph. 380 V up to 480 V AC units, 0 V to 0.78 of the line supply voltage for 1-ph. 200 V to 240 V AC units.
Chassis format units	0 V to line supply voltage for 3-ph. 380 V to 480 V AC units.
Electronics power supply	24 V DC -15/+20 %*), safety extra-low voltage DVC A (PELV)
Short-circuit current rating SCCR in accordance with UL508C (up to 600 V)	<ul> <li>1.1 kW - 447 kW: 65 kA</li> <li>448 kW - 671 kW: 84 kA</li> <li>672 kW - 1193 kW: 170 kA</li> <li>≥ 1194 kW: 200 kA</li> <li>For chassis components, UL certification applies only in conjunction</li> </ul>
	with the fuses prescribed by Siemens and not with other types or circuit breakers alone.
Radio interference suppression acc. to EN 61800-3	Category C3 (standard) Category C2 (option) for systems implemented in conformance with the documentation
Overvoltage category	III acc. to EN 60664-1
Degree of pollution	2 acc. to 60664-1

<sup>\*)</sup> If a motor holding brake is used, restricted voltage tolerances may have to be taken into account (-2/+10 %).

Environmental conditions		
Note for the safety functions of Safety Integrated:		
The components must be protected against conductive pollution (e.g. by installing them in a cabinet with degree of protection IP54B acc. to EN 60529).  Provided that conductive pollution can be prevented at the installation site, the degree of protection for the cabinet can be decreased accordingly.		
Degree of protection IP20 or IPXXB to EN 60529, open type to UL 508		
Protective class line supply circuits Protective class electronic circuits	I (with protective conductor connection) III (safety extra-low voltage DVC A /PELV) acc. to EN 61800-5-1	
Type of cooling	Internal air cooling, power units with forced air cooling using an integrated fan	

Permissible cooling medium temperature (air) and installation altitude in operation	0 °C to +40 °C and up to 1000 m installation altitude without derating, >40 °C up to +55 °C, refer to the characteristic for current derating. Installation altitude >1000 m up to 4000 m, refer to the characteristic for current derating or reduce the ambient temperature by 3.5 K per 500 m.
Chemically active substances  • Long-term storage in the transport packaging	Class 1C2 to EN 60721-3-1
<ul> <li>Transport in the transport packaging</li> <li>Operation</li> </ul>	Class 3C2 to EN 60721-3-2 Class 3C2 to EN 60721-3-3
Biological environmental conditions:	
<ul><li>Storage in the transport packaging</li><li>Transport in the transport packaging</li></ul>	Class 1B1 to EN 60721-3-1 Class 2B1 to EN 60721-3-2
Operation	Class 3B1 to EN 60721-3-3
Vibratory load	
Long-term storage in the transport packaging	Class 1M2 acc. to EN 60721-3-1
<ul><li>Transport in the transport packaging</li><li>Operation</li></ul>	Class 2M3 acc. to EN 60721-3-2 Test values: 10 Hz to 58 Hz 0.075 mm; 58 Hz to 200 Hz 1 g
Shock load	
<ul> <li>Long-term storage in the transport packaging</li> <li>Transport in the transport packaging</li> </ul>	Class 1M2 acc. to EN 60721-3-1 Class 2M3 acc. to EN 60721-3-2
Operation	Test values: 15 g / 11 ms
Climatic ambient conditions	
Long-term storage in the transport packaging	Class 1K4 acc. to EN 60721-3-1 Temperature -25 °C to +55 °C
Transport in the transport packaging	Class 2K4 acc. to EN 60721-3-2
Operation	Temperature -40 °C to +70 °C Class 3K3 acc. to EN 60721-3-3 Temperature +0 °C to +40 °C
	Relative / absolute air humidity 5% to 90 % / 25 g/m <sup>3</sup> Oil mist, salt mist, formation of ice, moisture condensation, dripping, spraying, splashing water and water jets not permissible

Certificates		
Declarations of Conformity	CE (Low-Voltage and EMC Directive)	
Approvals	cULus	

### 1.6 Standards

Table 1-2 Essentially the application-relevant standards

Standards	Title
EN ISO 12100-1	Safety of Machinery; General Design Guidelines; Part 1: Basic terminology, methodology
EN ISO 12100-2	Safety of Machinery; General Design Guidelines; Part 2: Technical Principles and Specifications
EN 563	Safety of machinery; temperature of services that can be touched; ergonomic data to define temperature limit values for hot surfaces
EN 954-1 / ISO 13849-1	Safety of machinery; safety-related parts of control systems; Part 1: General Design Principles
EN 1037	Safety of machinery; avoiding unexpected starting
EN 60146-1-1	Semiconductor converters; general requirements and line-commutated converters; Part 1-1: Defining the basic requirements
EN 60204-1	Electrical equipment of machines; Part 1: General definitions
EN 60228	Conductors for cables and insulated conductors; guidelines for the limiting dimensions of round cables
EN 60269-1	Low-voltage fuses - Part 1: General requirements
IEC 60287-1 to -3	Cables - Calculation of the current carrying capacity Part 1: Current carrying capacity equations (100 % load factor) and calculating the losses Part 2: Thermal resistance - Part 3: Main sections for operating conditions
EN 60529	Degrees of protection provided by enclosures (IP code)
EN 60664-X	Insulation coordination for equipment within low-voltage systems Part 1: Principles, requirements and tests Part 3: Use of coating, potting or moulding for protection against pollution
EN 60721-3-X	Classification of environmental conditions Part 3-0: Classification of environmental parameters and their severities; Introduction Part 3-1: Classification of environmental parameters and their severities; Long-term storage Part 3-2: Classification of environmental parameters and their severities; Transport Part 3-3: Classification of environmental parameters and their severities; stationary use, weather protected
EN 61000-6-X	Electromagnetic compatibility (EMC) Part 6-1: Generic standard; Immunity for residential, commercial and light-industrial environments Part 6-2: Generic standards; Immunity for industrial environments Part 6-3: Generic standards; Generic standard emission for residential, commercial and light-industrial environments Part 6-4: Generic standards; Generic standard noise emission for industrial environments
EN 61140	Protection against electric shock; Common aspects for installation and equipment
EN 61158	Digital data communications for measurement and control - Fieldbus for use in industrial control systems
EN 61800-2	Adjustable-speed electrical power drive systems; Part 2: General requirements - Rating specifications for low-voltage adjustable frequency a.c. power drive systems
EN 61800-3	Adjustable-speed electrical power drive systems; Part 3: EMC - Requirements and specific test methods

Standards	Title
EN 61800-5-X	Adjustable-speed electrical power drive systems; Part 5: Safety requirements; Main section 1: Electrical, thermal and energy requirements Main section 2: Functional safety requirements
VDE 0100 Teil X (IEC 60364-X-X)	Erection of power installations with nominal voltages up to 1000 V; Part 200: Definitions Part 410: Protection for safety, protection against electric shock Part 420: Protection for safety, protection against thermal effects Part 430: Protection of cables and conductors for over-current Part 470: Protection for safety; use of protection for safety Part 450: Protection for safety, protection against undervoltage Part 5xx: Selecting and erecting electrical equipment Part 520: Wiring systems Part 540: Earthing, protective conductor, potential bonding conductor Part 560: Electrical equipment for safety purposes
DIN EN ISO 9001	Quality management systems - requirements
UL 50	Enclosures for Electrical Equipment
UL 508	Industrial Control Equipment
UL 508C	Safety for Power Conversion Equipment

1.6 Standards

Line-side power components

### 2.1 Introduction

The line connection for a SINAMICS blocksize drive line-up comprises an optional line reactor and an optional line filter:

- Line supply voltages:
  - 1-ph. 200 V to 1-ph. 240 V AC +/- 10%.
  - 3-ph. 380 V to 3-ph. 480 V AC +/- 10%.
- Line reactor versions:
  - 3 versions for frame sizes FSA FSC (chassis).
  - 5 versions for frame sizes FSD FSF (3 chassis and 2 standalone).
- Line filter versions:
  - Integrated
  - External
    - chassis
    - standalone

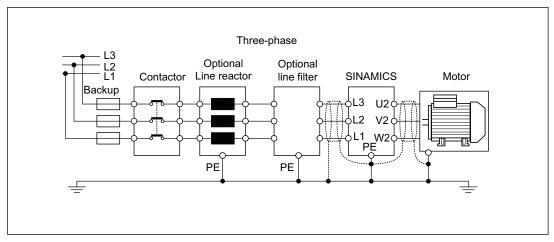


Figure 2-1 Example of a blocksize line connection

### 2.1 Introduction

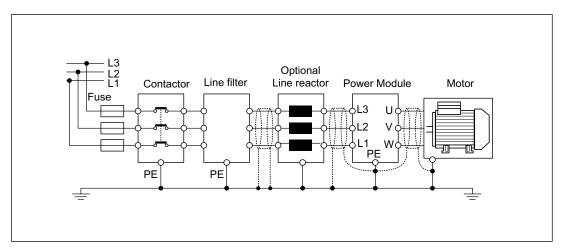


Figure 2-2 Example of a chassis line connection

#### Note

The limit values for the radio interference voltage are only complied with when a line reactor and a line filter, Category C2 acc. to EN 61800-3, are used.

### **CAUTION**

The following can occur if line reactors/line filters are used, which have not been approved for SINAMICS by SIEMENS:

- the Power Modules could be damaged/destroyed.
- Line reactions can occur that can damage or interfere with other loads powered from the same network.

### CAUTION

The Power Modules in blocksize format with line filters are only suitable for direct connection to TN line supplies.

### 2.2 Line connection variants

### 2.2.1 Methods of line connection

A distinction is made between:

- Direct operation of the line connection components on the supply
- Operation of the Line Connection Components via an Autotransformer
- Operation of the Line Connection Components via an Isolating Transformer

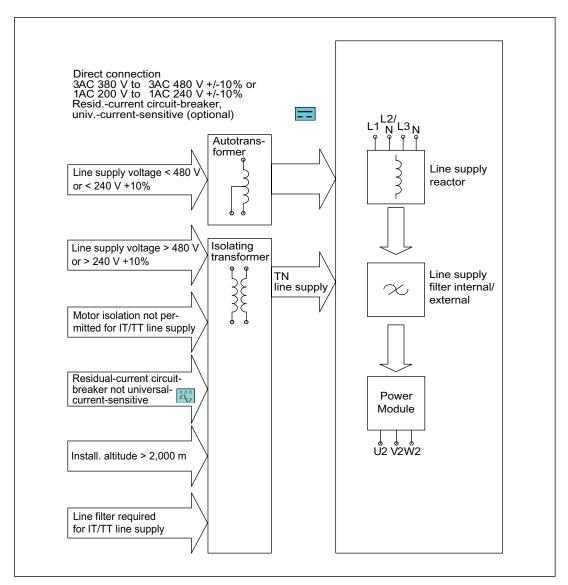


Figure 2-3 Overview of line connection variants

### 2.2.2 Operation of the Line Connection Components on the Supply Network

The SINAMICS S Blocksize drive system is designed to be directly connected to TN, TT line supply systems with grounded neutral conductor or grounded phase conductor as well as to IT line systems with rated voltages from 3-ph. 380 V to 480 V AC and 1-ph. 200 V to 240 V AC. Operation with line filter is only possible, without having to use additional measures, when connected to TN line supply systems with grounded neutral conductor.

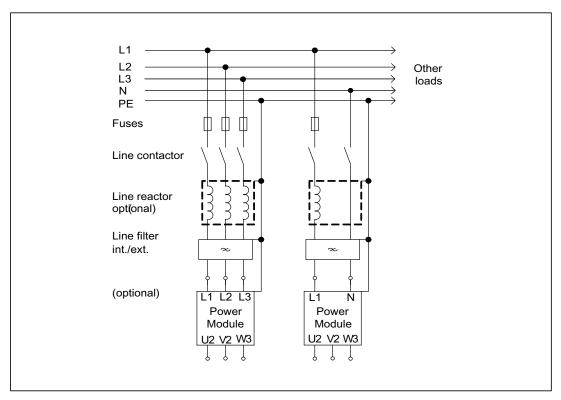


Figure 2-4 Direct operation on the line supply

### 2.2.3 Operation of the Line Connection Components via an Autotransformer

An autotransformer can be used to adapt the voltage in the range up to 3-ph. 480 V AC +10 % or 1-ph. 240 V AC +10 %.



To ensure protective separation, an isolating transformer must be used for voltages greater than 3-ph. 480 V AC +10 % and 1-ph. 240 V AC +10 %.

### Application example:

• The motor insulation must be protected from excessive voltages.

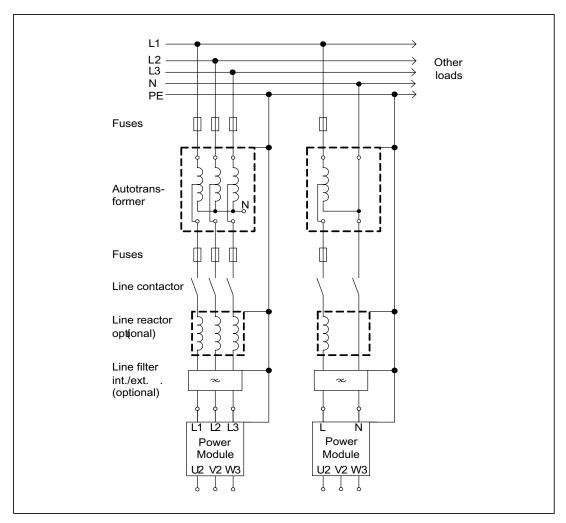


Figure 2-5 Autotransformer

### 2.2.4 Operation of the Line Connection Components via an Isolating Transformer

The isolating transformer converts the type of the line supply type in the plant (e.g. IT/TT line supply) to a TN line supply. Additional voltage adaptation to the permissible voltage tolerance range is possible.

An isolating transformer must be used in the following cases:

- The insulation of the Power Module and/or the motor is not adequate for the voltages that occur.
- There is no compatibility to an existing residual-current protective device.
- The installation altitude is greater than 2000 m above sea level.
- For all other systems that are not TN line supply systems with grounded neutral conductor, a line filter should always be used.

#### **CAUTION**

If the line supply voltage is greater than 3-ph. 480 V AC +10% or 1-ph. 240 V AC +10%, it is not permissible that an autotransformer is used.

In order to ensure protective separation, an isolating transformer must always be used.

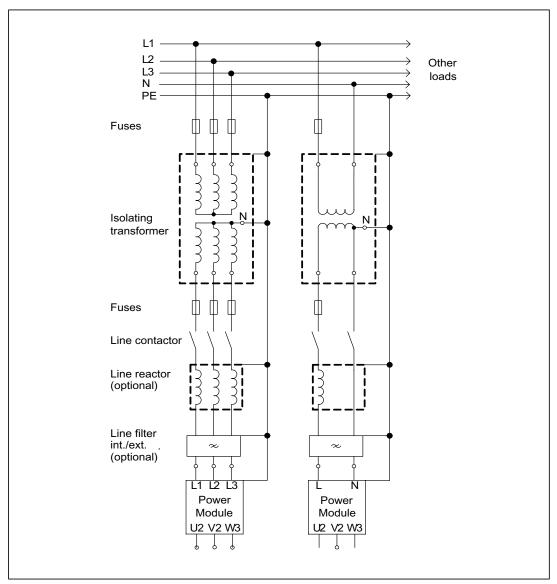


Figure 2-6 Isolating transformer

### 2.3 Line filter

#### 2.3.1 Description

In conjunction with line reactors and a consequential implementation of the plant/system configuration according to the EMC guidelines (Order No.: 6FC5297-0AD30-0\*P2), line filters limit the conducted interferences from Power Modules to permissible values for the industrial environment at the installation location.

\*A: German; \*B: English

#### Note

All PM340 Power Modules are available with and without an integrated line filter. Frame size FSA, 400 V, is an exception, as this always requires an external line filter.

#### 2.3.2 Safety information

### /!\DANGER

Line filters are suitable for direct connection to TN line supplies with grounded neutral conductor.

## /!\warning

The cooling clearances of 100 mm above and below the components must be observed. This prevents thermal overload of the line filter.

# / WARNING

The connections must not be interchanged:

- Incoming line cable to LINE/NETZ L1, L2, L3
- Outgoing cable to the line reactor to LOAD/LAST L1', L2', L3'

Non-observance may damage the line filter

# / CAUTION

Using line filters not released by Siemens AG for SINAMICS can lead to line reactions that can damage or destroy other loads powered from the network.

# 2.3.3 Dimension drawing, Blocksize

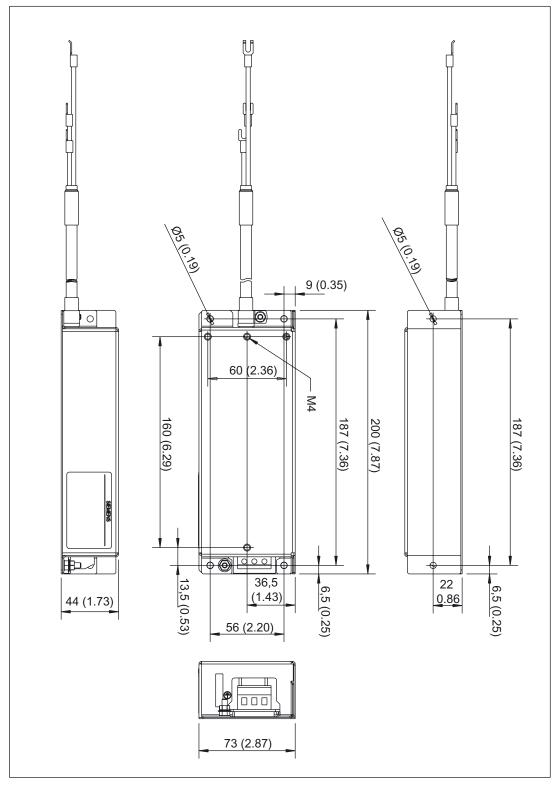


Figure 2-7 Dimension drawing: Line filter, frame size FSA

# 2.3.4 Dimension drawing, Chassis

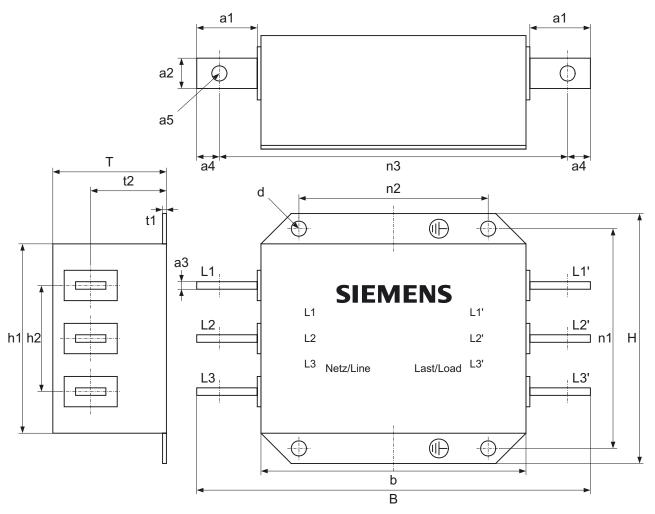


Figure 2-8 Dimension drawing, line filter

Table 2-1 Dimensions of the line filter, all data in mm and (inches)

6SL3000-	0BE32-5AA0	0BE34-4AA0	0BE36-0AA0
W	360 (14,17)	360 (14,17)	400 (15,74)
Н	240 (9,44)	240 (9,44)	265 (10,43)
D	116 (4,56)	116 (4,56)	140 (5,51)
a1	40 (1,57)	40 (1,57)	40 (1,57)
a2	25 (0,98)	25 (0,98)	25 (0,98)
a3	5 (0,19)	5 (0,19)	8 (0,31)
a4	15 (0,59)	15 (0,59)	15 (0,59)
a5	11 (0,43)	11 (0,43)	11 (0,43)
b	270 (10,62)	270 (10,62)	310 (12,20)
h1	200 (7,87)	200 (7,87)	215 (8,46)
h2	100 (3,93)	100 (3,93)	120 (4,72)
t1	2 (0,07)	2 (0,07)	3 (1,18)
t2	78,2 (3,07)	78,2 (3,07)	90 (3,54)
n1 ¹)	220 (8,66)	220 (8,66)	240 (9,44)
n2 <sup>1)</sup>	210 (8,26)	210 (8,26)	250 (9,84)
n3	330 (12,99)	330 (12,99)	370 (14,56)
d	9 (0,35)	9 (0,35)	12 (0,47)

<sup>1)</sup> Lengths n1 and n2 correspond to the distance between holes

### 2.3.5 Installation

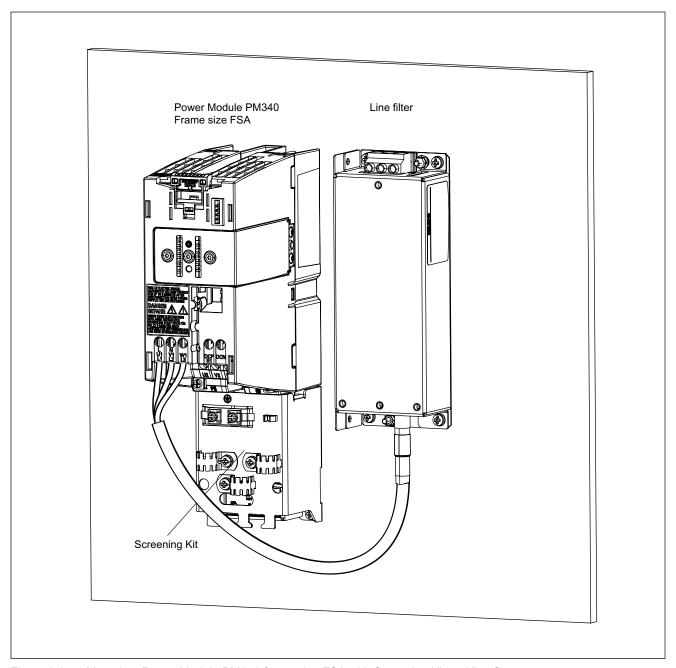


Figure 2-9 Mounting: Power Module PM340 frame size FSA with Screening Kit and line filter

## 2.3.6 Technical data, Blocksize line filter

Table 2- 2 Technical data, Blocksize line filter

Line supply voltage 3-ph. 380480	V AC			
Line filter 6SE6400-2FA00-6AD0				
Suitable for Power Module		6SL3210-1SE11-3UA0, 6SL3210-1SE11-7UA0 6SL3210-1SE12-2UA0, 6SL3210-1SE13-1UA0 6SL3210-1SE14-1UA0		
Rated current	Α	6		
Power loss	W	< 5		
Line supply connection L1, L2, L3		2.5 mm screw terminals <sup>2</sup>		
PE connection		At the housing with M4 stud		
Load connection U, V, W		Shileded cable 3 x 2.5 mm <sup>2</sup> 0.4 m long		
Degree of protection		IP20 or IPXXB		
Weight, approx.	kg	0.5		

### 2.3.7 Technical data, Chassis line filter

Table 2-3 Technical specifications, Chassis line filter

Order no.	6SL3000-	0BE32-5AA0	0BE34-4AA0	0BE34-4AA0	0BE34-4AA0	0BE36-0AA0
Suitable for Power Module	6SL3310-	1TE32-1AA0	1TE32-6AA0	1TE33-1AA0	1TE33-8AA0	1TE35-0AA0
Rated power of the Power Module	kW	110	132	160	200	250
Rated voltage	V	3-ph. 380 V A	C -10 % to 3-ph.	480 V AC +10 %	% (-15 % < 1 min	), 47 to 63 Hz
Rated current	Α	250	440	440	440	600
Power loss	kW	0,049	0,049	0,049	0,049	0,055
Line supply/load connection L1, L2, L3 / L1', L2', L3'		M10	M10	M10	M10	M10
PE connection		M8	M8	M10	M10	M10
Degree of protection		IP00	IP00	IP00	IP00	IP00
Dimensions Width Height Depth	mm mm mm	360 240 116	360 240 116	360 240 116	360 240 116	400 265 140
Weight	kg	12,3	12,3	12,3	12,3	19,0

#### 2.4 Line reactors

#### 2.4.1 Description

The line reactors limit lower-frequency harmonics that are fed back into the line supply. They are used to smooth voltage spikes (line supply faults) or to bridge voltage dips/interruptions when commutating. This is the reason that we recommend line reactors in conjunction with PM340 and Power Module Chassis.

#### 2.4.2 Safety information



The cooling clearances of 100 mm above and below the components must be observed.

#### Note

The connecting cables to the Power Module must be as short as possible (max. 5 m). If possible, they should be shielded.



The connections must not be interchanged:

- Incoming line cable to 1U1, 1V1, 1W1, and
- Outgoing cable to the load 1U2, 1V2, 1W2.

#### **CAUTION**

When using line reactors that have not been approved by SIEMENS for SINAMICS, the following can occur:

- the Power Modules could be damaged/destroyed.
- Line harmonics that may interfere with or damage other loads connected to the same line supply.



The surface temperature of the line reactors may exceed 80 °C.

# 2.4.3 Dimension drawings, Blocksize line reactors

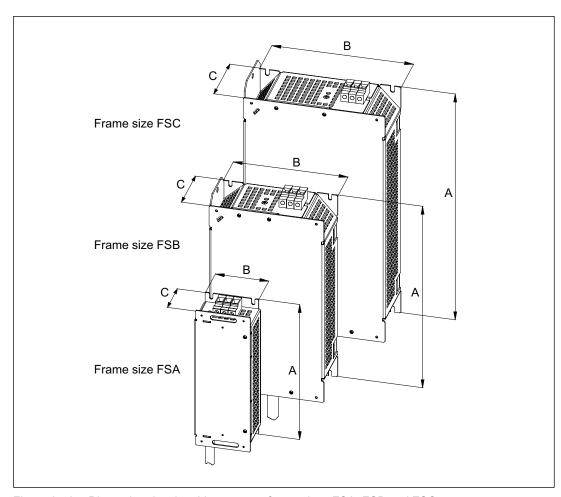


Figure 2-10 Dimension drawing: Line reactor, frame sizes FSA, FSB and FSC

Table 2-4 Total and retaining dimensions, line reactors, Part 1

Line reactor 6SE6400-	3CC00-4AB3	3CC01-0AB3	3CC00-2AD3	3CC00-4AD3	3CC00-6AD3
Suitable for Power Module 6SL3210-	1SB11-0xxx 1SB12-3xxx	1SB14-0xxx	1SE11-3UA0 1SE11-7UA0	1SE12-2UA0 1SE13-1UA0	1SE14-1UA0
Frame size	FSA				
Dimension A in mm and (inches)	200 (7,87)				
Dimension B in mm and (inches)	75 (2,95)				
Dimension C in mm and (inches)	50 (1,96)				

Table 2-5 Total and retaining dimensions, line reactors, Part 2

Line reactor	6SL3203-0CD21-0AA0	6SL3203-0CD21-4AA0		
Suitable for Power Module 6SL3210-	1SE16-0xxx 1SE17-7xxx	1SE21-0xxx		
Frame size	FSB			
Dimension A in mm and (inches)	270 (10, 62)			
Dimension B in mm and (inches)	153 (6,02)			
Dimension C in mm and (inches)	70 (2,75)			

Table 2- 6 Total and retaining dimensions, line reactors, Part 3

Line reactor 6SL3203-	0CD22-2AA0	0CD23-5AA0	
Suitable for Power Module 6SL3210-	1SE21-8xxx 1SE22-5xxx	1SE23-2xxx	
Frame size	FSC		
Dimension A in mm and (inches)	336 (13,22)	336 (13,22)	
Dimension B in mm and (inches)	189 (7,44)	189 (7,44)	
Dimension C in mm and (inches)	50 (1,96)	80 (3,14)	

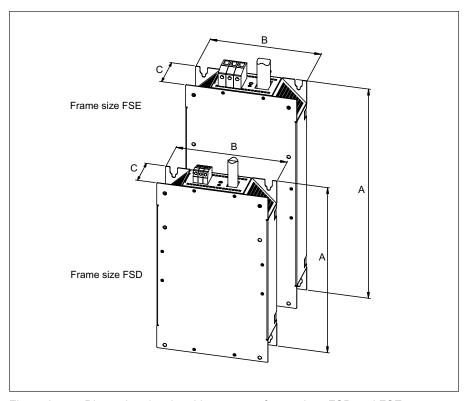


Figure 2-11 Dimension drawing: Line reactor, frame sizes FSD and FSE

### 2.4 Line reactors

Table 2-7 Total and retaining dimensions, line reactor

Line reactor 6SL3203-	0CJ24-5AA0 0CD25-3AA0		0CJ28-6AA0
Suitable for Power Module 6SL3210-	1SE23-8xxx 1SE24-5xxx	1SE26-0xxx	1SE27-5xxx 1SE31-0xxx
Frame size	FS	FSE	
Dimension A in mm and (inches)	455 (1	577 (22,71)	
Dimension B in mm and (inches)	275 (1	275 (10,82)	
Dimension C in mm and (inches)	83,5 (	93,5 (3,68)	

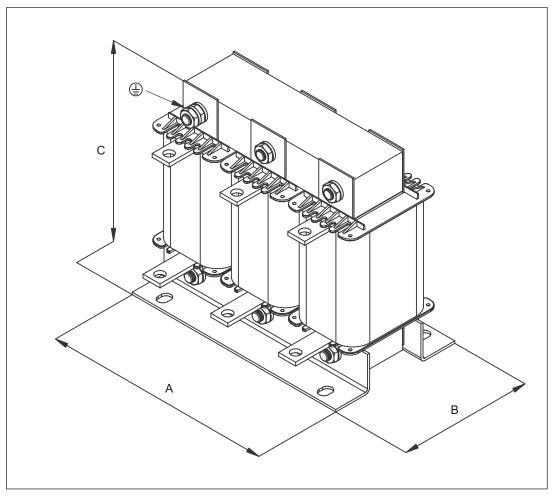


Figure 2-12 Dimension drawing: Line reactor, frame size FSF

Table 2-8 Total and retaining dimensions, line reactor

Line reactor 6SE6400-	3CC11-2FD0	3CC11-7FD0		
Suitable for Power Module 6SL3210-	1SE31-1xxx 1SE31-5xxx	1SE31-8xxx		
Frame size	FSF			
Dimension A in mm and (inches)	240 (9,44)			
Dimension B in mm and (inches)	141 (5,55)			
Dimension C in mm and (inches)	228 (8,97)			

# 2.4.4 Dimension drawing, Chassis line reactor

### Dimension drawing of the line reactors

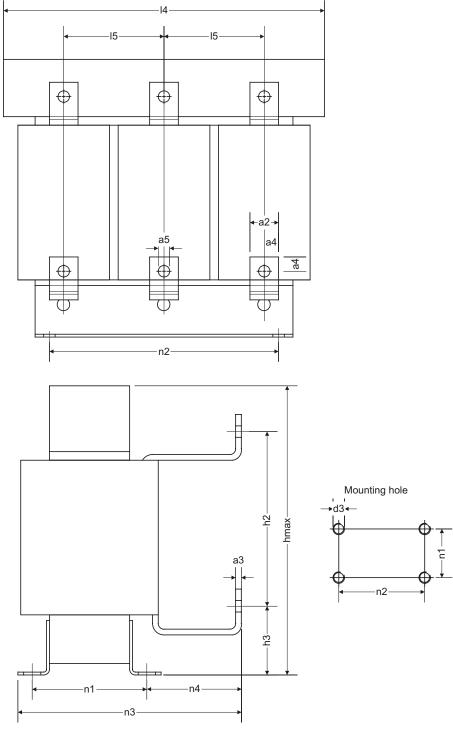


Figure 2-13 Dimension drawing, line reactors

Table 2-9 Dimensions of the line reactors, all data in mm and (inches)

6SL3000-	0CE32-3AA0	0CE32-8AA0	0CE33-3AA0	0CE35-1AA0
a2	25 (0,98)	25 (0,98)	25 (0,98)	30 (1,18)
a3	5 (0,19)	5 (0,19)	5 (0,19)	6 (0,23)
a4	12,5 (0,49)	12,5 (0,49)	12,5 (0,49)	15 (0,59)
a5	11 (0,43)	11 (0,43)	11 (0,43)	14 (0,55)
14	270 (10,62)	270 (10,62)	270 (10,62)	300 (11,81)
15	88 (3,46)	88 (3,46)	88 (3,46)	100 (3,93)
hmax	248 (9,76)	248 (9,76)	248 (9,76)	269 (10,59)
h2	150 (5,90)	150 (5,90)	150 (5,90)	180 (7,08)
h3	60 (2,36)	60 (2,36)	60 (2,36)	60 (2,36)
n1 <sup>1)</sup>	101 (3,97)	101 (3,97)	101 (3,97)	118 (4,64)
n2 <sup>1)</sup>	200 (7,87)	200 (7,87)	200 (7,87)	224 (8,81)
n3	200 (7,87)	200 (7,87)	200 (7,87)	212,5 (8,36)
n3	84,5 (3,32)	84,5 (3,32)	84,5 (3,32)	81 (3,19)
d3	M8	M8	M8	M8

<sup>1)</sup> Lengths n1 and n2 correspond to the distance between holes

### 2.4.5 Installation

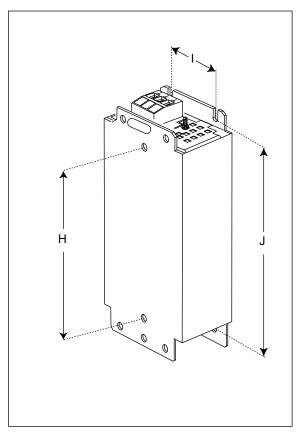


Figure 2-14 Mounting: Line reactor, frame size FSA

Table 2- 10 Overall and retaining dimensions, line reactor, Part 1, all data in mm and (inches)

Line reactors 6SE6400-	3CC00-4AB3	3CC01-0AB3	3CC00-2AD3	3CC00-4AD3	3CC00-6AD3		
Suitable for Power Module 6SL3210-	1SB11-0UA0 1SB11-0AA0 1SB12-3UA0 1SB12-3AA0	1SB14-0UA0 1SB14-0AA0	1SE11-3UA0 1SE11-7UA0	1SE12-2UA0 1SE13-1UA0	1SE14-1UA0		
Frame size		FSA					
Н		160 (6,29)					
I		56 (2,20)					
J		187 (7,36)					
		Retaining screw M4 / 1.1 Nm Cable cross-section: 1.0 - 2 mm²).					

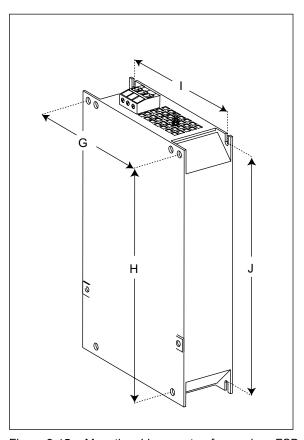


Figure 2-15 Mounting: Line reactor, frame sizes FSB and FSC

Table 2- 11 Total and retaining dimensions, line reactor, Part 2, all data in mm and (inches)

Line reactors 6SL3203-	0CD21-0AA0	0CD21-4AA0	0CD22-2AA0	0CD22-2AA0	0CD23-5AA0
Suitable for Power Module 6SL3210-	1SE16-0UA0 1SE16-0AA0 1SE17-7UA0 1SE17-7AA0	1SE21-0UA0 1SE21-0AA0	1SE21-8UA0 1SE21-8AA0 1SE22-5UA0 1SE22-5AA0	1SE21-8UA0 1SE21-8AA0 1SE22-5UA0 1SE22-5AA0	1SE23-2UA0 1SE23-2AA0
Frame size		FSB			SC
G	133 (5.24)			174 (	(6,85)
Н	258 (10.16)			204 (	(8,03)
İ	133 (5.24)			156 (	(6,14)
J	258 (10.16)			232 (	(9,13)
	Retaining screw M4 / 1.5 Nm Cable cross-section: 1.5 - 6 mm²).				w M5 / 2.25 Nm on: 2.5 - 10 mm²).

### 2.4 Line reactors

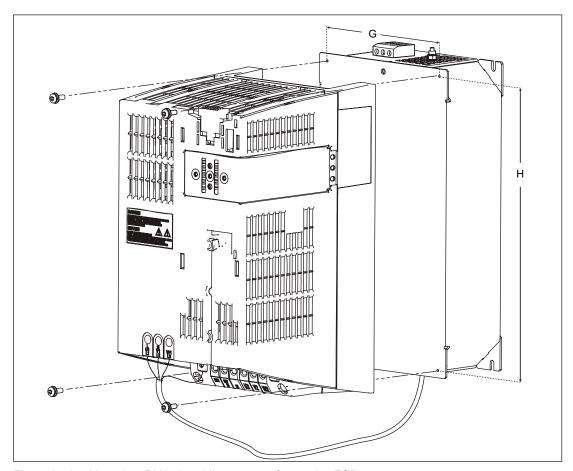


Figure 2-16 Mounting: PM340 and line reactor, frame size FSB

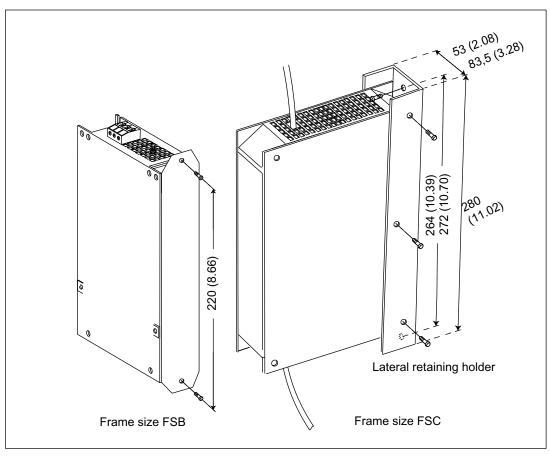


Figure 2-17 Side mounting: Line reactors, frame sizes FSB and FSC

The line reactors for Power Modules, frame sizes FSA - FSE, are designed as sub-chassis components.

The line reactor is retained on the mounting surface and the Power Module is mounted on the line reactor in a space-saving fashion. The cables to the Power Modules are already connected at the line reactor.

The line reactor is connected to the line supply through terminals.

The reactors for Power Modules, frame sizes F, FX and GX are, as a result of their weight and their size, separately mounted.

### 2.4.6 Electrical Connection

### Line supply/load connection

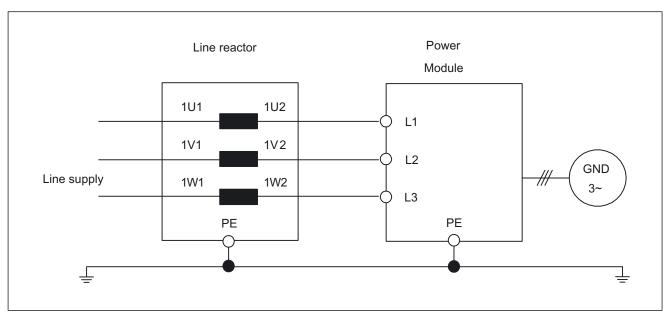


Figure 2-18 Power Module with line filter

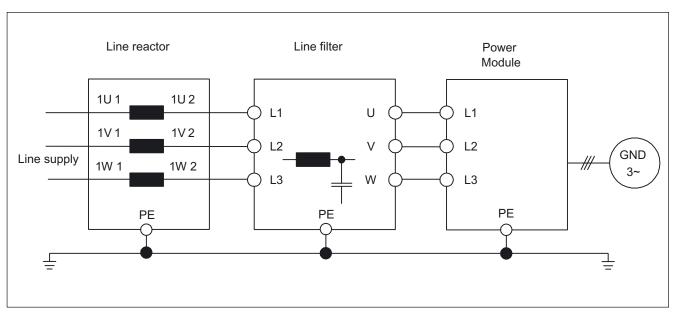


Figure 2-19 Power Module Blocksize with line reactor and line filter

# 2.4.7 Technical data, Blocksize

Table 2- 12 Technical data, blocksize line reactors, Part 1

Line supply voltage 1-	Line supply voltage 1-ph 200 V AC -10 % to 240 V AC +10%				
Order No. 6SE6400-		3CC00-4AB3	3CC01-0AB3		
Suitable for Power Module 6SL3210-		1SB11-0xxx 1SB12-3xxx	1SB14-0xxx		
Rated line reactor current	Α	3,4	8,1		
Power loss 50 / 60 Hz	W	12,5 / 15	11,5 / 14,5		
Line supply connection U1, V1, W1		6 mm screw terminals <sup>2</sup>	6 mm screw terminals <sup>2</sup>		
Load connection 1U2, 1V2, 1W2		Cable 3 x 1.5 mm <sup>2</sup>	Cable 3 x 1.5 mm <sup>2</sup>		
PE connection		M5 stud	M5 stud		
Degree of protection		IP20 or IPXXB	IP20 or IPXXB		
Weight	kg	1,3	1,3		

Table 2- 13 Technical data, Blocksize line reactors, Part 2

Line supply voltage 3-ph 380 V AC -10 % to 480 V AC +10 %						
Order No.		6SE6400- 3CC00-2AD3	6SE6400- 3CC00-4AD3	6SE6400- 3CC00-6AD3	6SL3203- 0CD21-0AA0	
Suitable for Power Module 6SL3210-		1SE11-3UA0 1SE11-7UA0	1SE12-2UA0 1SE13-1UA0	1SE14-1UA0	1SE16-0xxx 1SE17-7xxx	
Rated line reactor current	Α	1,9	3,5	4,8	9	
Power loss 50 / 60 Hz	W	6 / 7	12,5 / 15	7,5 / 9	9 / 11	
Line supply connection U1, V1, W1		6 mm screw terminals <sup>2</sup>	6 mm screw terminals <sup>2</sup>	6 mm screw terminals <sup>2</sup>	6 mm screw terminals <sup>2</sup>	
Load connection 1U2, 1V2, 1W2		Cable 4 x 1.5 mm <sup>2</sup> Length approx. 0.38 m	Cable 4 x 1.5 mm <sup>2</sup> Length approx. 0.38 m	Cable 4 x 1.5 mm <sup>2</sup> Length approx. 0.38 m	Cable 4 x 1.5 mm <sup>2</sup> Length approx. 0.46 m	
PE connection		At the housing with M5 stud	At the housing with M5 stud	At the housing with M5 stud	At the housing with M5 stud	
Degree of protection		IP20 or IPXXB	IP20 or IPXXB	IP20 or IPXXB	IP20 or IPXXB	
Weight	kg	1,2	1,3	1,3	3,4	

#### 2.4 Line reactors

Table 2- 14 Technical data, Blocksize line reactors, Part 3

Line supply voltage 3-ph 380 V AC -10 % to 480 V AC +10 %						
Order No. 6SL3203-		0CD21-4AA0	0CD22-2AA0	0CD23-5AA0	0CJ24-5AA0	
Suitable for Power Module 6SL3210-		1SE21-0xxx	1SE21-8xxx 1SE22-5xxx	1SE23-2xxx	1SE23-8xxx 1SE24-5xxx	
Rated line reactor current	А	11,6	25	31,3	54	
Power loss 50 / 60 Hz	W	27 / 32	98 / 118	37 / 44	90 / 115	
Line supply connection U1, V1, W1		6 mm screw terminals <sup>2</sup>	6 mm screw terminals <sup>2</sup>	6 mm screw terminals <sup>2</sup>	16 mm screw terminals <sup>2</sup>	
Load connection 1U2, 1V2, 1W2		Cable 4 x 1.5 mm <sup>2</sup> Length approx. 0.46 m	Cable 4 x 2.5 mm <sup>2</sup> Length approx. 0.49 m	Cable 4 x 2.5 mm <sup>2</sup> Length approx. 0.49 m	Cable 4 x 16 mm <sup>2</sup> Length approx. 0.70 m	
PE connection		At the housing with M5 stud	At the housing with M5 stud	At the housing with M5 stud	At the housing with M8 screw	
Degree of protection		IP20 or IPXXB	IP20 or IPXXB	IP20 or IPXXB	IP20 or IPXXB	
Weight	kg	3,4	6,3	6,4	13	

Table 2- 15 Technical data, blocksize line reactors, Part 4

Line supply voltage 3-ph 380 V AC -10 % to 480 V AC +10 %						
Order No.		6SL3203- 0CD25-3AA0	6SL3203- 0CJ28-6AA0	6SE6400- 3CC11-2FD0	6SE6400- 3CC11-7FD0	
Suitable for Power Module 6SL3210-		1SE26-0xxx	1SE27-5xxx 1SE31-0xxx	1SE31-1xxx 1SE31-5xxx	1SE31-8xxx	
Rated line reactor current	А	71	105	178	225	
Power loss 50 / 60 Hz	W	90 / 115	170 / 215	280 / 360	280 / 360	
Line supply connection U1, V1, W1		16 mm screw terminals <sup>2</sup>	50 mm screw terminals <sup>2</sup>	Flat connector for M10 cable lug	Flat connector for M10 cable lug	
Load connection 1U2, 1V2, 1W2		Cable 4 x 16 mm <sup>2</sup> Length approx. 0.70 m	Cable 4 x 35 mm <sup>2</sup> Length approx. 0.70 m	Flat connector for M10 cable lug	Flat connector for M10 cable lug	
PE connection		At the housing with M8 screw	At the housing with M8 screw	On housing with M8 bolt	On housing with M8 bolt	
Degree of protection		IP20 or IPXXB	IP20 or IPXXB	IP00	IP00	
Weight	kg	13	19	25	25	

# 2.4.8 Technical data, Chassis

Table 2- 16 Technical specifications, Chassis line reactors

Order no.	6SL3000-	0CE32-3AA0	0CE32-8AA0	0CE33-3AA0	0CE35-1AA0	0CE35-1AA0
Suitable for Power Module	6SL3310-	1TE32-1AA0	1TE32-6AA0	1TE33-1AA0	1TE33-8AA0	1TE35-0AA0
Rated current of the Power Module	А	210	260	310	380	490
Rated voltage	V	3-ph. 380 V AC -10% to 3-ph. 480 V AC +10% (-15% < 1 min), 47 to 63 Hz				
I <sub>thmax</sub>	Α	224	278	331	508	508
Power loss	kW	0,274	0,247	0,267	0,365	0,365
Line supply/load connection		M10 connecting lugs	M10 connecting lugs	M10 connecting lugs	M12 connecting lugs	M12 connecting lugs
PE connection		M6 screw	M6 screw	M6 screw	M6 screw	M6 screw
Degree of protection		IP00	IP00	IP00	IP00	IP00
Weight	kg	24,5	26	27,8	38	38

2.4 Line reactors

Power Modules 3

## 3.1 Power Modules Blocksize (PM340)

### 3.1.1 Description

The Power Modules in blocksize format are designed as follows:

- · Line side diode rectifier
- DC link electrolytic capacitors with pre-charging circuit
- Output inverter
- Braking chopper for (external) braking resistor
- Power supply 24 V DC / 1 A
- Gating unit, actual value sensing
- Fan to cool the power semiconductors

The Power Modules cover the power range from 0.12 kW to 90.0 kW and are available in versions with and without line filter.

Table 3-1 Overview, Power Modules PM340 (selection)



Power Module (230 V) frame size FSA, with and without integrated line filter

Power Module (400 V) frame size FSA, without integrated line filter



Power Module frame size FSB, with and without integrated line filter



### 3.1.2 Safety information



During transport and during storage, Power Modules must be protected against mechanical shock and vibration. It is also important to protect the unit against water (rain) and against excessively high/excessively low temperatures.

#### Note

#### Connection authorization

Power Modules have been designed for use in the industrial environment and generate current harmonics on the line side as a result of the rectifier circuit.

When connecting a machine with integrated Power Modules to the public low-voltage line supply, authorization is required in advance from the local power supply company (utility company) if

- the rated input current of the motor ≤ 16 A per conductor, and
- the rated input current of the motor does not comply with the requirements specified in EN 61000-3-2 regarding current harmonics.

### DANGER

#### Grounding/protective grounding of the Power Module

The Power Module housing must always be grounded. If the Power Module is not correctly grounded, then extremely hazardous states can occur, which under certain circumstances, can result in death.

# DANGER

It must be checked as to whether the Power Module is designed for the correct power supply - higher supply voltages may not be connected to the Power Module.

# /!\DANGER

After connecting the line and motor feeder cables to the appropriate terminals, check that the front covers (only frame sizes FSD to FSF) are closed and latched. Only then may the Power Module be connected to the power supply.

#### **NOTICE**

For a UL-approved system use UL-approved copper conductors only.

## DANGER

Once all the supply voltages have been disconnected, a hazardous voltage may be present in the power unit for up to 5 minutes. The cover for the terminals may only be opened after this time has definitely elapsed.

When opening the protective cover, you must activate the release. A suitable tool (e.g. screwdriver) must be used for this purpose.

Damaged components must not be used, otherwise this could result in secondary damage or accidents.

## DANGER

The hazard warning in the local language for the DC link discharge time must be affixed to the component. A set of labels in 16 languages is provided with the component.

## DANGER

The drive components generate high leakage currents in the protective conductor. The components must only be operated in cabinets or in closed electrical operating areas and must be connected with the protective conductor. To protect against electric shock, the protective conductor connection on the cabinet or machine must be implemented in accordance with one of the following measures:

- stationary connection and protective conductor connection by means of ≥ 10 mm<sup>2</sup> Cu or
   ≥ 16 mm<sup>2</sup> Al
- stationary connection and automatic shutdown of the power supply if the protective conductor is interrupted

# /!\warning

Power Modules must be mounted in the vertical position.

For the Power Modules, the following cooling clearances must be maintained above and below the component:

- frame sizes FSA and FSB: 100 mm (3.93 inches),
- frame size FSC: 125 mm (4.92 inches),
- frame sizes FSD and FSE: 300 mm (11.81 inches) and
- frame size FSF: 350 mm (13.77 inches).

When mounting the Power Modules, the following clearances must be maintained between the components:

- frame size FSB: 40 mm (1.57 inches)
- frame size FSC: 50 mm (1.96 inches)

Devices, that could restrict the cooling air flow may not be mounted/installed in this area. It must be carefully ensured that the cooling air flow of the Power Modules can flow unrestricted.

#### Note

Power Modules of frame sizes FSA, FSD, FSE and FSF can be mounted without any lateral clearance.

## /!\DANGER

Cable shields and unused power cable conductors (e.g. brake conductors) must be connected to PE potential to prevent capacitive cross-talk charges.

Non-observance can cause lethal shock voltages.

### 3.1.3 Interface description

#### 3.1.3.1 Overview

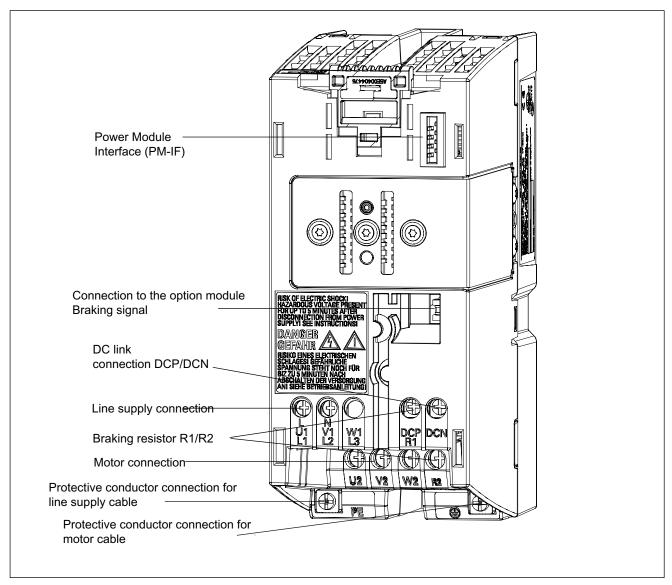


Figure 3-1 PM340, frame size FSA

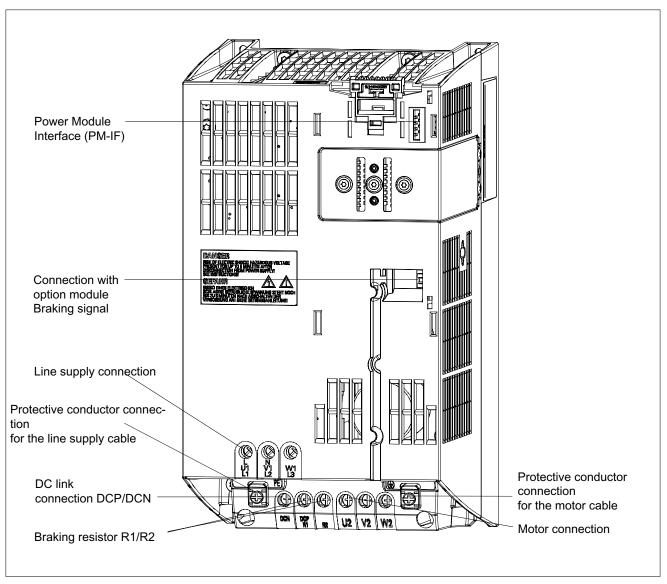


Figure 3-2 PM340, frame size FSB

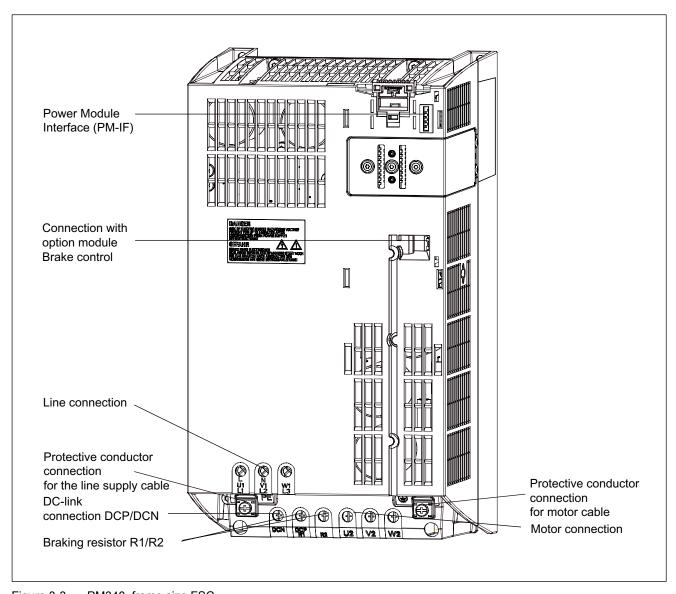


Figure 3-3 PM340, frame size FSC

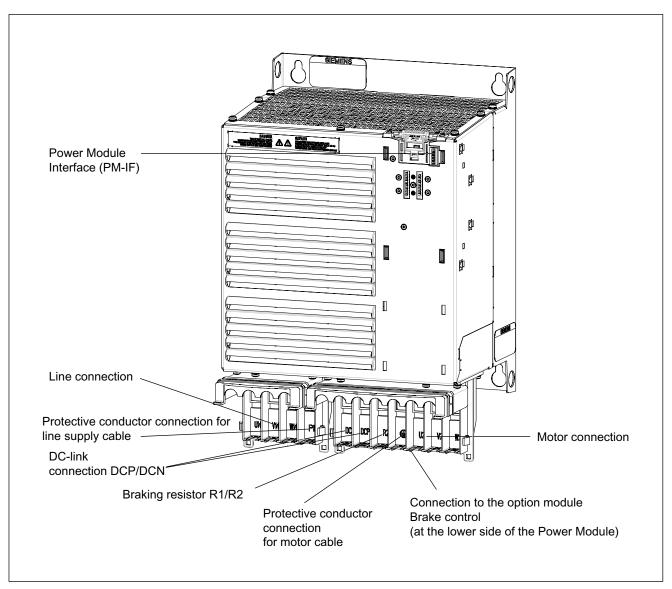


Figure 3-4 PM340, frame size FSD

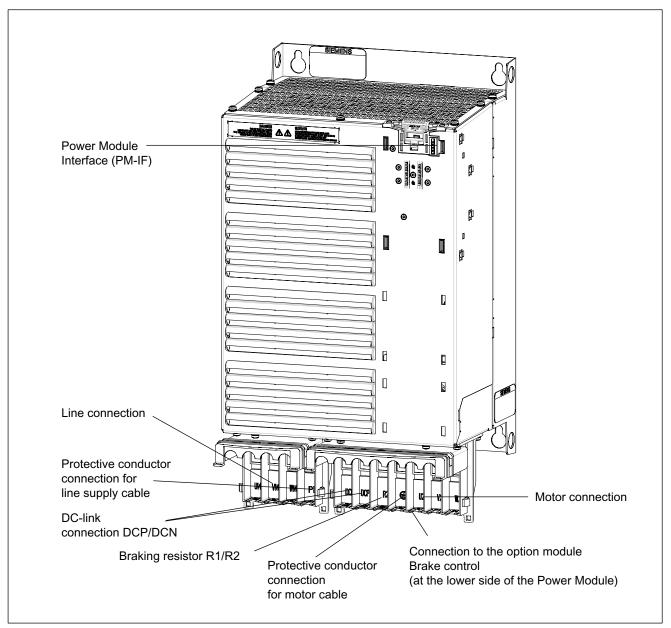


Figure 3-5 PM340, frame size FSE

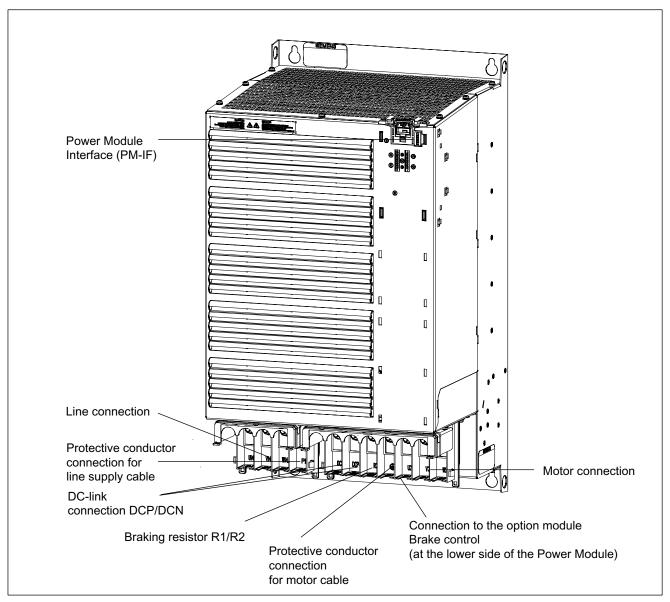


Figure 3-6 PM340, frame size FSF

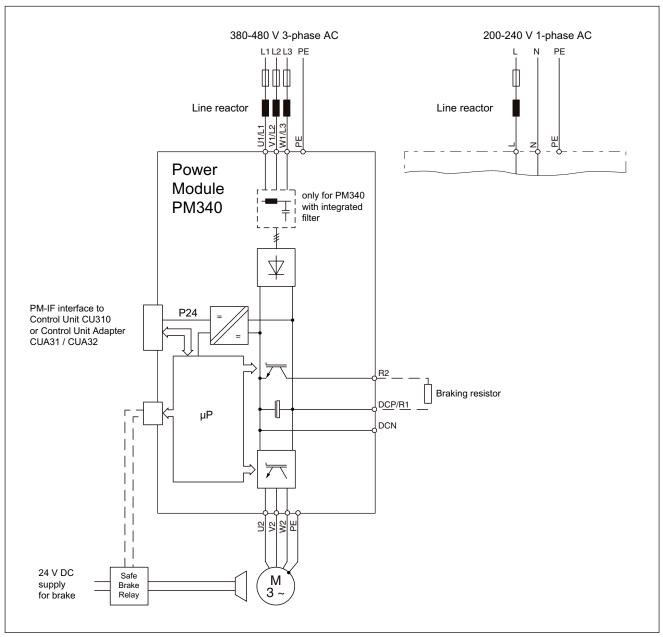


Figure 3-7 PM340 connection example

#### Arrangement of the line supply and motor terminals.

The following diagram shows the arrangement of the line and motor terminals for frame sizes FSA to FSF of the PM340 Power Module. The diagram also includes the terminal tightening torques.

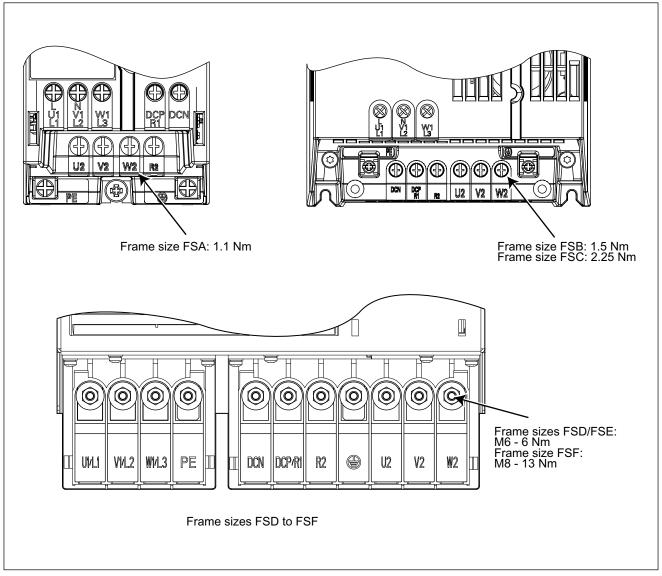


Figure 3-8 Arrangement of the line supply and motor terminals for the PM340

## 3.1.3.2 Line supply connection

Table 3-2 Terminal strip, line supply connection 1-ph. 200 V - 240 V AC

	Terminal	Signal name	Technical specifications				
	1	L	Line phase L				
L N V1 L1 L2	2	N	Line phase N				
Max. conductor cross-section: 2.5 mm	Max. conductor cross-section: 2.5 mm <sup>2</sup>						

Table 3-3 Terminal strip, line supply connection 3-ph. 380 V - 480 V AC

	Terminal	Signal name	Technical specifications
	1	U1/L1	External conductor L1
	2	V1/L2	External conductor L2
	3	W1/L3	External conductor L3
UA1 WA2 WA3 PE	4	PE	PE connection

### 3.1.3.3 Braking resistor and DC link connection

Table 3-4 Terminal strip, braking resistor, and DC link connection


	Terminal	Technical specifications
	DCN	DC link negative
	DCP/R1	DC link positive and positive connection for braking resistor
DON DOPAN R2	R2	Negative connection for the braking resistor

#### Note

To connect the cable lugs of the brake resistor cable to a PM340 Power Module frame size FSA it is necessary to nip the lug on connection R2 off using a diagonal cutter tool. Take great care to ensure that no pieces of plastic fall into the housing.

#### 3.1.3.4 Motor connection

Table 3-5 Terminal strip, motor connection 200 V - 240 V 1 AC and 380 V - 480 V 3 AC

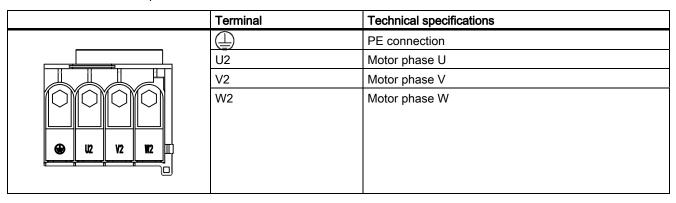

#### 3.1.3.5 Connection to the option module, brake control

Table 3-6 Connector

Terminal	Designation	Technical specifications
 1	Low	Low signal, option module brake control at PM340
2	High	High signal, option module brake control at PM340

## 3.1.4 Dimension drawings

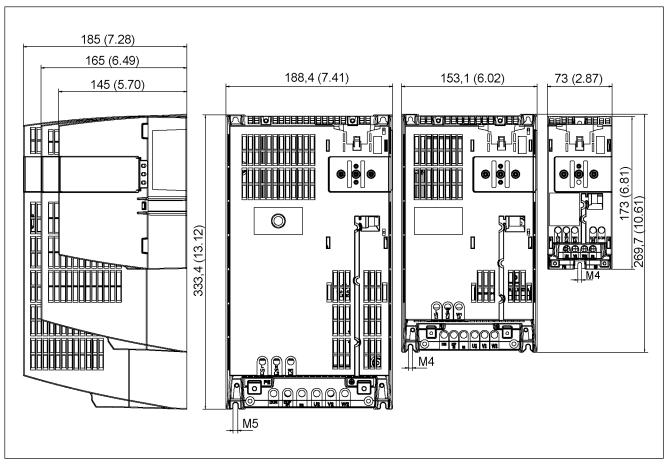


Figure 3-9 Dimension drawings, Power Module PM340

Frame size FSB Frame size FSA Frame size

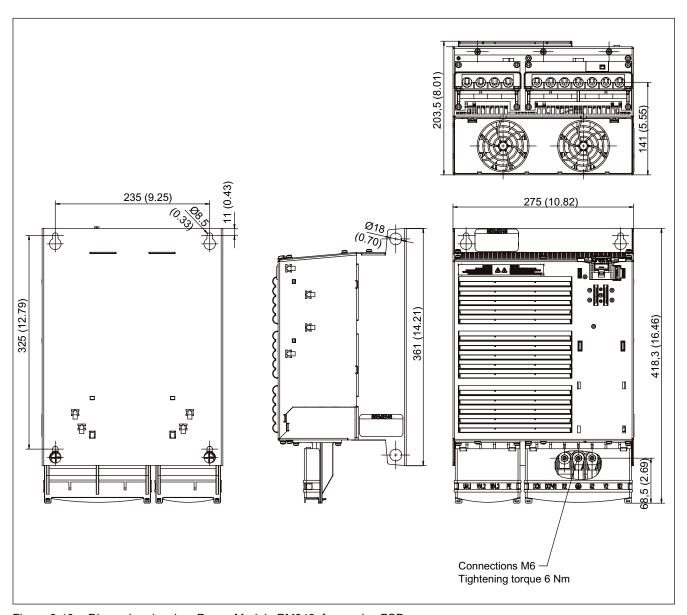


Figure 3-10 Dimension drawing: Power Module PM340, frame size FSD

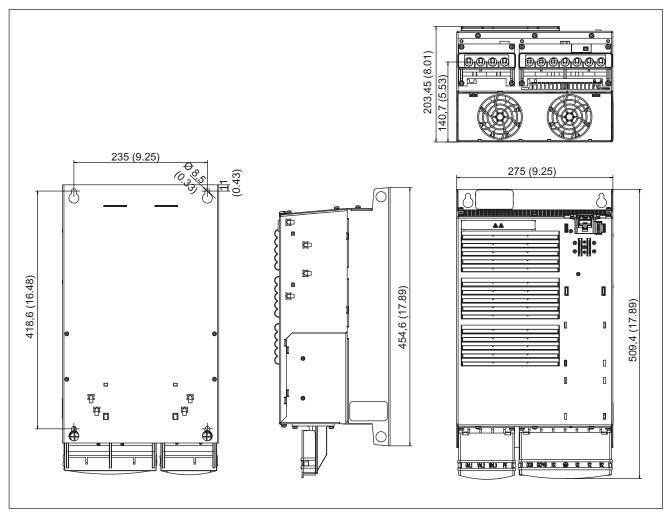


Figure 3-11 Dimension drawing: Power Module PM340 with integrated line filter, frame size FSD

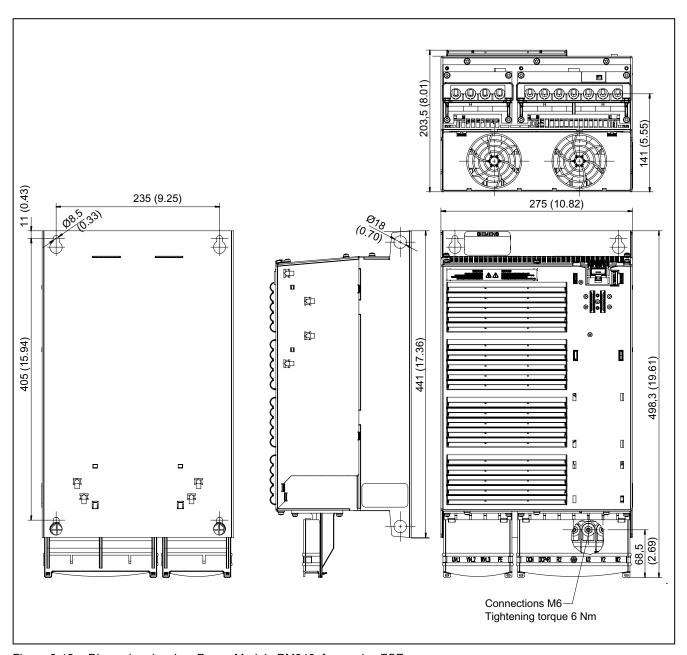


Figure 3-12 Dimension drawing: Power Module PM340, frame size FSE

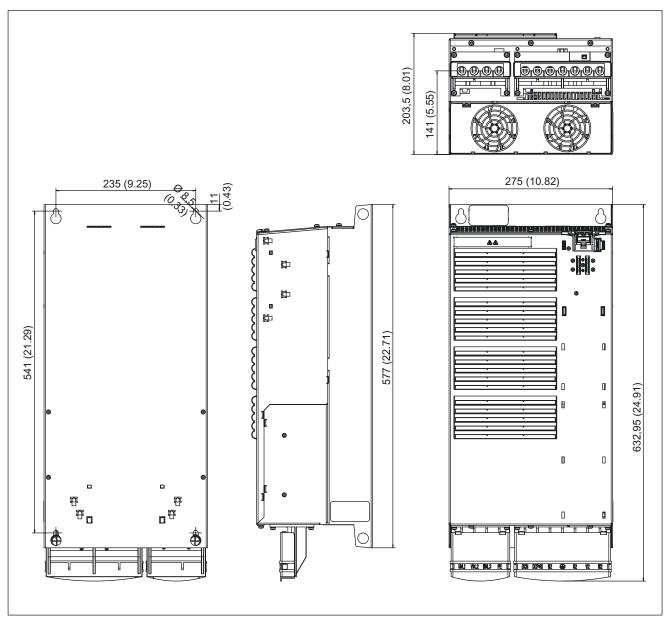


Figure 3-13 Dimension drawing: Power Module PM340 with integrated line filter, frame size FSE

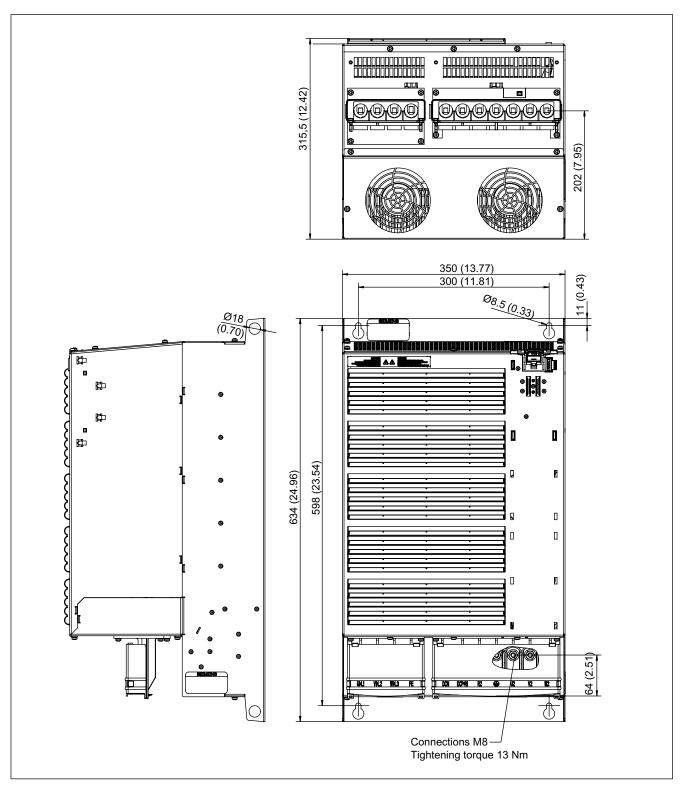


Figure 3-14 Dimension drawing: Power Module PM340, frame size FSF

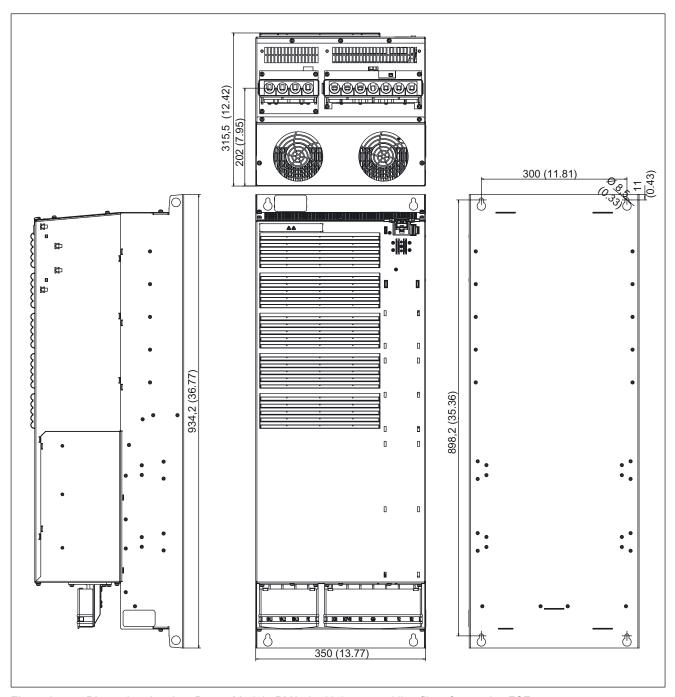


Figure 3-15 Dimension drawing: Power Module PM340 with integrated line filter, frame size FSF

# 3.1.5 Mounting

## Drilling templates for frame sizes FSA and FSC

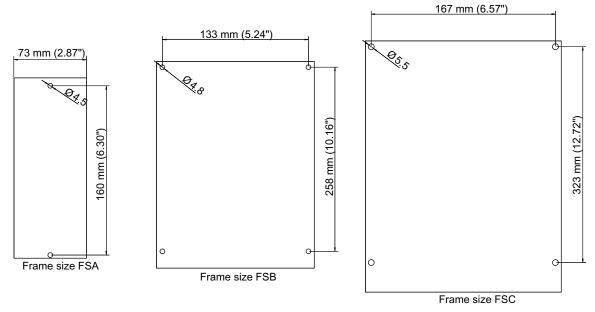
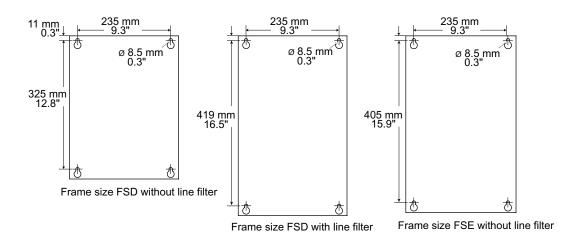


Figure 3-16 Drilling templates for frame sizes FSA and FSC

### Drilling templates for frame sizes FSD to FSF



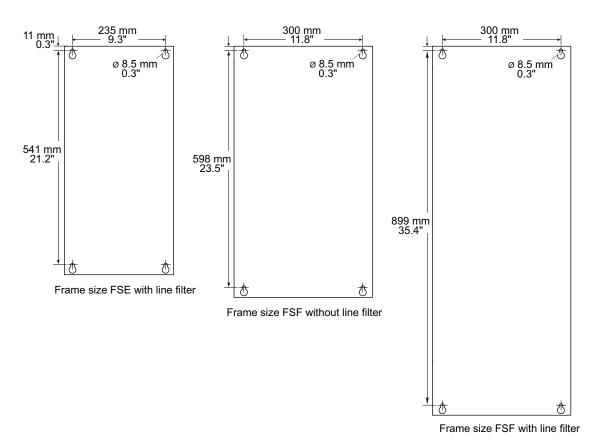


Figure 3-17 Drilling templates for frame sizes FSD to FSF - with and without line filter

The dimensions and the tightening torques when retaining the Power Modules are specified in the following table.

Table 3-7 PM340, dimensions and tightening torques when mounting

Frame size	Height, width	leight, width, depth Dimensions (with Control Unit)		Retaining type	Tightening torques
FSA	SA HxWxD		173 x 73 x 145	2 x M4 studs,	2.5 Nm with washers
		Inches	6.81 x 2.87 x 5.71	2 x M4 nuts, 2 x M4 washers	
FSB	HxWxD	mm	270 x 153 x 165	4 x M4 studs,	
		Inches	10.63 x 6.02 x 6.50	4 x M4 nuts, 4 x M4 washers	
FSC	HxWxD	mm	334 x 189 x 185	4 x M5 studs,	
		Inches	13.1 x 7.41 x 7.28	4 x M5 nuts, 4 x M5 washers	
FSD	HxWxD	mm	419 x 275 x 204	4 x M6 studs,	6 Nm with washers
without line filter		Inches	16.3 x 10.8 x 8.0	4 x M6nuts, 4 x M6 washers	
FSD	HxWxD	mm	512 x 275 x 204		
with integrated line filter		Inches	20.1 x 10.8 x 8.0		
FSE	HxWxD	mm	499 x 275 x 204		
without line filter		Inches	19.6 x 10.8 x 8.0		
FSE	HxWxD	mm	635 x 275 x 204		
with integrated line filter		Inches	25 x 10.8 x 8.0		
FSF	HxWxD	mm	635 x 350 x 316	4 x M8 studs,	13 Nm with washers
without line filter		Inches	25.0 x 13.8 x 12.4	4 x M8 nuts, 4 x M8 washers	
FSF	HxWxD	mm	934 x 350 x 316		
with integrated line filter		Inches	36.8 x 13.8 x 12.4		

Table 3-8 PM340, load terminals - tightening torques

Frame size	Tightening torques		
FSA	Nm	1,1	
FSB	Nm	1,5	
FSC	Nm	2,25	
FSD	Nm	6	
FSE	Nm	6	
FSF	Nm	13	

For frame sizes FSD to FSF, the terminals are accessed by releasing the tongue at the side of the terminal covers using a suitable flat screwdriver. The cover can then be pushed upwards and engaged in this position as shown in the following diagram.

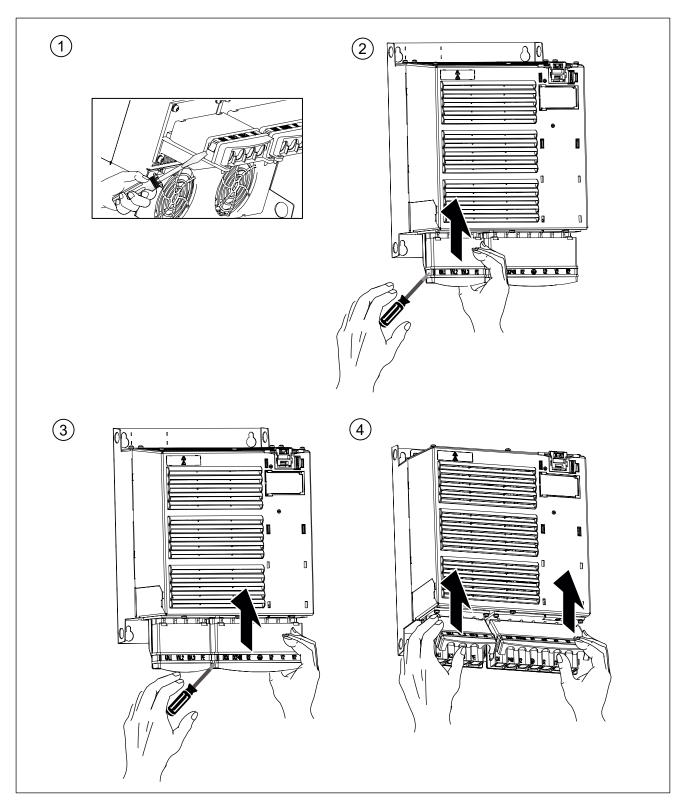


Figure 3-18 Access to the line and motor terminals for frame sizes FSD to FSF

# DANGER

Once the terminal cover has been removed, the degree of protection of the Power Module is reduced to IP00.

### Operation on non-grounded line supply systems (IT)

It is not permissible to use Power Modules with integrated line filter in IT line supply systems.

#### 3.1.6 Technical data

Table 3- 9 Technical data PM340, Part 1

Line supply voltage 1-ph. 200 V to 240	V AC ± 10%.			
PM340	6SL3210-	1SB11-0UA0	1SB12-3UA0	1SB14-0UA0
PM340 with integrated line filter	6SL3210-	1SB11-0AA0	1SB12-3AA0	1SB14-0AA0
Rated output current In	А	0,9	2,3	3,9
Base load current I <sub>H</sub>	Α	0,8	2,0	3,4
Output current for S6 duty (40%) I <sub>s6</sub>	Α	1,4	3,3	5,5
Max. output current I <sub>max</sub>	А	2,0	4,6	7,8
Rated power based on I <sub>n</sub>	kW	0,12	0,37	0,75
Rated pulse frequency	kHz	4	4	4
Power loss	kW	0,06	0,075	0,11
Cooling air requirement	m³/s	0,005	0,005	0,005
Sound pressure level	dB(A)	< 45	< 45	< 45
24 V DC supply for the Control Unit	Α	1,0	1,0	1,0
Rated input current <sup>1)</sup> with line reactor without line reactor	A	1,4 2,2	4 6	6,5 10
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	6 65	10 65	15 65
Circuit breaker type designation IEC 60947 Rated current	A	5SJ4206-7HG41 6	5SJ4210-7HG41	5SJ4216-7HG41
Circuit breaker type designation UL489 / CSA C22.2 No. 5-02 Rated current Rated short circuit current SCCR	A kA	5SJ4206-7HG41 6 14	5SJ4210-7HG41 10 14	5SJ4216-7HG41 16 14
Resistance value of the external braking resistor	Ohms	> 180	> 180	> 180
Max. cable length to braking resistor	m	15	15	15
Line supply connection L, N				

Line supply voltage 1-ph. 200 V to 240	0 V AC ± 10%.				
PM340	6SL3210-	1SB11-0UA0	1SB12-3UA0	1SB14-0UA0	
PM340 with integrated line filter	6SL3210-	1SB11-0AA0	1SB12-3AA0	1SB14-0AA0	
Motor connection U2, V2, W2		Screw terminals for	cable cross-sections 1.0 to 2	2.5 mm <sup>2</sup>	
DC link connection, connection for braking resistor DCP/R1, DCN, R2					
PE connection		at the housing with N	M 4 screw		
Max. motor cable length <sup>2)</sup> (without external options)	m	50 (shielded) 75 (unshielded)			
Degree of protection		IP20 or IPXXB			
Frame size		FSA	FSA	FSA	
Weight	kg	1,2	1,3	1,3	

<sup>1)</sup> The input current depends on the motor load and line impedance. The input currents apply for load with the rated power (based on ln) for a line impedance corresponding to uk = 1 %.

Table 3- 10 Technical data PM340, Part 2

Line supply voltage 3-ph. 380 V to 480 V AC ± 10%.						
PM340	6SL3210-	1SE11-3UA0	1SE11-7UA0	1SE12-2UA0	1SE13-1UA0	1SE14-1UA0
PM340 with integrated line filter	-	-	-	-	-	-
Rated output current In	Α	1,3	1,7	2,2	3,1	4,1
Base load current I <sub>H</sub>	Α	1,1	1,5	1,9	2,7	3,6
Output current for S6 duty (40%) I <sub>S6</sub>	A	1,3	2,0	2,5	3,5	4,5
Max. output current I <sub>max</sub>	Α	2,6	3,4	4,4	6,2	8,2
Rated power based on In	kW	0,37	0,55	0,75	1,1	1,5
Rated power based on I <sub>H</sub>	kW	0,37	0,55	0,75	1,1	1,5
Rated pulse frequency	kHz	4	4	4	4	4
Power loss	kW	0,10	0,10	0,10	0,11	0,11
Cooling air requirement	m³/s	0.005	0.005	0.005	0.005	0.005
Sound pressure level	dB(A)	< 45	< 45	< 45	< 45	< 45
24 V DC supply for the Control Unit	Α	1,0	1,0	1,0	1,0	1,0
Rated input current 1) - with line reactor - without line reactor	A	1,3 1,7	1,7 2,2	2,2 2,6	3,1 3,9	4,1 4,8
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	4 65	4 65	6 65	8 65	10 65
NH Safety fuses Rated current		3NA3 804	3NA3 804	3NA3 801	3NA3 803	3NA3 803
	Α	4	4	6	10	10

<sup>2)</sup> Max. motor cable length 15 m (shielded) for Power Modules PM340 with integrated line filter to maintain the limit values of EN 61800-3 Category C2.

Line supply voltage 3-ph.	380 V to 480	) V AC ± 10%.	T		T		
PM340	6SL3210-	1SE11-3UA0	1SE11-7UA0	1SE12-2UA0	1SE13-1UA0	1SE14-1UA0	
PM340 with integrated line filter	-	-	-	-	-	-	
Circuit breaker type designation IEC 60947 Rated current	A	3RV1021-1DA10 2.2 - 3.2	3RV1021-1DA10 2.2 - 3.2	3RV1021-1FA10 3.5 - 5	3RV1021-1GA10 4.5 - 6.3	3RV1021-1HA1	
Resistance value of the external braking resistor	Ohms	> 390	> 390	> 390	> 390	> 390	
Max. cable length to braking resistor	m	15	15	15	15	15	
Line supply connection L, N							
Motor connection U2, V2, W2		Screw terminals fo	· <del>-</del>				
DC link connection, connection for braking resistor DCP/R1, DCN, R2		- cable cross-sectio	cable cross-sections 1.0 to 2.5 mm <sup>2</sup>				
PE connection		at the housing with	n M 4 screw				
Max. motor cable length <sup>2)</sup>	m	50 (shielded) 75 (unshielded)					
Degree of protection		IP20 or IPXXB					
Frame size		FSA	FSA	FSA	FSA	FSA	
Weight	kg	1,2	1,2	1,2	1,2	1,2	

<sup>1)</sup> The input current depends on the motor load and line impedance. The input currents apply for a load with the rated power (based on In) for a line impedance corresponding to uk = 1 %.

Table 3- 11 Technical data PM340, Part 3

Line supply voltage 3-ph. 380 V to 480 V AC ± 10%.						
PM340	6SL3210-	1SE16-0UA0	1SE17-7UA0	1SE21-0UA0	1SE21-8AA0	1SE22-5UA0
PM340 with integrated line filter	6SL3210-	1SE16-0AA0	1SE17-7AA0	1SE21-0AA0	1SE21-8UA0	1SE22-5AA0
Rated output current In	Α	5,9	7,7	10,2	18	25
Base load current I <sub>H</sub>	Α	5,2	6,8	9,1	14	21
Output current for S6 duty (40%) I <sub>S6</sub>	А	6,4	8,3	10,8	19,6	27,8
Max. output current I <sub>max</sub>	Α	11,8	15,4	20,4	26,4	38
Rated power based on I <sub>n</sub>	kW	2,2	3	4	7,5	11
Rated power based on I <sub>H</sub>	kW	2,2	3	4	5,5	7,5
Rated pulse frequency	kHz	4	4	4	4	4
Power loss	kW	0,14	0,16	0,18	0,24	0,30
Cooling air requirement	m³/s	0,009	0,009	0,009	0,038	0,038
Sound pressure level	dB(A)	< 50	< 50	< 50	< 60	< 60
24 V DC supply for the Control Unit	А	1,0	1,0	1,0	1,0	1,0

<sup>2)</sup> Max. motor cable length 25 m (shielded) for PM340 Power Modules with integrated line filter to maintain the limit values of EN 61800-3 Category C2.

PM340	6SL3210-	1SE16-0UA0	1SE17-7UA0	1SE21-0UA0	1SE21-8AA0	1SE22-5UA0
PM340 with integrated line filter	6SL3210-	1SE16-0AA0	1SE17-7AA0	1SE21-0AA0	1SE21-8UA0	1SE22-5AA0
Rated input current¹) - with line reactor - without line reactor	A	5,6 6,7	7,5 8,9	9,8 12,4	17,1 23,1	24,6 32,6
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	10 65	12 65	15 65	25 65	35 65
Safety fuses NH Rated current	А	3NA3 803	3NA3 805	3NA3 805	3NA3 810 25	3NA3 814 35
Circuit breaker type designation IEC 60947 Rated current	А	3RV1021-1KA10 9 - 12.5	3RV1021-4AA10 11 - 16	3RV1021-4BA10 14 - 20	3RV1031-4EA10 22 - 32	3RV1031-4FA10 28 - 40
Resistance value of the external braking resistor	Ohms	> 160	> 160	> 160	> 56	> 56
Max. cable length to braking resistor	m	15	15	15	15	15
Line supply connection L, N						
Motor connection U2, V2, W2		Screw terminals fo			Screw terminals for cable cross-sections 2.5 to 10 mm <sup>2</sup>	
DC link connection, connection for braking resistor DCP/R1, DCN, R2						
PE connection		at the housing with	n M 5 screw			
Max. motor cable length <sup>2)</sup>	m	50 (shielded) 75 (unshielded)				
Degree of protection		IP20 or IPXXB				
Frame size		FSB	FSB	FSB	FSC	FSC
Weight	kg	4,0	4,0	4,0	6,5	6,5

<sup>1)</sup> The input current depends on the motor load and line impedance. The input currents apply for a load with the rated power (based on In) for a line impedance corresponding to uk = 1 %.

<sup>2)</sup> Max. motor cable length 25 m (shielded) for PM340 Power Modules with integrated line filter to maintain the limit values of EN 61800-3 Category C2.

Table 3- 12 Technical data PM340, Part 4

PM340	6SL3210-	1SE23-2UA0	1SE23-8UA0	1SE24-5UA0	1SE26-0UA0	1SE27-5UA0
PM340 with integrated line filter	6SL3210-	1SE23-2AA0	1SE23-8AA0	1SE24-5AA0	1SE26-0AA0	1SE27-5AA0
Rated output current In	Α	32	38	45	60	75
Base load current I <sub>H</sub>	Α	27	33	40	48	65
Output current for S6 duty (40%) I <sub>S6</sub>	А	37,1	49	58	78	98
Max. output current I <sub>max</sub>	Α	52	64	76	90	124
Rated power based on In	kW	15	18,5	22	30	37
Rated power based on $I_{\text{H}}$	kW	11	15	18,5	22	30
Rated pulse frequency	kHz	4	4	4	4	4
Power loss	kW	0,40	0,38	0,51	0,69	0,99
Cooling air requirement	I/s	54,9	54,9	54,9	54,9	2 x 54.9
Sound pressure level	dB(A)	< 60	< 60	< 60	< 60	< 60
24 V DC supply for the Control Unit	А	1,0	1,0	1,0	1,0	1,0
Rated input current <sup>1)</sup> - with line reactor - without line reactor	A	33 39	40 46	47 53	63 72	78 88
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	45 65	50 65	60 65	90 65	100 65
Safety fuses NH Rated current	А	3NA3 817	3NA3 820 50	3NA3 822 63	3NA3 824 80	3NA3 830
Circuit breaker type designation IEC 60947 Rated current	A	3RV1031-4HA10 40 - 50	3RV1042-4JA10 45 - 63	3RV1042-4KA10 57 - 75	3RV1042-4MA10 80 - 100	3VL1712-1DD3 0AA0 100 - 125
Circuit breaker type designation UL489 / CSA C22.2 No. 5-02 Rated current Rated short circuit current SCCR	A kA				3VL2191-3KN30- 0AA0 90 65	3VL2110-3KN3 0AA0 100 65
Resistance value of the external braking resistor	Ohms	> 56	> 27	> 27	> 27	> 15
Max. cable length to braking resistor	m	15	15	15	15	15
Line supply connection L, N						
Motor connection U2, V2, W2		Screw terminals	Stud M6,			

Line supply voltage 3-ph. 380 V to 480 V AC ± 10%.							
PM340	6SL3210-	1SE23-2UA0	1SE23-8UA0	1SE24-5UA0	1SE26-0UA0	1SE27-5UA0	
PM340 with integrated line filter			1SE23-8AA0	1SE24-5AA0	1SE26-0AA0	1SE27-5AA0	
DC link connection, connection for braking resistor DCP/R1, DCN, R2		for cable cross- sections 2.5 to 10 mm <sup>2</sup>	connectable cable cross-sections 10 to 50 mm <sup>2</sup>				
PE connection		at the housing with M 5 screw	at the housing with M6 screw				
Max. motor cable length <sup>2)</sup>	m	50 (shielded) 75 (unshielded)	70 (shielded) 100 (unshielded)				
Degree of protection		IP20 or IPXXB					
Height PM 340 with integrated line filter	mm	333,4 (13.12)	511 (20.11)	511 (20.11)	511 (20.11)	633 (24.92)	
Frame size		FSC	FSD	FSD	FSD	FSE	
Weight without line filter/	kg	6,5	15,9	15,9	15,9	19,8	
with integrated line filter		6,5	19,3	19,3	19,3	27,1	

<sup>1)</sup> The input current depends on the motor load and line impedance. The input currents apply for a load with the rated power (based on In) for a line impedance corresponding to uk = 1 %.

Table 3- 13 Technical data PM340, Part 5

Line supply voltage 3-ph. 380 V to 480 V AC ± 10%.						
PM340	6SL3210-	1SE31-0UA0	1SE31-1UA0	1SE31-5UA0	1SE31-8UA0	
PM340 with integrated line filter	6SL3210-	1SE31-0AA0	1SE31-1AA0	1SE31-5AA0	1SE31-8AA0	
Rated output current In	Α	90	110	145	178	
Base load current I <sub>H</sub>	Α	80	95	115	155	
Output current for S6 duty (40%) I <sub>S6</sub>	А	117	143	188	231	
Max. output current I <sub>max</sub>	Α	150	180	220	290	
Rated power based on In	kW	45	55	75	90	
Rated power based on I <sub>H</sub>	kW	37	45	55	75	
Rated pulse frequency	kHz	4	4	4	4	
Power loss	kW	1,21	1,42	1,93	2,31	
Cooling air requirement	I/s	2 x 54.9	150	150	150	
Sound pressure level	dB(A)	62	< 60	< 60	65	
24 V DC supply for the Control Unit	А	1,0	1,0	1,0	1,0	
Rated input current¹) - with line reactor - without line reactor	A	94 105	115 129	151 168	186 204	
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	125 65	150 65	200 65	250 65	

<sup>2)</sup> Max. motor cable length 25 m (shielded) for PM340 Power Modules with integrated line filter to maintain the limit values of EN 61800-3 Category C2.

PM340	6SL3210-	1SE31-0UA0	1SE31-1UA0	1SE31-5UA0	1SE31-8UA0		
PM340 with integrated line filter	6SL3210-	1SE31-0AA0	1SE31-1AA0	1SE31-5AA0	1SE31-8AA0		
Safety fuses NH Rated current	А	3NA3 832 125	3NA3 836 160	3NA3 140 200	3NA3 144 250		
Circuit breaker type designation IEC 60947 Rated current		3VL1716-1DD33- 0AA0	3VL3720-1DC36- 0AA0	3VL3720-1DC36- 0AA0	3VL3725-1DC36- 0AA0		
	Α	125 - 160	160 - 200	160 - 200	200 - 250		
Circuit breaker type designation UL489 / CSA C22.2 No. 5-02 Rated current		3VL2112-3KN30- 0AA0	3VL2115-3KN30- 0AA0	3VL3120-3KN30- 0AA0	3VL3125-3KN30- 0AA0		
Rated short circuit current	Α	125	150	200	250		
SCCR	kA	65	65	65	65		
Resistance value of the external braking resistor	Ohms	> 15	> 8,2	> 8,2	> 8,2		
Max. cable length to braking resistor	m	15	15	15	15		
Line supply connection L, N							
Motor connection		Stud M6,	Stud M8,				
U2, V2, W2		connectable cable					
DC link connection, connection for braking resistor DCP/R1, DCN, R2		cross-sections 10 to max. connection cable cross-section 120 mm <sup>2</sup> max. connection cable cross-section 120 mm <sup>2</sup>					
PE connection		at the housing with M6 screw	At the housing with	M8 screw			
Max. motor cable length <sup>2)</sup>	m	70 (shielded) 100 (unshielded)					
Degree of protection		IP20 or IPXXB					
Height							
PM 340 with integrated line filter	mm	633 (24.92)	934 (36.77)	934 (36.77)	934 (36.77)		
Frame size		FSE	FSF	FSF	FSF		
Weight without line filter/	kg	19,8	50,7	50,7	50,7		
with integrated line filter		27,1	66.7	66.7	66.7		

<sup>1)</sup> The input current depends on the motor load and line impedance. The input currents apply for a load with the rated power (based on In) for a line impedance corresponding to uk = 1 %.

<sup>&</sup>lt;sup>2)</sup> Max. motor cable length 25 m (shielded) for PM340 Power Modules with integrated line filter to maintain the limit values of EN 61800-3 Category C2.

## Interrelationship between the pulse frequency and current de-rating

Table 3- 14 Current de-rating depending on the pulse frequency

Order No.	Line voltage	Rated output current	Power (high overload)		Outpu	t current in	A at a switc	hing freque	ncy of:	
6SL3210 -		Α	[kW]	4 kHz	6 kHz	8 kHz 70%	10 kHz	12 kHz 50%	14 kHz	16 kHz 40%
1SB11- 0UA0	1-ph. 230 V AC	0,9	0,12	0,9	0,7	0,54	0,4	0,3	0,3	0,2
1SB12- 3UA0		2,3	0,37	2,3	1,8	1,3	1,1	0,9	0,8	0,6
1SB14- 0UA0		3,9	0,75	3,9	3,1	2,3	1,9	1,5	1,3	1,1
1SE11- 3UA0	3-ph. 400 V AC	1,3	0,37	1,3	-	0,91	-	0,65	-	0,52
1SE11- 7UA0		1,7	0,55	1,7	-	1,19	-	0,85	-	0,68
1SE12- 2UA0		2,2	0,75	2,2	-	1,54	-	1,1	-	0,88
1SE13- 1UA0		3,1	1,1	3,1	-	2,17	-	1,55	-	1,24
1SE14- 1UA0		4,1	1,5	4,1	-	2,87	-	2,05	-	1,64
1SE16- 0UA0		5,9	2,2	5,9	-	4,13	-	2,95	-	2,36
1SE17- 7UA0		7,7	3	7,7	-	5,39	-	3,85	-	3,08
1SE21- 0UA0		10	4	10	-	7	-	5	-	4
1SE21- 8UA0		18	5,5	18	-	12,6	-	9	-	7,02
1SE22- 5UA0	1	25	7,5	25	-	17,5	-	12,5	-	10
1SE23- 2UA0		32	15,0	32,0	30,4	28,8	25,6	22,4	19,2	16,0
1SE23- 8UA0		38	18,5	38,0	34,2	30,4	26,6	22,8	19,0	15,2
1SE24- 5UA0		45	22,0	45,0	40,5	36,0	31,5	27,0	22,5	18,0
1SE26- 0UA0		60	30,0	62,0	58,9	55,8	49,6	43,4	37,2	31,0
1SE27- 5UA0		75	37,0	75,0	67,5	60,0	52,5	45,0	37,5	30,0
1SE31- 0UA0		90	45,0	90,0	76,5	63,0	51,8	40,5	33,8	27,0
1SE31- 1UA0		110	55,0	110,0	93,5	77,0	63,3	49,5	41,3	33,0

Order No.	Line voltage	Rated output current	Power (high overload)	Output current in A at a switching frequency of:						
6SL3210 -		A	[kW]	4 kHz	6 kHz	8 kHz 70%	10 kHz	12 kHz 50%	14 kHz	16 kHz 40%
1SE31- 5UA0		145	75,0	145,0	112,4	79,8	68,9	58,0	50,8	43,5
1SE31- 8UA0		178	15,0	32,0	30,4	28,8	25,6	22,4	19,2	16,0

## Overload capability

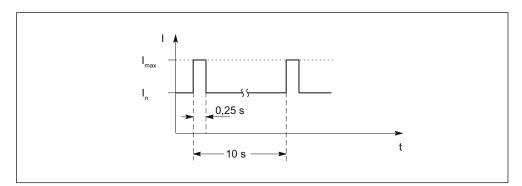


Figure 3-19 Load cycle with pre-load condition (for servo drives)

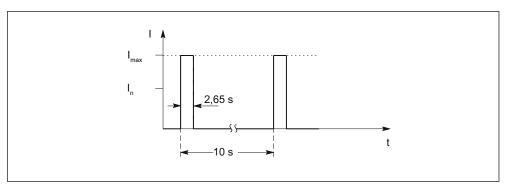


Figure 3-20 Load cycle without pre-load condition (for servo drives)

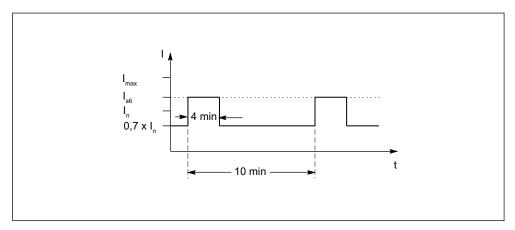


Figure 3-21 S6 load cycle with pre-load condition (for servo drives)

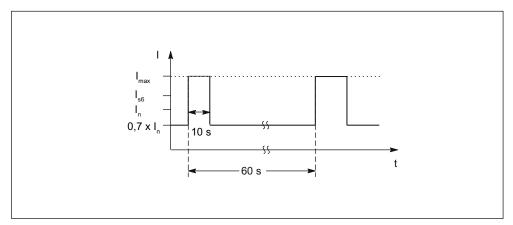


Figure 3-22 Load cycle with pre-load condition (for servo drives)

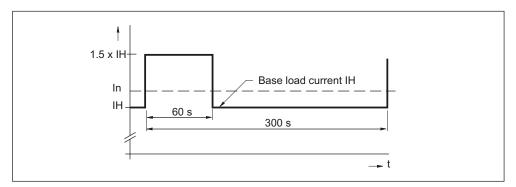


Figure 3-23 Load cycle with 60 s overload with a load cycle period of 300 s

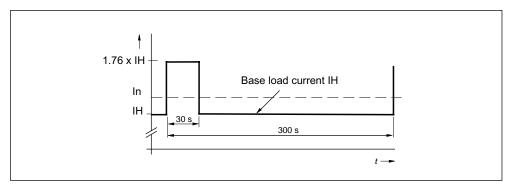


Figure 3-24 Load cycle with 30 s overload with a load cycle period of 300 s

### Derating characteristic for Power Modules in blocksize format

#### Note

The short leading edge of the load cycles shown can only be achieved using speed or torque control.

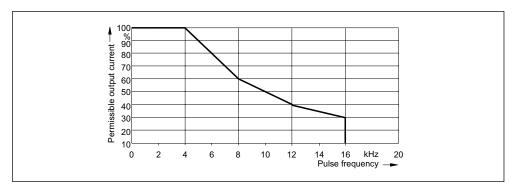


Figure 3-25 Output current as a function of pulse frequency

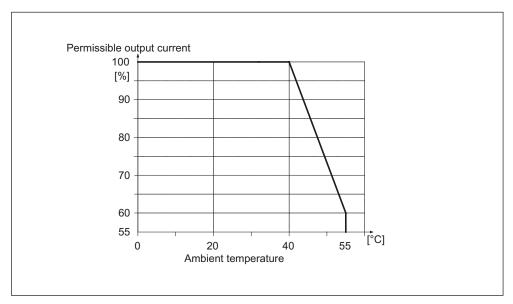


Figure 3-26 Output power as a function of ambient temperature

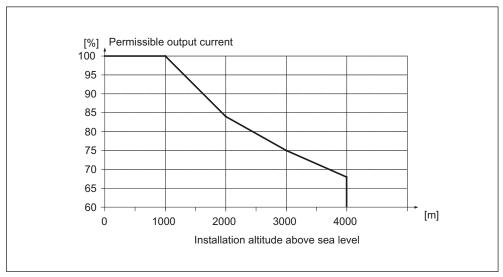


Figure 3-27 Output power as a function of installation altitude

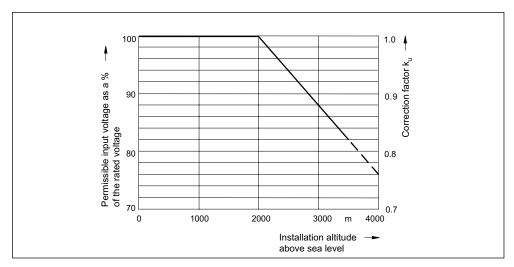


Figure 3-28 Voltage correction factor as a function of installation altitude

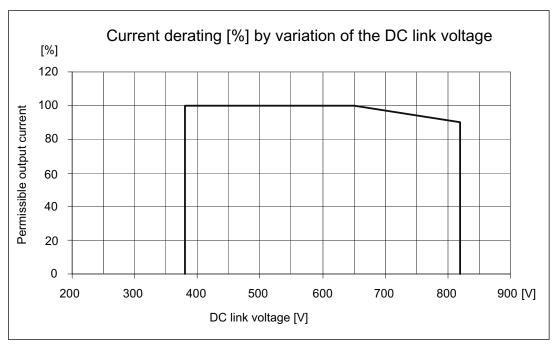


Figure 3-29 Current derating by variation of the DC link voltage

## 3.2 Power Modules Blocksize Liquid Cooled (PM340)

### 3.2.1 Description

The Power Modules in Blocksize Liquid Cooled format (frame sizes FSD - FSF) are designed as follows:

- Line-side diode rectifier
- DC link electrolytic capacitors with pre-charging circuit
- Output inverter
- Braking chopper for (external) braking resistor
- 24 V DC / 1 A power supply
- Gating unit, actual value acquisition
- Internal liquid cooling

The Blocksize Liquid Cooled Power Modules cover the power range from 18.5 kW to 90.0 kW and are also without an integrated line filter.

Table 3- 15 Overview of Liquid Cooled Power Modules PM340





### 3.2.2 Safety information

# / CAUTION

During transport and during storage, Power Modules must be protected against mechanical shock and vibration. It is also important to protect the unit against water (rain) and against excessively high/excessively low temperatures.

#### Note

#### Connection authorization

Power Modules have been designed for use in the industrial environment and generate current harmonics on the line side as a result of the rectifier circuit.

When a machine with integrated Power Modules is connected to the public network, authorization is required from the local power supply company if the rated input current of the machine does not fulfill the requirements of EN 61000-3-2 with respect to current harmonics.

# / DANGER

#### Grounding/protective grounding of the Power Module

The Power Module housing must always be grounded. If the Power Module is not correctly grounded, then extremely hazardous states can occur, which under certain circumstances, can result in death.

# / DANGER

It must be checked as to whether the Power Module is designed for the correct power supply - higher supply voltages may not be connected to the Power Module.

# /!\DANGER

After connecting the line and motor feeder cables to the appropriate terminals, check that the front covers (only frame sizes FSD to FSF) are closed and latched. Only then may the Power Module be connected to the power supply.

#### NOTICE

For UL-approved systems, only MOTION-CONNECT lines can be used and the fuses tested for UL approval must be installed (see "Technical specifications").

# DANGER

Once all the supply voltages have been disconnected, a hazardous voltage may be present in the power unit for up to 5 minutes. The cover for the terminals may only be opened after this time has definitely elapsed.

When opening the protective cover, you must activate the release. A suitable tool (e.g. screwdriver) must be used for this purpose.

Damaged components must not be used, otherwise this could result in secondary damage or accidents.

# /!\DANGER

The drive components generate high leakage currents in the protective conductor. The components must only be operated in cabinets or in closed electrical operating areas and must be connected with the protective conductor. To protect against electric shock, the protective conductor connection on the cabinet or machine must be implemented in accordance with one of the following measures:

- stationary connection and protective conductor connection by means of ≥ 10 mm<sup>2</sup> Cu or
   ≥ 16 mm<sup>2</sup> Al
- stationary connection and automatic shutdown of the power supply if the protective conductor is interrupted

# /!\DANGER

The hazard warning in the local language for the DC link discharge time must be affixed to the component. A set of labels in 16 languages is provided with the component.

# /!\warning

Power Modules must be mounted in the vertical position.

For the Liquid Cooled Power Modules, a cooling clearance of 100 mm (3.93 inches) must be maintained above and below the component.

Devices, that could restrict the cooling air flow may not be mounted/installed in this area. It must be carefully ensured that the cooling air flow of the Power Modules can flow unrestricted.

#### Note

The Power Modules with frame sizes FSD, FSE, and FSF can be mounted without any lateral clearance.

## DANGER

Cable shields and unused power cable conductors (e.g. brake conductors) must be connected to PE potential to prevent capacitive cross-talk charges.

Non-observance can cause lethal shock voltages.

## / WARNING

The equipment must be safely disconnected from the supply before any installation or service work is carried out on cooling circuit components.

The cooling circuit may only be connected by a trained specialist.

## 3.2.3 Interface description

#### 3.2.3.1 Overview

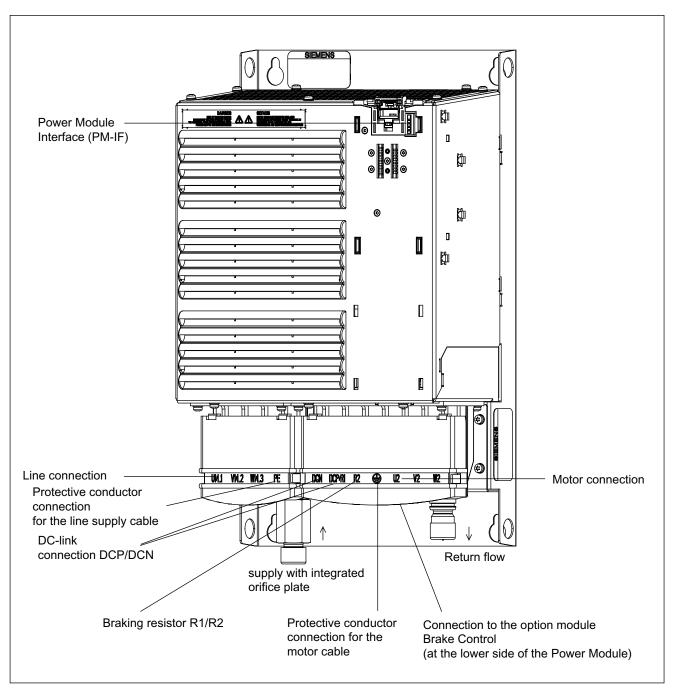


Figure 3-30 Liquid Cooled Power Module PM340 (Example: Frame size FSD)

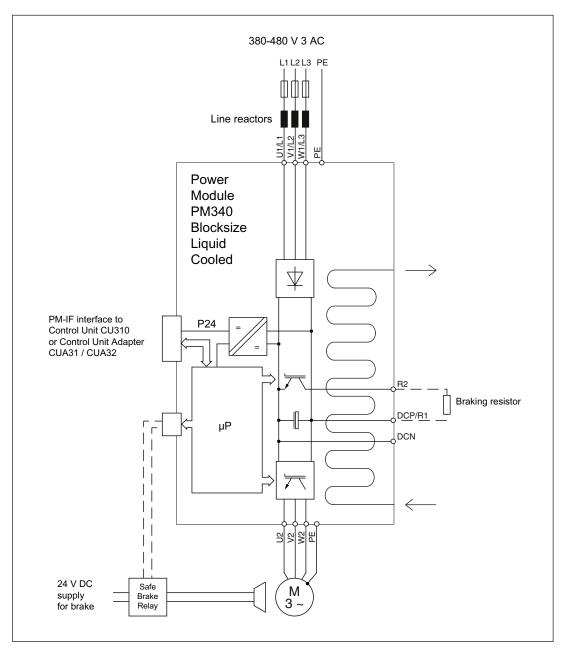


Figure 3-31 Connection example Power Module PM340 Liquid Cooled, 3 AC 380 V to 480 V

#### Arrangement of the line and motor terminals

The following diagram shows the arrangement of the line and motor terminals for PM340 Power Modules (frame sizes FSD to FSF). The diagram also includes the terminal tightening torques.

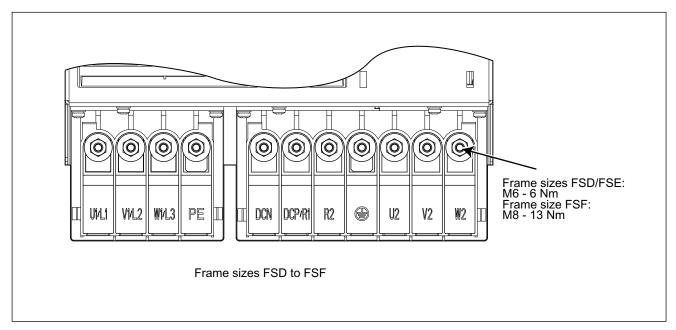


Figure 3-32 Arrangement of the line supply and motor terminals for the PM340

#### 3.2.3.2 Line supply connection

Table 3- 16 Terminal strip, line supply connection 3-ph. 380 V - 480 V AC

	Terminal	Signal name	Technical specifications
	1	U1/L1	External conductor L1
	2	V1/L2	External conductor L2
	3	W1/L3	External conductor L3
UALI WAZ WAZ PE	4	PE	PE connection


### 3.2.3.3 Braking resistor and DC link connection

Table 3- 17 Terminal strip, braking resistor, and DC link connection

	Terminal	Technical specifications
	DCN	DC link negative
	DCP/R1	DC link positive and positive connection for braking resistor
DON DOP/RI RZ	R2	Negative connection for the braking resistor

#### 3.2.3.4 Motor connection

Table 3- 18 Terminal strip, motor connection 380 V - 480 V 3 AC

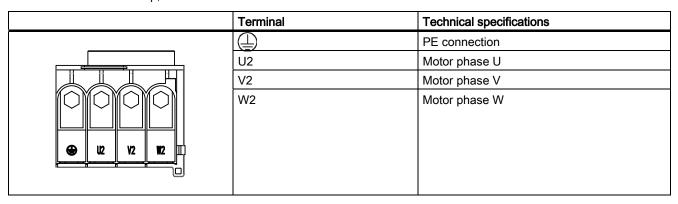

### 3.2.3.5 Connection to the option module, brake control

Table 3- 19 Connector

Terminal	Designation	Technical specifications
 1	Low	Low signal, option module brake control at PM340
2	High	High signal, option module brake control at PM340

## 3.2.4 Dimension drawings

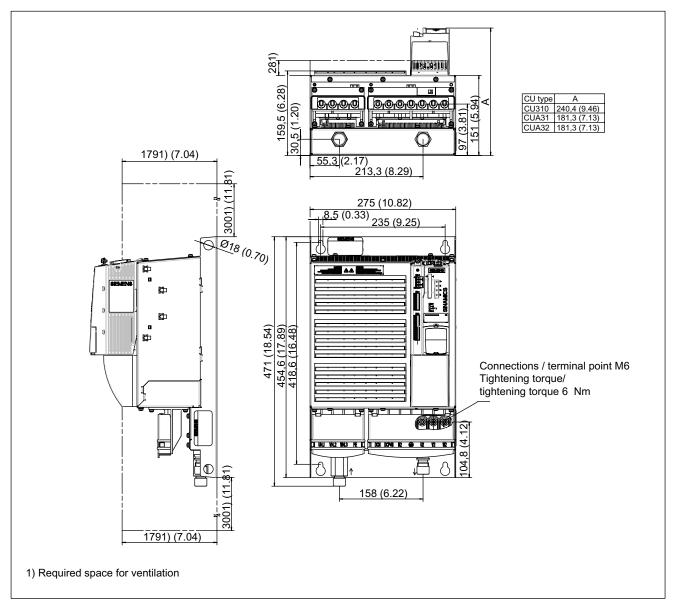


Figure 3-33 Dimension drawing: Power Module PM340, frame size FSD Liquid Cooled

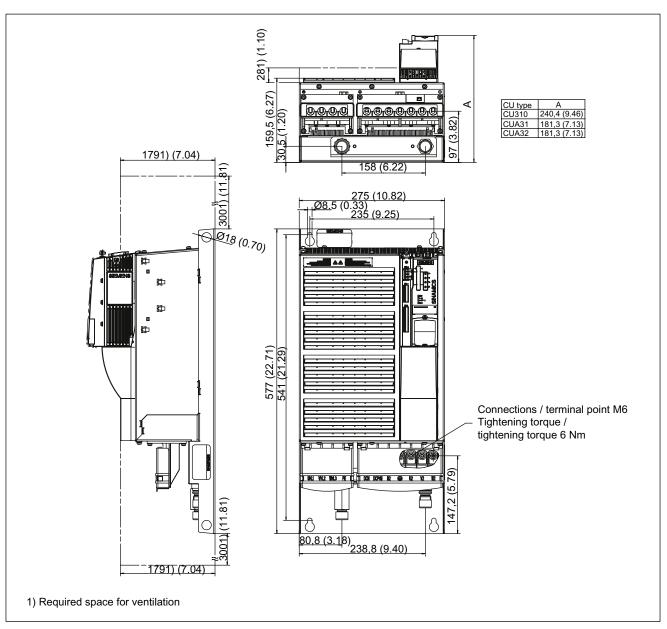


Figure 3-34 Dimension drawing: Power Module PM340, frame size FSE Liquid Cooled

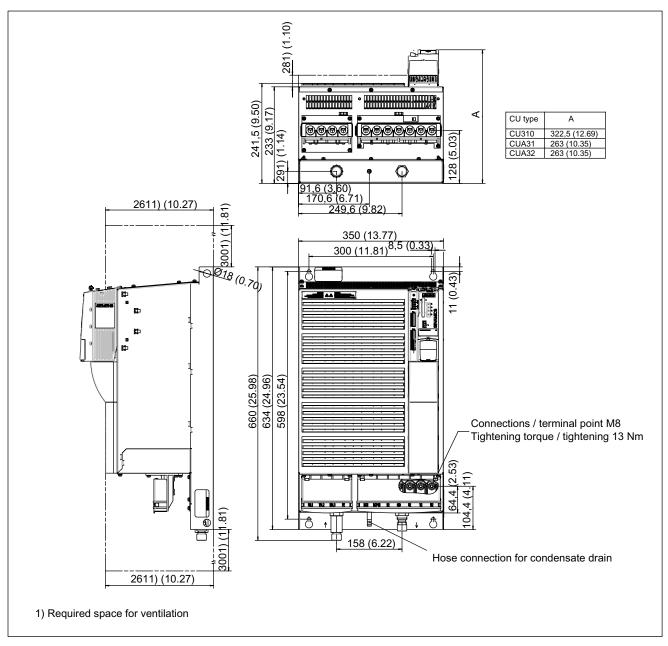


Figure 3-35 Dimension drawing: Power Module PM340, frame size FSF Liquid Cooled

## 3.2.5 Installation

The coolant hoses should be connected before the devices are installed.

## Hole drilling templates for frame sizes FSD to FSF

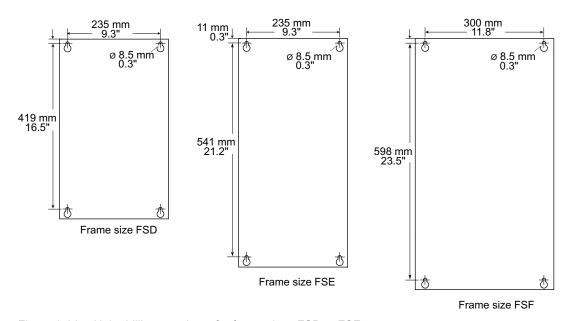


Figure 3-36 Hole drilling templates for frame sizes FSD to FSF


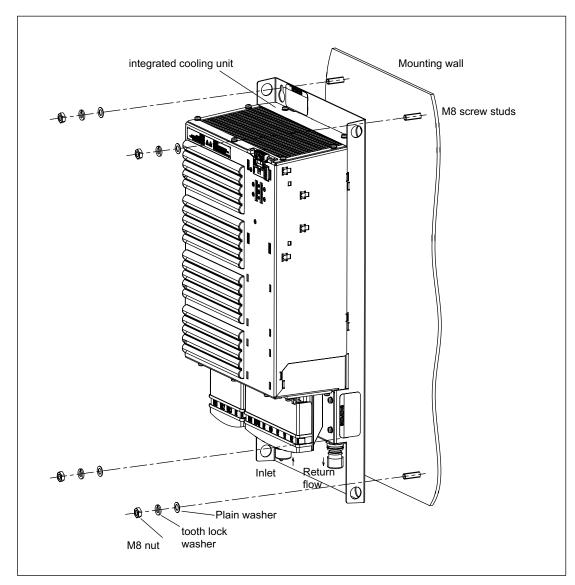


Figure 3-37 Installation of Power Module PM340 Liquid Cooled with integrated cooling unit (example: frame size FSE)

The connections for the coolant are on the underside. Water connection thread type: Pipe thread ISO 228 G 1/2 B.

For frame sizes FSD to FSF, the terminals are accessed by releasing the tongue at the side of the terminal covers using a suitable flat screwdriver. The cover can then be pushed upwards and engaged in this position as shown in the following diagram.

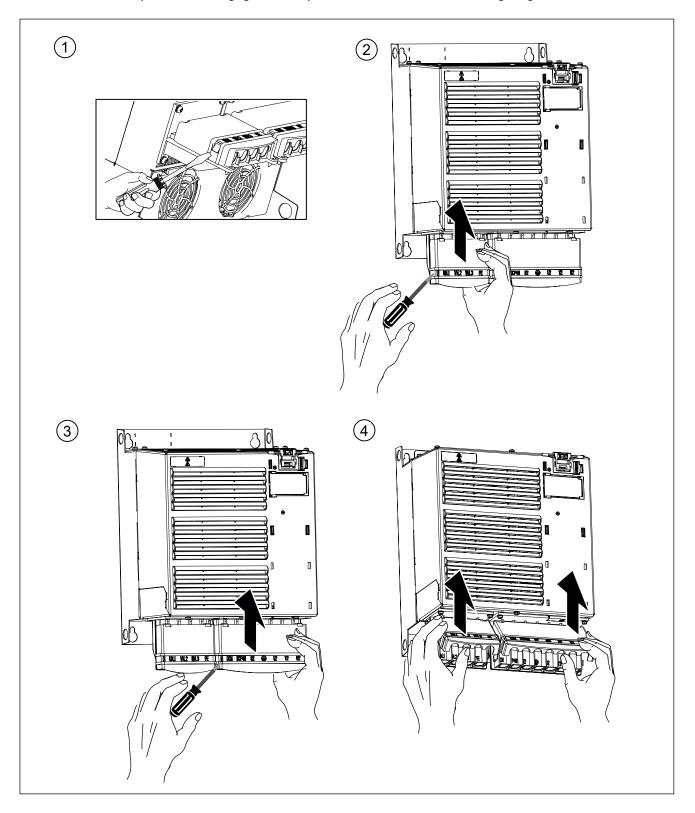

#### 3.2 Power Modules Blocksize Liquid Cooled (PM340)

Figure 3-38 Access to the line and motor terminals for frame sizes FSD to FSF



Once the terminal cover has been removed, the degree of protection of the Power Module is reduced to IP00.

#### 3.2.6 Electrical connection

When connecting the SINAMICS S120 Liquid Cooled devices, you should use cables with the cross-sections specified in the relevant technical specifications.

The coolant connection is established by means of 1/2" coupling. The supply and return connections on SINAMICS devices must be established by means of a flexible, non-conductive hose to prevent electrochemical corrosion, reduce the transmission of vibrations, and dampen pressure transients in the coolant. The hose should be about 1.5 m in length (total of supply and return lines).

## 3.2.7 Commissioning

#### Prior to commissioning

Once the devices have been installed and before they are commissioned, the cooling circuit must be checked for leaks.

#### After commissioning

The recommended servicing procedure for the cooling circuit is to check the fill level and the coolant for discoloration or cloudiness at least once a year.

If the coolant level has dropped, the loss should be corrected on closed or semi-open circuits with a prepared mixture of distilled water and inhibitor or Antifrogen N.

#### 3.2.8 Technical specifications

Table 3- 20 Technical specifications for Power Modules PM340 format Blocksize Liquid Cooled, Part1

PM340 Power Module	6SL3215-	1SE23-0AA0	1SE26-0AA0	1SE27-5UA0
Rated output current In	Α	38	60	75
Base load current I <sub>H</sub>	Α	33	48	65
Output current for S6 duty (40%) I <sub>S6</sub>	Α	49	78	98
Max. output current I <sub>max</sub>	Α	64	90	124
Rated power based on In	kW	18,5	30	37
Rated power based on I <sub>H</sub>	kW	15	22	30
Rated pulse frequency	kHz	4	4	4

PM340 Power Module	6SL3215-	1SE23-0AA0	1SE26-0AA0	1SE27-5UA0
Power loss	kW	0,38	0,69	0,99
Power loss to ambient air, approx.	kW	0,09	0,13	0,16
Coolant requirements	l/min	8	8	8
Sound pressure level	dB(A)	< 60	< 60	< 60
24 V DC supply for the Control Unit	Α	1,0	1,0	1,0
Rated input current 1)	Α			
- with line reactor		40	63	78
- without line reactor		46	72	88
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	50 65	90 65	100 65
Safety fuses NH Rated current	A	3NA3 820 50	3NA3 824 80	3NA3 830 100
Circuit-breaker type designation IEC 60947		3RV1042-4JA10	3RV1042-4MA10	3VL1712-1DD33-0AA0 100 - 125
Rated current	Α	45 - 63	80 - 100	
Circuit-breaker type designation UL489 / CSA C22.2 No. 5-02 Rated current			3VL2191-3KN30-0AA0	3VL2110-3KN30-0AA0
Rated short-circuit current SCCR	A kA		65	65
Resistance value of the external braking resistor	Ohms	> 27	> 27	> 15
Max. cable length to braking resistor	m	15	15	15
Line connection L1, L2, L3				
Motor connection			Stud M6.	
U2, V2, W2		connectable ca	able cross-sections 10 to 50 mi	m <sup>2</sup> for ring cable lugs
DC link connection, connection for braking resistor DCP/R1, DCN, R2				
PE connection		M6 studs		
Max. motor cable length	m		70 (shielded)	
			100 (unshielded)	
Degree of protection			IP20 or IPXXB	
Depth				
- PM340			159,5 (6.28)	
- PM340 with Control Unit CU310	mm		240,4 (9.46)	
- PM340 with CUA31			181,3 (7.13)	
- PM340 with CUA32			181,3 (7.13)	
Frame size		FSD	FSD	FSE
Weight with CU310	kg	10,5 11,5	10,5 11,5	14,8 15,8

<sup>1)</sup> The input current depends on the motor load and line impedance. The input currents apply for a load with the rated power (based on In) for a line impedance corresponding to uk = 1 %.

Table 3-21 Technical specifications for Power Modules PM340 format Blocksize Liquid Cooled, Part 2

PM340 Power Module	6SL3215-	1SE31-0UA0	1SE31-1UA0	1SE31-8UA0
Rated output current In	Α	90	110	178
Base load current I <sub>H</sub>	Α	80	95	155

## 3.2 Power Modules Blocksize Liquid Cooled (PM340)

PM340 Power Module	6SL3215-	1SE31-0UA0	1SE31-1UA0	1SE31-8UA0
Output current for S6 duty (40%) Is6	Α	117	143	231
Max. output current I <sub>max</sub>	Α	150	180	290
Rated power based on In	kW	45	55	90
Rated power based on I <sub>H</sub>	kW	37	45	75
Rated pulse frequency	kHz	4	4	4
Power loss	kW	1,21	1,42	2,31
Power loss to ambient air, approx.	kW	0,19	0,21	0,35
Coolant requirements	l/min	8	8	8
Sound pressure level	dB(A)	62	< 60	65
24 V DC supply for the Control Unit	Α	1,0	1,0	1,0
Rated input current¹) - with line reactor	А	94	115	186
- without line reactor		105	129	204
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	125 65	150 65	250 65
Safety fuses NH Rated current	A	3NA3 832 125	3NA3 836 160	3NA3 144 250
Circuit-breaker type designation IEC 60947 Rated current	A	3VL1716-1DD33-0AA0 125 - 160	3VL3720-1DC36-0AA0 160 - 200	3VL3725-1DC36-0AA0 200 - 250
Circuit-breaker type designation UL489 / CSA C22.2 No. 5-02		3VL2112-3KN30-0AA0	3VL2115-3KN30-0AA0	3VL3125-3KN30-0AA0
Rated current Rated short-circuit current SCCR	A kA	125 65	150 65	250 65
Resistance value of the external braking resistor	Ohms	> 15	> 8,2	> 8,2
Max. cable length to braking resistor	m	15	15	15
Line connection L1, L2, L3				
Motor connection U2, V2, W2		Stud M6.	Stud M8,	
DC link connection, connection for braking resistor DCP/R1, DCN, R2		connectable cable cross- sections 10 to 50 mm²for	max. connection cable cro	ess-section 120 mm <sup>2</sup>
PE connection		ring cable lugs		
Max. motor cable length	m		70 (shielded)	
			100 (unshielded)	
Degree of protection			IP20 or IPXXB	<u> </u>
Depth				
- PM340		159,5 (6.28)	241,5 (9.50)	241,5 (9.50)
- PM340 with Control Unit CU310	mm	240,4 (9.46)	322,5 (12.69)	322,5 (12.69)
- PM340 with CUA31		181,3 (7.13)	263 (10.35)	263 (10.35)
- PM340 with CUA32		181,3 (7.13)	263 (10.35)	263 (10.35)
Frame size		FSE	FSF	FSF
Weight	kg	14,8	29,2	29,2
With CU310		15,8	30,2	30,2

<sup>1)</sup> The input current depends on the motor load and line impedance. The input currents apply for a load with the rated power (based on In) for a line impedance corresponding to uk = 1 %.

## Overload capability

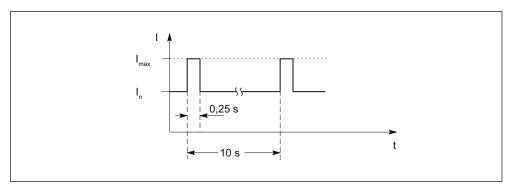


Figure 3-39 Load cycle with pre-load condition (for servo drives)

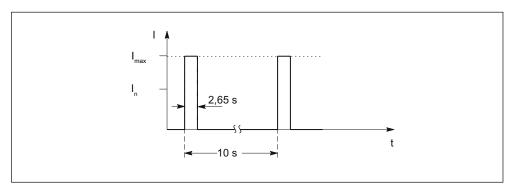


Figure 3-40 Load cycle without pre-load condition (for servo drives)

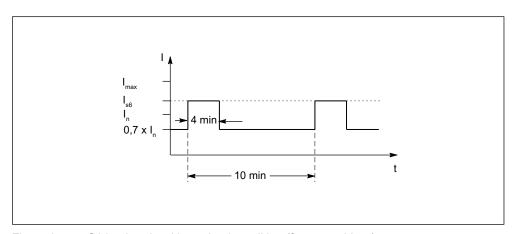


Figure 3-41 S6 load cycle with pre-load condition (for servo drives)

## 3.2 Power Modules Blocksize Liquid Cooled (PM340)

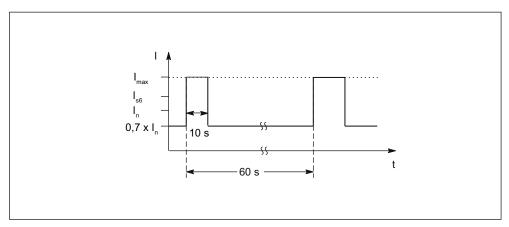


Figure 3-42 Load cycle with pre-load condition (for servo drives)

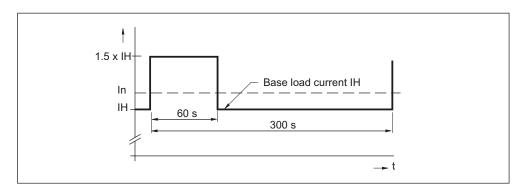


Figure 3-43 Load cycle with 60 s overload with a load cycle period of 300 s

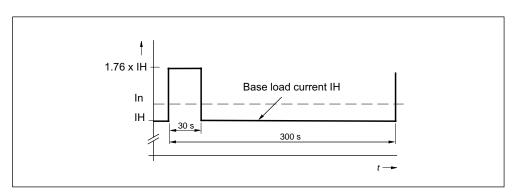


Figure 3-44 Load cycle with 30 s overload with a load cycle period of 300 s

#### Derating characteristics for Power Modules in blocksize Liquid Cooled format

#### Note

The short leading edge of the load cycles shown can only be achieved using speed or torque control.

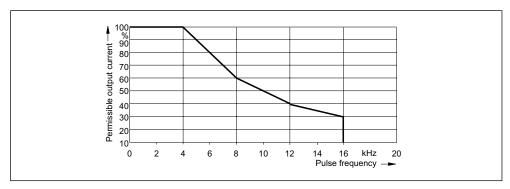


Figure 3-45 Output current as a function of pulse frequency

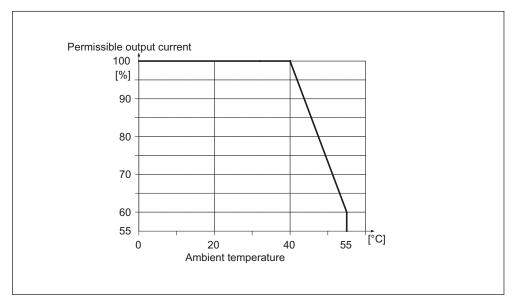


Figure 3-46 Output power as a function of ambient temperature

## 3.2 Power Modules Blocksize Liquid Cooled (PM340)

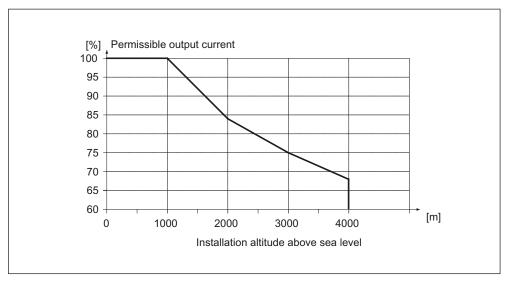


Figure 3-47 Output power as a function of installation altitude

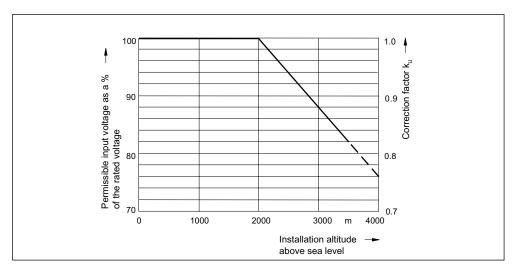


Figure 3-48 Voltage correction factor as a function of installation altitude

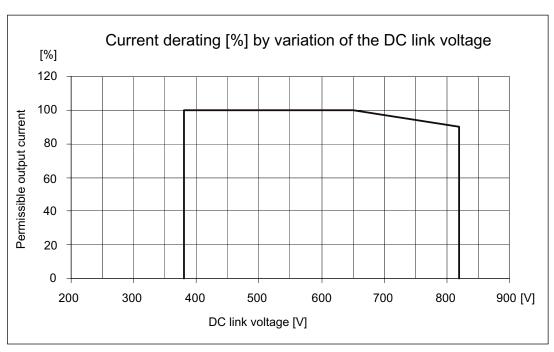


Figure 3-49 Current derating by variation of the DC link voltage

See also: Chapter entitled "Notes on cooling circuit configuration", Table entitled "Drop in pressure with different coolant temperatures."

#### 3.3.1 Description

A Power Module is a power unit (frequency inverter) that provides the power supply for the connected motor. A Power Module must be connected to a Control Unit via DRIVE-CLiQ. The open-loop and closed-loop control functions are stored in the Control Unit.

#### **Characteristics of Power Modules**

- Version from 210 A to 490 A
- Internal air cooling
- Short-circuit/ground-fault-proof
- Electronic type plate
- · Operating status and error status displayed using LEDs
- DRIVE-CLiQ interface for communication with the Control Unit and/or other components in the drive line-up
- Integration in system diagnostics

#### 3.3.2 Safety information



After disconnecting all the supply voltages, a hazardous voltage will be present at all Power Modules for another 5 minutes. Work cannot be carried out until this time has elapsed.

# DANGER

The DC link discharge voltage hazard warning in the local language must be attached to all of the components.

# /!\warning

The cooling clearances above, below, and in front of the component, which are specified in the dimension drawings, must be observed.

# / DANGER

Cable shields and unused power cable conductors must be connected to PE potential to prevent capacitive cross-talk charges.

Non-observance can cause lethal shock voltages.

## 3.3.3 Interface description

#### 3.3.3.1 Overview

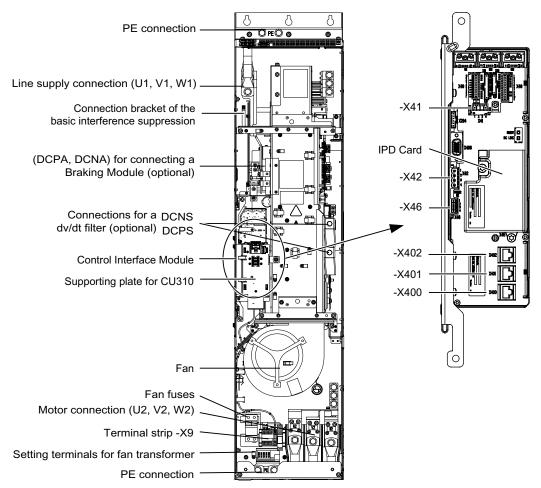


Figure 3-50 Power Module, frame size FX, with order number 6SL3310-1TE32-xAA3

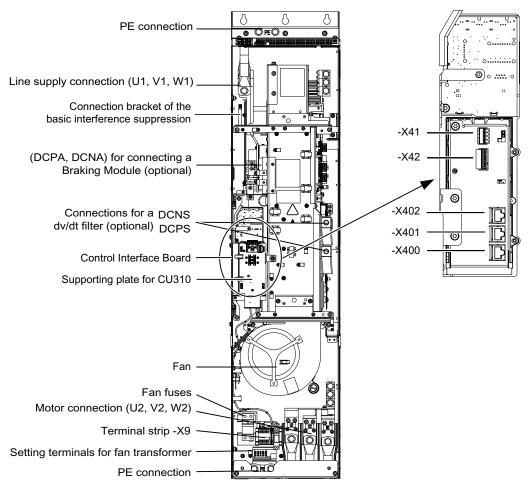


Figure 3-51 Power Module, frame size FX, with order number 6SL3310-1TE32-xAA0

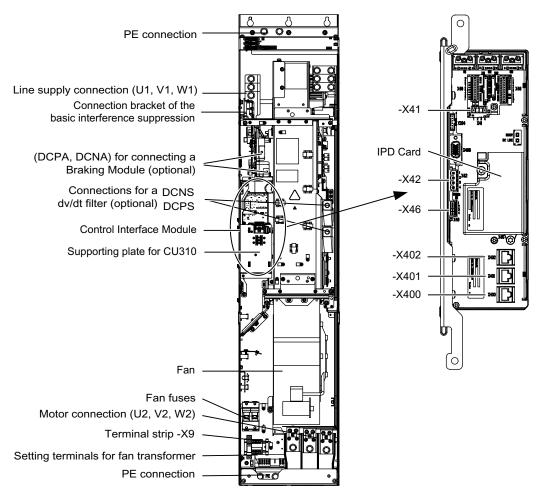


Figure 3-52 Power Module, frame size GX, with order number 6SL3310-1TE3x-xAA3

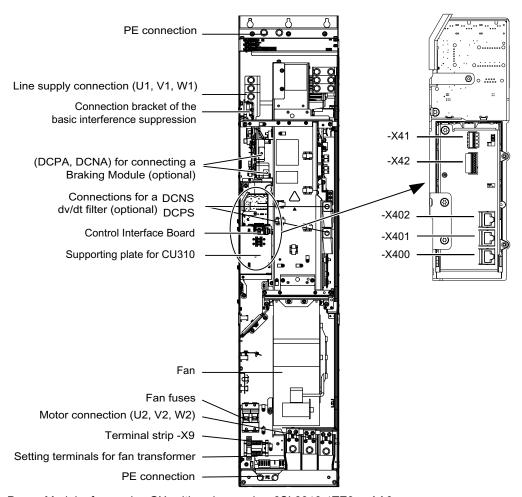


Figure 3-53 Power Module, frame size GX, with order number 6SL3310-1TE3x-xAA0

## 3.3.3.2 Sample connection

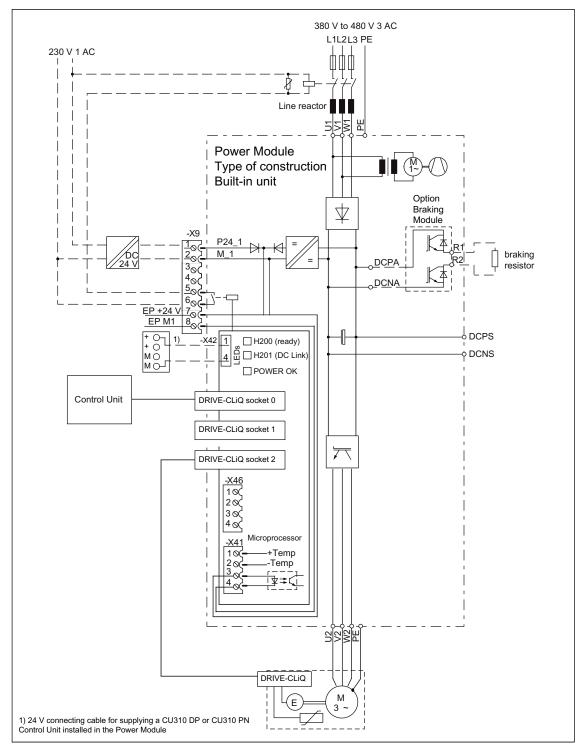


Figure 3-54 Connection example: Power Module built-in unit with order number 6SL3310-1TE3x-xAA3

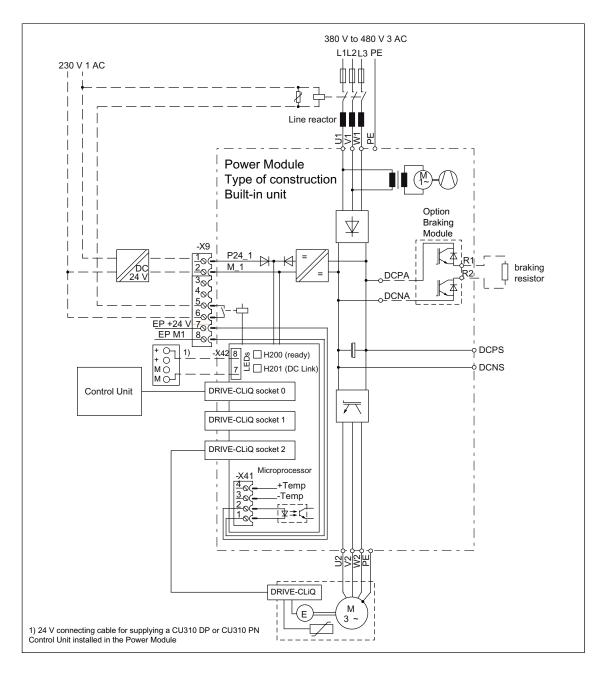


Figure 3-55 Connection example: Power Module built-in unit with order number 6SL3310-1TE3x-xAA0

#### 3.3.3.3 Terminal Block X9

Table 3- 22 Terminal strip X9

	Terminal	Signal name	Technical specifications
	1	P24V	Voltage: 24 V DC (20.4 V - 28.8 V)
	2	М	Current consumption: max 1.4 A
	3	Reserved, do not use	
8 4 8 8 8 8	4	Reserved, do not use	
	5	Main contactor	240 V AC/ max. 8 A
	6	Main contactor	30 V DC/ max. 1 A
	7	EP +24 V (Enable Pulses)	Supply voltage: 24 V DC (20,8 V - 28.8 V)
	8	EP M1 (Enable Pulses)	Current consumption: 10 mA Signal propagation times: L->H: 100 µs H->L: 1000 µs The pulse disable function is only available when Safety Integrated Basic Functions are enabled.

#### **NOTICE**

The function of the EP terminals is only available when Safety Integrated Basic Functions are enabled.

#### Note

If the "Safe Torque Off" function is selected, 24 V DC must be applied to terminal -X9:7 and terminal -X9:8 must be grounded. Upon removal, pulse inhibit is activated.

## 3.3.3.4 DCPS, DCNS connection for a dv/dt filter

Table 3- 23 DCPS, DCNS

Frame size	Cross-section that can be connected	Terminal screw
FX	1 x 35 mm <sup>2</sup>	M8
GX	1 x 70 mm²	M8

The connecting cable is fed-out downwards through the Power Module.

## 3.3.3.5 X41 EP terminal / temperature sensor connection

Table 3- 24 Terminal strip -X41, with order number 6SL3310–1TE3x–xAA3

	Terminal	Function	Technical specifications	
1234	2	EP M1 (enable pulses) EP +24 V (enable pulses)	Supply voltage: 24 V DC (20.4 V – 28.8 V)  Current consumption: 10 mA  Signal propagation delays:  L → H 100µs  H → L: 1000 µs	
	3	-Temp	Temperature sensor KTY84-130 / PTC / PT100 sensors	
	4	+Temp		
Max. cross-section that can be connected: 1.5 mm²				

Table 3- 25 Terminal strip -X41, with order number 6SL3310-1TE3x-xAA0

	Terminal	Function	Technical specifications	
	4	+Temp	Temperature sensor KTY84-1C130 / PTC	
4	3	-Temp		
$\begin{vmatrix} 3 \\ 2 \end{vmatrix}$	2	Reserved, do not use		
1	1	Reserved, do not use		
Max. cross-section that can be connected: 1.5 mm²				

NOTICE
The KTY temperature sensor must be connected with the correct polarity.

#### Note

The temperature sensor can be used for motors equipped with a KTY84-1C130 measurement sensor in the stator windings.

## 3.3.3.6 X42 terminal strip

With order numbers 6SL3320-1Txxx-xAA0: Reserved, do not use!

Table 3- 26 Terminal strip -X42, with order numbers 6SL3320-1Txxx-xAA3

	Terminal	Function	Technical specifications
	1	P24L	Voltage supply for Control Unit, Sensor Module and Terminal Module
	2		(18 28.8 V)
<b>©</b> □4 Þ	3	M	
	4		
Max. connec	table cross-secti	on 2.5 mm <sup>2</sup>	

#### Note

In their delivery condition, terminals 1 and 4 are provided with a connecting cable to supply a CU310 DP or CU310 PN Control Unit.



The terminal strip is not intended for free 24 V DC availability (for example for supplying further line-side components), as the voltage supply of the Control Interface Module could also be overloaded and operating capability could thus be compromised.

## 3.3.3.7 X46 Brake control and monitoring

Table 3- 27 Terminal strip -X46, brake control and monitoring; 6SL3320-1Txxx-xAA3

	Terminal	Function	Technical specifications	
	1	BR output +	Supply voltage: 24 V DC	
	2	BR output -	max. load current: 150 mA	
	3	FB input +		
	4	FB input -		
Max. connectable cross-section 1.5 mm <sup>2</sup>				

#### 3.3.3.8 DRIVE-CLiQ interface X400-X402

Table 3- 28 DRIVE-CLiQ interface X400-X402

	Pin	Name	Technical specifications
	1	TXP	Transmit data +
8 B	2	TXN	Transmit data -
8	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Α	+ (24 V)	Power supply
	В	GND (0 V)	Electronic ground

## 3.3.3.9 Meaning of the LEDs on the Power Module

#### Note

The following table only applies to Power Modules with order number 6SL3310-1TE3x-xAA3

Table 3- 29 Meaning of the LEDs "READY" and "DC LINK" on the Control Interface Module on the Power Module

LED state		Description			
READY	DC LINK				
Off	Off	The electronics power supply is missing or lies outside permissible tolerance range.			
	Off	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.			
Green	Orange	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC-link voltage is present.			
	Red	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC-link voltage is too high.			
Orange	Orange	DRIVE-CLiQ communication is being established.			
Red		At least one fault is present in this component.  Note:  The LED is activated regardless of whether the corresponding messages have been reconfigured.			
Green/Red (0.5 Hz)		Firmware is being downloaded.			
Green/Red (2 Hz)		Firmware download is complete. Wait for POWER ON.			
Green / orange or red / orange		Identifying whether the component is activated using the LED (p0124)  Note:  Both possibilities depend on the LED status when activated using p0124 = 1.			



# / DANGER

Irrespective of the state of the LED "DC LINK", hazardous DC-link voltages can always be present.

The warning information on the components must be carefully observed!

Table 3- 30 Meaning of the LED "POWER OK" on the Control Interface Module in the Power Module

LED	Color	State	Description
POWER OK	Green	Off	DC-link voltage < 100 V and voltage at X9:1/2 less than 12 V.
		On	The component is ready for operation.
		Flashing light	There is a fault. If the LED continues to flash after you have performed a POWER ON, please contact your Siemens service center.

#### Note

The following table only applies to Power Modules with order number 6SL3310-1TE3x-xAA0

Table 3- 31 Meaning of the LEDs "READY" and "DC LINK" on the Control Interface Board on the Power Module

LED state		Description			
H200 (ready)	H201 (DC Link)				
Off	Off	The electronic power supply is missing or outside the permissible tolerance range.			
	Off	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.			
Green	Orange	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC-link voltage is present.			
	Red	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC-link voltage is too high.			
Orange	Orange	DRIVE-CLiQ communication is being established.			
Red		At least one fault is present in this component.  Note:  The LED is activated regardless of whether the corresponding messages have been reconfigured.			
Green/Red (0.5 Hz)		Firmware is being downloaded.			
Green/Red (2 Hz)		Firmware download is complete. Wait for POWER ON.			
Green / orange or red / orange		Identifying whether the component is activated using the LED (p0124)  Note:  Both possibilities depend on the LED status when activated using p0124 = 1.			



## /!\DANGER

Independent of the state of LED "H201", hazardous DC-link voltages can always be available.

The warning information on the component must be carefully observed!

## 3.3.4 Dimension drawings

#### Dimension drawing frame size FX

The cooling clearances to be maintained are indicated by the dotted line.

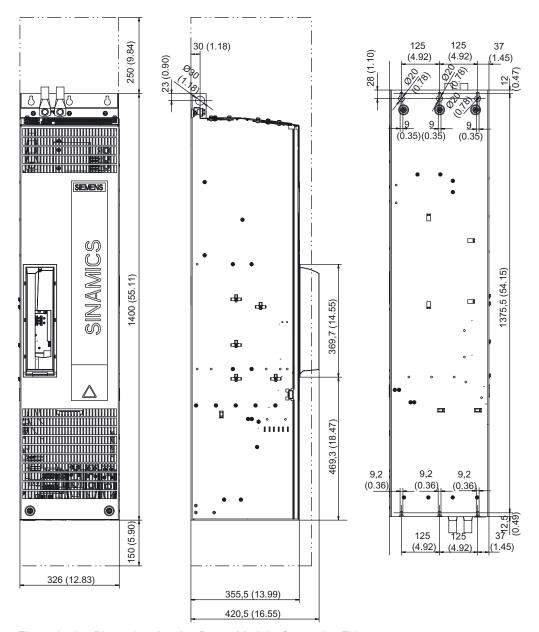


Figure 3-56 Dimension drawing Power Module, frame size FX

## Dimension drawing frame size GX

The cooling clearances to be maintained are indicated by the dotted line.

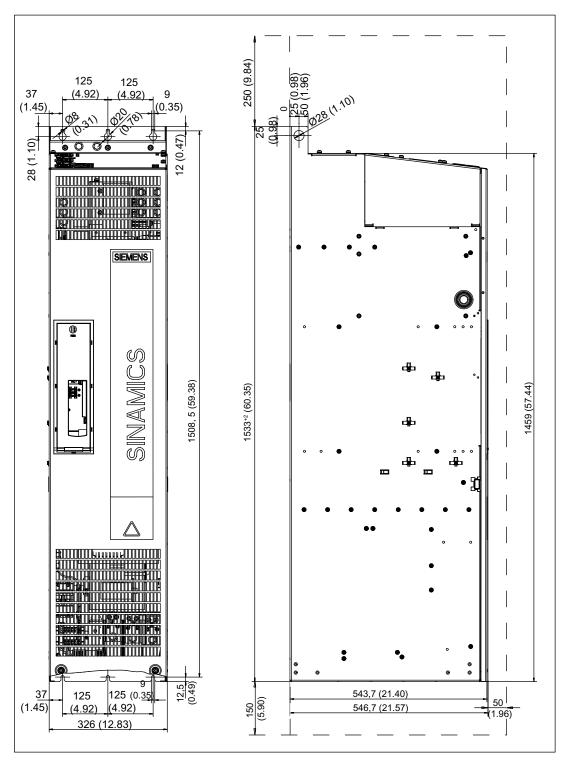


Figure 3-57 Dimension drawing Power Module, frame size GX

## 3.3.5 Mounting the CU310 in the Power Module Chassis

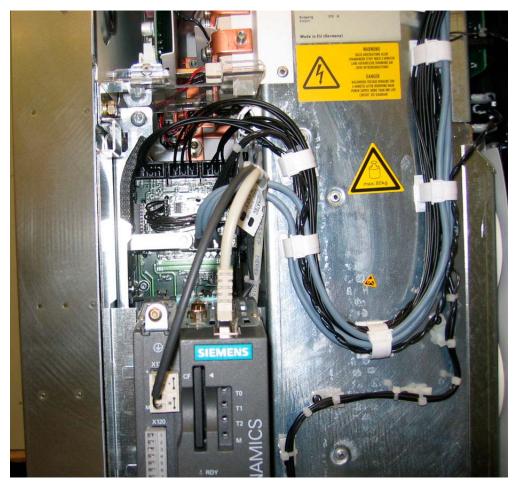


Figure 3-58 Mounting the CU310 in the Power Module chassis format, frame size FX

The DRIVE-CLiQ cable and the cable for the 24 V supply must be correctly routed so that the front flap can close.

#### Note

For the Power Module, a connecting cable is also supplied for the power supply of the CU310. Customers must connect-up this cable.

This means that the CU310 no longer has to be supplied from an external 24 V DC.

#### 3.3.6 Electrical connection

#### Adjusting the fan voltage (-T10)

The power supply for the device fans (1-ph. 230 V AC) in the Power Module (-T10) is taken from the line supply using transformers. The locations of the transformers are indicated in the interface descriptions.

The transformers are fitted with primary taps so that they can be fine-tuned to the line supply voltage. When delivered, the taps are always set to the highest level. With a low supply voltage, the appropriate transformer tap must be activated.

The connections at the setting terminals must be connected to "0" and the line supply voltage.

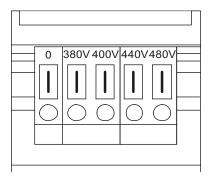


Figure 3-59 Setting terminals for the fan transformers

The supply voltage assignments for making the appropriate setting on the fan transformer are indicated in the following table (factory presetting): 480 V/0 V)

#### **CAUTION**

If the terminals are not changed-over to reflect the actual line supply voltage:

- The required cooling level will not provided (risk of overheating)
- The fan fuses may blow (overload)

Table 3- 32 Assignment of the existing line supply voltage for setting at the fan transformer

Line supply voltage	Tap at the fan transformer (-T10)
380 V ± 10 %	380 V
400 V ± 10 %	400 V
440 V ± 10 %	440 V
480 V ± 10 %	480 V

# Removing the connection bracket for the interference suppression capacitor with operation from an ungrounded supply

If the Power Module is operated from a non-grounded network/IT system, the connection bracket for the interference suppression capacitor of the Power Module must be removed.

For the position of the connection bracket, see the Power Module overview section.

# / WARNING

Failing to remove the connection bracket for the interference suppression capacitor on a non-grounded network/IT system can cause significant damage to the built-in unit.

#### 3.3.7 Technical data

Table 3- 33 Technical specifications, Power Modules in chassis format

Order no.:	6SL3310-	1TE32-1AA0 1TE32-1AA3	1TE32-6AA0 1TE32-6AA3	1TE33-1AA0 1TE33-1AA3	1TE33-8AA0 1TE33-8AA3	1TE35-0AA0 1TE35-0AA3
Rated output current In	Α	210	260	310	380	490
Base load current I <sub>L</sub>	Α	205	250	302	370	477
Base load current I <sub>H</sub>	Α	180	233	277	340	438
Output current for S6 duty (40%) I <sub>S6</sub>	А	230	285	340	430	540
Max. output current I <sub>max</sub>	Α	307	375	453	555	715
Supply voltages Electronics power supply Overvoltage trip Undervoltage trip	V <sub>DC</sub> V <sub>DC</sub> V <sub>DC</sub>	24 (20,4 - 28,8 820 ± 2 % 424	3)			
Rated power based on In	kW	110	132	160	200	250
Rated power based on I <sub>H</sub>	kW	90	110	132	160	200
Max. rated pulse frequency without derating	kHz	2	2	2	2	2
Max. rated pulse frequency with derating	kHz	8	8	8	8	8
Power loss	kW	2,46	3,27	4,0	4,54	5,78
Cooling air requirement	m³/s	0,17	0,23	0,36	0,36	0,36
Sound pressure level at 50/60 Hz	dB(A)	66 / 67	68 / 72	68 / 72	68 / 72	68 / 72
Rated input current	Α	218	270	322	395	510
Electronics current drain (24 V DC)	A	0,8	0,8	0,9	0,9	0,9
Class J UL safety fuses Rated current Rated short-circuit current SCCR	A kA	250 65	300 65	350 65	400 65	600 65
Safety fuses NH Rated current	A	3NA3144 250	3NA3250 300	3NA3254 355	3NA3260 400	3NA3372 630
Circuit-breaker type designation IEC 60947 Rated current	А	3VL4725- 1DC36-0AA0 200 - 250	3VL4731- 1DC36-0AA0 250 - 315	3VL4740- 1DC36-0AA0 320 - 400	3VL5750- 1DC36-0AA0 400 - 500	3VL5763- 1DC36-0AA0 500 - 630

Line supply voltage 3-ph. 380 \ Order no.:	6SL3310-	1TE32-1AA0	1TE32-6AA0	1TE33-1AA0	1TE33-8AA0	1TE35-0AA0
Order no	03L3310-	1TE32-1AA3	1TE32-6AA3	1TE33-1AA3	1TE33-8AA3	1TE35-0AA3
Circuit-breaker type designation UL489 / CSA C22.2 No. 5-02		3VL3125- 3KN30-0AA0	3VL4130- 3KN30-0AA0	3VL4135- 3KN30-0AA0	3VL4140- 3KN30-0AA0	3VL4560- 3KN30-0AA0
Rated current Rated short-circuit current SCCR	A kA	250 65	300 65	350 65	400 65	600 65
Line supply connection U1, V1, W1		Flat connector mm <sup>2</sup>	for M10 cable I	ug, max. connec	ction cross-secti	ion 2 x 185
Motor connection U2, V2, W2		Flat connector for M10 cable lug, max. connection cross-section 2 x 185 mm <sup>2</sup>			ion 2 x 185	
DC link connections DCPA, DCNA, (option Braking Module)		Flat connector for M8 cable lug, connection cross-section 1 x 35 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 35 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 50 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 50 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 50 mm <sup>2</sup>
DC link connections DCPS, DCNS (option dv/dt filter)		Flat connector for M8 cable lug, connection cross-section 1 x 35 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 35 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 70 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 70 mm <sup>2</sup>	Flat connector for M8 cable lug, connection cross-section 1 x 70 mm <sup>2</sup>
PE connection		Flat connector mm <sup>2</sup>	for M10 cable li	ug, max. connec	ction cross-secti	ion 2 x 185
Max. motor cable length <sup>1)</sup>	m	300 (shielded) 450 (non-shiel				
Max. ambient temperature without derating with derating	°C °C	40 55	40 55	40 55	40 55	40 55
Degree of protection		IP 20 or IPXXB				
Width	mm	326	326	326	326	326
Height	mm	1400	1400	1533	1533	1533
Depth	mm	356	356	545	545	545
Frame size		FX	FX	GX	GX	GX
Weight	kg	104	104	162	162	162

<sup>&</sup>lt;sup>1)</sup> Max. motor cable length 100 m (shielded) in conjunction with a line filter to maintain the EMC limit values of EN 61800-3 Category C2.

#### 3.3.7.1 Characteristics

#### Overload capability

The Power Modules are equipped with an overload reserve e.g. to handle breakaway torques.

In drives with overload requirements, the appropriate base load current must, therefore, be used as a basis for the required load.

The criterion for overload is that the drive is operated with its base load current before and after the overload occurs (a load duration of 300 s is used as a basis here).

#### Low overload

The base load current for low overload  $I_L$  is based on a load duty cycle of 110% for 60 s or 150% for 10 s with a load duty duration of 300 s.

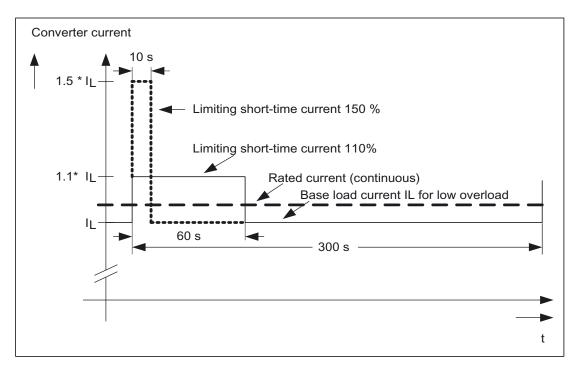


Figure 3-60 Low overload

#### High overload

The base load current for high overload  $I_{H}$  is based on a load duty cycle of 150% for 60 s or 160% for 10 s with a load duty duration of 300 s.

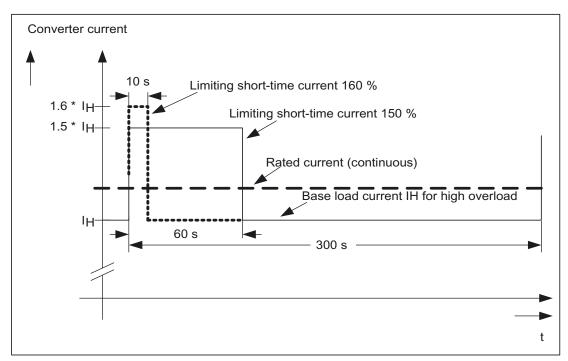


Figure 3-61 High overload

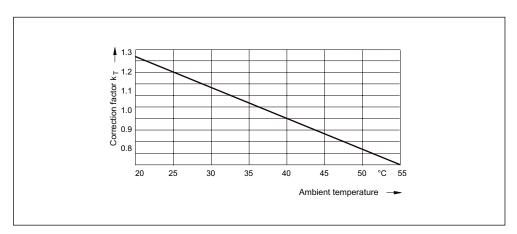


Figure 3-62 Current correction factor as a function of ambient temperature

Note: A factor  $k_T > 1.0$  is only to be taken into account in conjunction with the current correction factor  $k_I$  depending on the installation altitude.

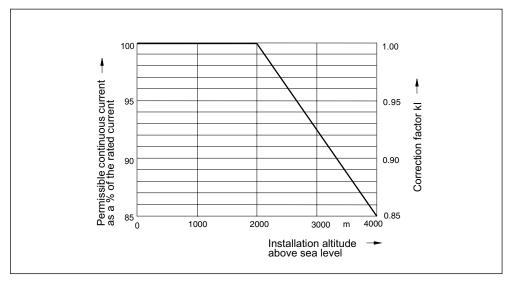


Figure 3-63 Current correction factor as a function of installation altitude

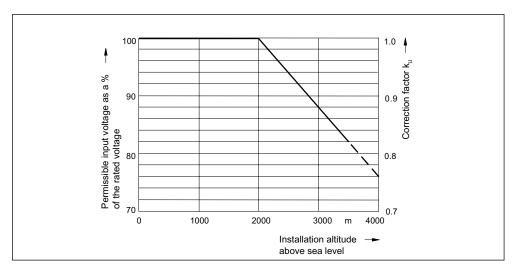


Figure 3-64 Voltage correction factor as a function of installation altitude

## 3.3.7.2 Current de-rating as a function of the pulse frequency

When the pulse frequency is increased, the derating factor of the output current must be taken into account.

This derating factor must be applied to the currents specified in the technical data.

Table 3- 34 Derating factor of the output current as a function of the pulse frequency

Order No. 6SL3310	Power [kW]	Output current for a pulse frequency of 2 kHz [A]	Derating factor for a pulse frequency of 4 kHz
1TE32-1AA0	110	210	82 %
1TE32-6AA0	132	260	83 %
1TE33-1AA0	160	310	88 %
1TE33-8AA0	200	380	87 %
1TE35-0AA0	250	490	78 %

#### Maximum output frequencies achieved by increasing the pulse frequency

By multiplying the rated pulse frequency with a multiple integer, the following output frequencies can be achieved taking into account the derating factors:

Table 3- 35 Maximum output frequencies achieved by increasing the pulse frequency

Pulse frequency [kHz]	Maximum output frequency [Hz]	
2	160	
4	320	
8	640	

DC link components

## 4.1 Blocksize

## 4.1.1 Braking resistors

## 4.1.1.1 Description

The PM340 Power Modules cannot regenerate into the line supply. For regenerative operation, e.g. the braking of a rotating mass, a braking resistor must be connected to convert the resulting energy into heat.

A temperature protection switch monitors the braking resistor for overtemperature and issues a signal on a floating contact if the limit value is exceeded.

## 4.1.1.2 Safety information



The surface temperature of the braking resistors may exceed 80 °C.

## Protecting the resistance

The power supply to the Power Modules must be established through a contactor which can then shut down the power supply when the resistor overheats.

A temperature protection switch handles the protective function (this is supplied with each break resistor). This is connected in series with the coil feeder cable for the main contactor.

The contacts of the temperature protection switch close again as soon as the resistor temperature has fallen below the selected value.

## 4.1 Blocksize

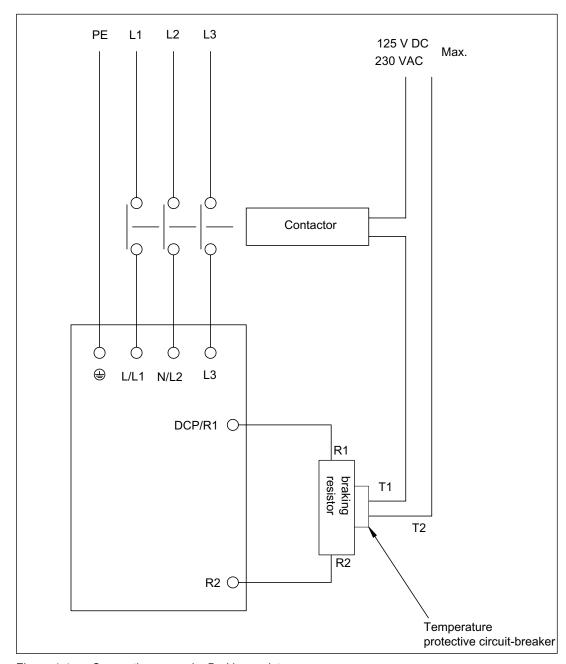


Figure 4-1 Connection example: Braking resistor

# 4.1.1.3 Dimension drawings

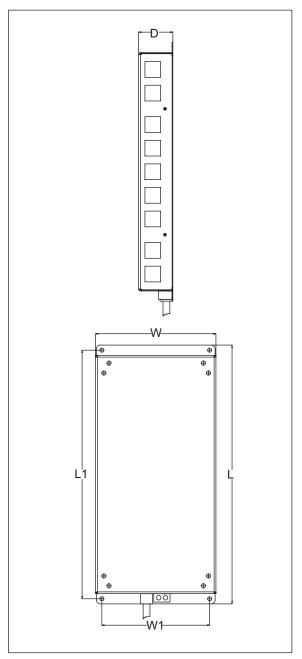


Figure 4-2 Dimension drawing: Braking resistor, frame sizes FSA and FSB

# 4.1 Blocksize

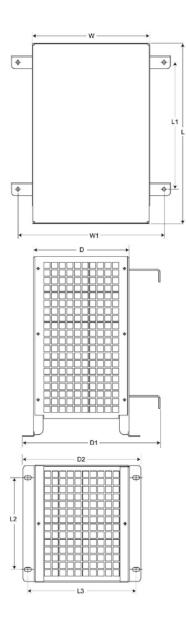


Figure 4-3 Dimension drawing: Braking resistor, frame sizes FSC, FSD, FSE, FSF

230 (9,05)

Order number	6SE6400-4BC05-0AA0	6SE6400-4BD11-0AA0	6SL3201-0BE12-0AA0	6SE6400-4BD16-5CA0
Frame size	FSA	FSA	FSB	FSC
L	230 (9,05)	230 (9,05)	239 (9,40)	285 (11,22)
L1	217 (8,54)	217 (8,54)	226 (8,89)	200 (7,87)
L2	-	-	-	145 (5,70)
L3	-	-	-	170 (6,69)
D	43,5 (1,71)	43,5 (1,71)	43,5 (1,71)	150 (5,90)
D1	-	-	-	217 (8,54)
D2	-	-	-	185 (7,28)
W	72 (2.83)	72 (2.83)	149 (5.86)	185 (7.28)

56 (2,20)

133 (5,24)

Table 4-1 Dimension data: Braking resistor, all data in mm and (inches), Part 1

Table 4-2 Dimension data: Braking resistor, all data in mm and (inches), Part 2

56 (2,20)

Order number	6SE6400-4BD21-2DA0	6SE6400-4BD22-2EA0	6SE6400-4BD24-0FA0
Frame size	FSD	FSE	FSF
L	515 (20,27)	645 (25,39)	650 (25,59)
L1	350 (13,77)	480 (18,89)	510 (20,07)
L2	205 (8,07)	205 (8,07)	270 (10,62)
L3	195 (7,67)	195 (7,67)	335 (13,18)
D	175 (6,88)	175 (6,88)	315 (12,40)
D1	242 (9,52)	242 (9,52)	382 (15,03)
D2	210 (8,26)	210 (8,26)	382 (15,03)
W	270 (10,62)	270 (10,62)	400 (15,74)
W1	315 (12,40)	315 (12,40)	435 (17,12)

## 4.1.1.4 Mounting

W1

The braking resistor is connected at terminals DCP/R1 and R2.

The braking resistors can be installed at the side next to the PM340 Power Modules. The braking resistors for the FSA and FSB frame sizes are designed as sub-chassis components. If the PM340 Power Modules of the FSA or FSB frame size are operated without line reactor, the braking resistors can also be installed under the Power Modules.

The braking resistors can be installed horizontally or vertically. The connections on vertically installed resistors must be at the bottom.

The braking resistors for the Power Modules of the FSC to FSF frame sizes should be placed outside the control cabinet or the switchgear room in order to direct the resulting heat loss away from the Power Modules. This reduces the level of air conditioning required.

## 4.1 Blocksize

## 4.1.1.5 Technical data

Table 4-3 Technical data, braking resistors, Part 1

Order No.		6SE6400- 4BC05-0AA0	6SE6400- 4BD11-0AA0	6SL3201- 0BE12-0AA0	6SE6400- 4BD16-5CA0
Resistance	Ohm	180	390	160	56
Rated power PDB	kW	0.05	0.1	0.2	0.65
Peak power P <sub>max</sub>	kW	1	1.7	4.0	13
Load duration for peak power T <sub>a</sub>	s	27.6	13.8	12.6	13.1
Period duration of braking duty cycle t	s	276	276	252	262
Degree of protection		IP20 or IPXXB	IP20 or IPXXB	IP20 or IPXXB	IP20 or IPXXB
Power Connections		Cable 3 x 2.5 mm <sup>2</sup> shielded, length 0.4 m	Cable 3 x 2.5 mm <sup>2</sup> shielded, length 0.5 m	Cable 3 x 2.5 mm <sup>2</sup> shielded, length 0.5 m	Cable 3 x 2.5 mm <sup>2</sup> shielded, length 0.9 m
Thermoswitch (NC contact) maximum contact load connecting cable		250 V <sub>AC</sub> / 2.5 A			
Weight	kg	1.0	1.0	1.6	3.8

Table 4-4 Technical data, braking resistors, Part 2

Order No.	6SE6400-	4BD21-2DA0	4BD22-2EA0	4BD24-0FA0
Resistance	Ohm	27	15	8.2
Rated power P <sub>DB</sub>	kW	1.2	2.2	4.0
Peak power P <sub>max</sub>	kW	24	44	80
Load duration for peak power Ta	s	13.6	14.5	13.1
Period duration of braking duty cycle t	s	271	290	252
Degree of protection		IP20 or IPXXB	IP20 or IPXXB	IP20 or IPXXB
Power Connections		M6 studs	M6 studs	M6 studs
Thermoswitch (NC contact) maximum contact load connecting cable		250 V <sub>AC</sub> / 2.5 A	250 V <sub>AC</sub> / 2.5 A	250 V <sub>AC</sub> / 0.2 A
Weight	kg	7.4	10.6	16.7

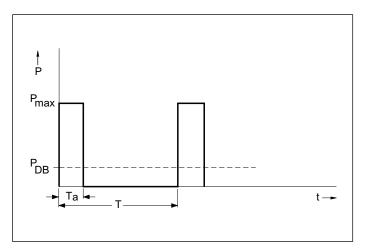


Figure 4-4 Load diagram for the braking resistor, Blocksize format

T [s] period duration of braking duty cycle

Ta [s] load duration for peak power

 $\mathsf{P}_{\mathsf{DB}}\left[W\right]$  rated power of the braking resistor

 $P_{\text{max}}\left[W\right]$  peak braking power of the braking resistor

## 4.2 Chassis

## 4.2.1 Braking Modules

## 4.2.1.1 Description

A Braking Module (and an external braking resistor) is required in certain cases when the drive is to be braked or brought to a standstill (e.g. EMERGENCY SWITCHING-OFF Category 1). The Braking Module contains the power electronics and the associated control. The supply voltage for the electronics is taken from the DC link.

During operation, the DC link energy is converted to heat loss in an external braking resistor.

A mounting slot is provided in the Power Module.

## Design

The Braking Module in chassis format is installed in a slot within the Power Module and force-cooled by its fan. The Braking Module is connected to the DC link by means of flexible cables, which are supplied as standard.

The Braking Module has as standard, the following interfaces:

- The DC link is connected through flexible cables
- Connecting terminal for external braking resistor
- 1 digital input (inhibit Braking Module with high signal/acknowledge error with negative edge high low)
- 1 digital output (Braking Module defective)
- · DIP switch for adjusting the starting threshold

## 4.2.1.2 Safety information



After disconnecting all the supply voltages, a hazardous voltage will be present in all components for another 5 minutes. Work may not be carried out on the components until after this time has elapsed.

Before starting work, you should also measure the voltage after the 5 minutes have elapsed! The voltage can be measured on DC link terminals DCP and DCN.

# /!\DANGER

The DC link discharge voltage hazard warning in the local language must be attached to all of the components.

# / DANGER

The connection to the braking resistors must be short-circuit/ground-fault proof.

# / WARNING

If braking resistors are used that have not been released by SIEMENS for SINAMICS, then the braking resistors could be destroyed.

# 4.2.1.3 Braking Module for frame size FX

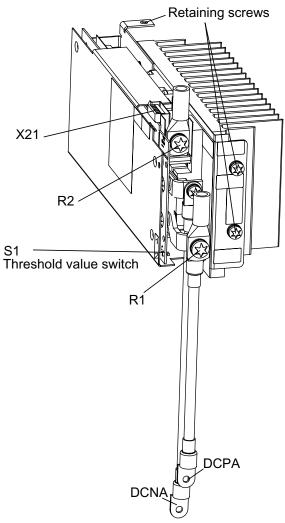


Figure 4-5 Braking Module for Power Module, frame size FX

## Note

With this Braking Module, the R1 and DCPA interfaces use the same connection.

# 4.2.1.4 Braking Module for type GX

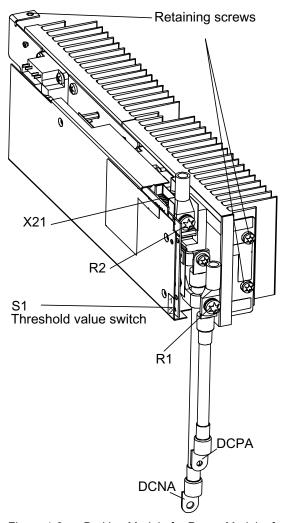


Figure 4-6 Braking Module for Power Module, frame size GX

#### Note

With this Braking Module, the R1 and DCPA interfaces use the same connection.

# 4.2.1.5 Sample connection

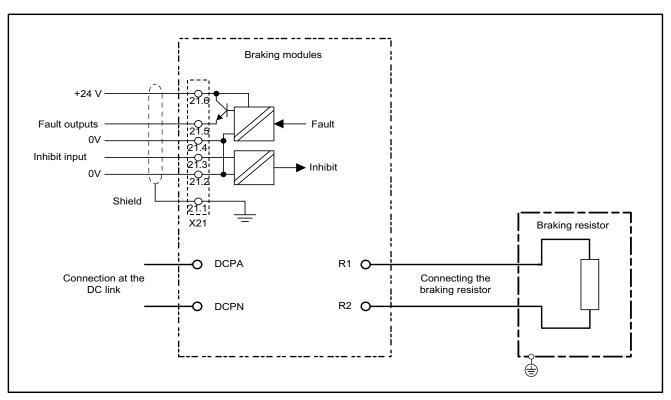


Figure 4-7 Example connection of Braking Module

# 4.2.1.6 Braking resistor connection X1

Table 4-5 Braking resistor connection

Terminal	Designation	
R1	Braking resistor connection R+	
R2	Break resistor connection R-	
Max. cross-section that can be connected: 50 mm <sup>2</sup>		

## 4.2.1.7 X21 digital inputs/outputs

Table 4-6 Terminal block X21

	Terminal	Designation 1)	Technical specifications
	1	Shield	Shield connection for terminal 2 6
	2	0 V	Low signal level: -3 V to 5 V
2 3	3	DI inhibit input	High signal level: +15 V to 30 V Current drain: 2 mA to 15 mA
4	4	0 V	Voltage: 24 V DC
5	5	DO fault output	Load current: 0.5 mA to 0.6 mA
6	6	+24 V	Voltage: +18 V to 30 V Typical current consumption (own current consumption): 10 mA at 24 V DC
Max. connect	table cross-se	ection 1.5 mm <sup>2</sup>	

<sup>1)</sup> DI: Digital input; DO: Digital output

#### Note

Applying a high signal to terminal X21.3 inhibits the Braking Module. On a falling edge, pending error signals are acknowledged.

## 4.2.1.8 S1 Threshold switch

The response threshold at which the Braking Module is activated and the DC-link voltage generated during braking are specified in the following table.



The threshold switch must only be used when the Power Module is switched off and the DC link capacitors are discharged.

Table 4-7 Response thresholds of the Braking Modules

Response threshold	Switch position	Comment
673 V	1	774 V is the default factory setting. For line supply voltages of between 3-ph.
774 V	2	380 V and 400 V AC, the response threshold can be set to 673 V to reduce the voltage stress on the motor and Power Module. This does, however, reduce the possible braking power with the square of the voltage (673/774) <sup>2</sup> = 0.75.
		The maximum possible braking power is, therefore, 75%.

# 4.2.1.9 Installing a Braking Module in a Power Module, frame size FX

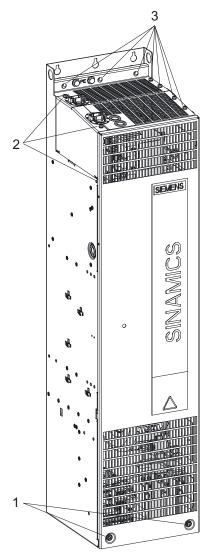


Figure 4-8 Installing a Braking Module in a Power Module, frame size FX – steps 1 - 3

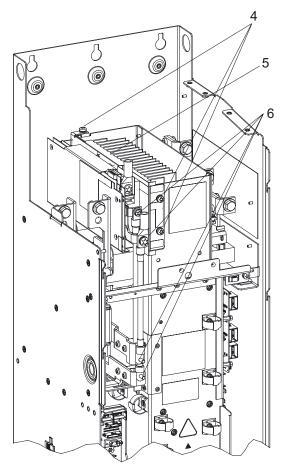


Figure 4-9 Installing a Braking Module in a Power Module, frame size FX – steps 4 - 6

## Installing the Braking Module

The steps for the installation procedure are numbered in accordance with the diagrams in front of them.

- 1. Unscrew the 2 M6 screws from the front cover and lift off the cover.
- Unscrew the 2 screws from the upper cover plate.
   Unscrew the 1 M6 nut on the left-hand side.
   Remove the left-hand cover.
- 3. Unscrew the 4 screws from the upper cover plate.
  Unscrew the 3 screws from the rear cut-out sections.
  Remove the top cover.
- 4. Unscrew the 3 screws for the blanking plate. Remove the plate.
- 5. Insert the Braking Module where the cover used to be and secure it using the 3 screws (step 4).
- 6. Secure the connection cable to the DC link with 2 screws (Braking Module connection) and 2 nuts (DC link connection).

Carry out the subsequent steps in reverse order from steps 1 - 3.

## 4.2 Chassis

An opening above the connections for the braking resistor (R1, R2) is provided in the cover for connecting the cable to the braking resistor.

#### Note

You must observe the specified tightening torques.

## 4.2.1.10 Installing a Braking Module in a Power Module, frame size GX

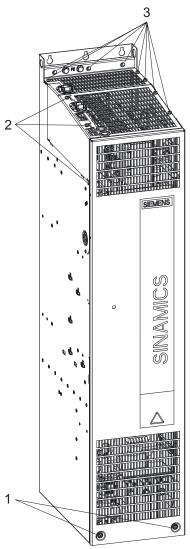


Figure 4-10 Installing a Braking Module in a Power Module, frame size GX – steps 1 - 3

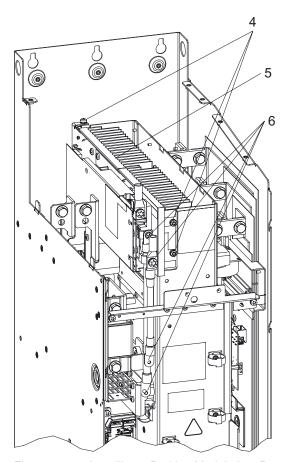


Figure 4-11 Installing a Braking Module in a Power Module, frame size GX – steps 4 - 6

## Installing the Braking Module

The steps for the installation procedure are numbered in accordance with the diagrams in front of them.

- 1. Unscrew the 2 M6 screws from the front cover and lift off the cover.
- Unscrew the 2 screws from the upper cover plate.
   Unscrew the 1 M6 nut on the left-hand side.
   Remove the left-hand cover.
- 3. Unscrew the 4 screws from the upper cover plate.
  Unscrew the 3 screws from the rear cut-out sections.
  Remove the top cover.
- 4. Unscrew the 3 screws for the blanking plate. Remove the plate.
- 5. Insert the Braking Module where the cover used to be and secure it using the 3 screws (step 4).
- 6. Secure the connection cable to the DC link with 2 screws (Braking Module connection) and 2 nuts (DC link connection).

Carry out the subsequent steps in reverse order from steps 1 - 3.

#### 4.2 Chassis

An opening above the connections for the braking resistor (R1, R2) is provided in the cover for connecting the cable to the braking resistor.

#### Note

You must observe the specified tightening torques.

#### 4.2.1.11 Technical data

Table 4-8 Technical data, Braking Modules

Order No.	6SL3300-1AE31-3AA0	6SL3300-1AE32-5AA0
Suitable for installation in Power Modules, frame size	FX	GX
P <sub>DB</sub> power (rated power)	25 kW	50 kW
P <sub>15</sub> power (peak power)	125 kW	250 kW
P <sub>20</sub> power	100 kW	200 kW
P <sub>40</sub> power	50 kW	100 kW
Variable response thresholds	774 V (673 V)	774 V (673 V)
Digital input		
Rated voltage	-3 V to 30 V	-3 V to 30 V
Low level (an open digital input is interpreted as "low")	-3 V to 5 V	-3 V to 5 V
High level	15 V to 30 V	15 V to 30 V
Current drain (typical at 24 V DC)	10 mA	10 mA
Max. cross-section that can be connected	1.5 mm <sup>2</sup>	1.5 mm²
Digital output (continued-short-circuit-proof)		
Rated voltage	24 V DC	24 V DC
Max. load current of the digital output	500 mA	500 mA
Max. cross-section that can be connected	1.5 mm²	1.5 mm²
R1/R2 connection	M8 screw	M8 screw
Max. connection cross-section R1/R2	35 mm²	50 mm²
Weight	3.6 kg	7.3 kg

# 4.2.2 Braking resistors

## 4.2.2.1 Description

The braking resistor is used to reduce the excess DC link energy in regenerative operation.

The braking resistor is connected to the Braking Module. The braking resistor is mounted outside the cabinet or switchgear room. This means that the resulting heat loss around the Power Module can be dissipated - and cooling costs/equipment reduced.

Resistors with rated powers of 25 kW and 50 kW are available.

Braking resistors can be used on Power Modules with a voltage range. This is the reason that the voltage can be changed by setting the response thresholds at the Braking Module to reduce the voltage stress on the motor and Power Module.

A temperature protection switch monitors the braking resistor for overtemperature and issues a signal on a floating contact if the limit value is exceeded.

## 4.2.2.2 Safety information



A cooling clearance of 200 m must be maintained on all sides of the component (with ventilation meshes).

# DANGER

The braking resistor cables must be laid in such a way that they are short-circuit and ground-fault proof.

# / CAUTION

The connecting cables to the Braking Module in the Power Module must be kept as short as possible (max. 100 m).

# /!\DANGER

The braking resistors are only suitable for base mounting.

Sufficient space must be available for dissipating the energy converted by the braking resistor.

A sufficient distance from flammable objects must be maintained.

The braking resistor must be vertically installed as a free-standing unit.

Objects must not be placed on or anywhere above the braking resistor.

The braking resistor should not be installed underneath fire detection systems, since these could be triggered by the resulting heat.

For outdoor installation, a hood should be provided to protect the braking resistor against precipitation (in accordance with degree of protection IP20).

The surface temperature of the braking resistors may exceed 80 °C.

## 4.2.2.3 Dimension drawing

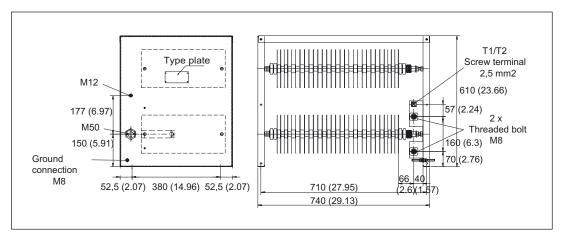


Figure 4-12 Dimension drawing, 25 kW/125 kW resistor

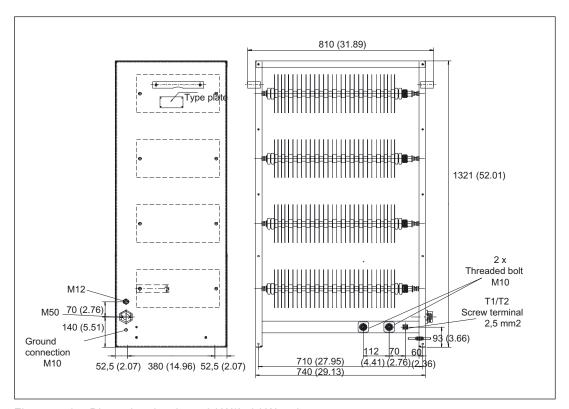


Figure 4-13 Dimension drawing, 50 kW/250 kW resistor

#### 4.2.2.4 Electrical connection



The Braking Module must only be connected when the Power Module has been disconnected from the power supply and the DC link capacitors have been discharged.

## **CAUTION**

The braking resistor cables must be laid in such a way that they are short-circuit and ground-fault proof.

The length of the connecting cables between the Braking Module and external braking resistor must not exceed 100 m.

Recommended cable cross-sections:

For 25 kW: 50 mm²
 For 50 kW: 70 mm²

#### Thermostatic switch

A thermostatic switch is installed to protect the braking resistor against overload. Its floating contacts must be integrated in the fault chain on the line side.

Table 4-9 Thermostatic switch connection

Terminal	Function
T1	Thermostatic switch connection
T2	Thermostatic switch connection

Max. connectable cross-section: 2.5 mm²

#### 4.2.2.5 Technical data

Table 4- 10 What are the technical data of the braking resistors

Order No.:	Units	6SL3000-1BE31-3AA0	6SL3000-1BE32-5AA0
P <sub>DB</sub> power (rated power)	kW	25	50
P <sub>15</sub> power (peak power)	kW	125	250
Max. current	Α	189	378
Cable entry		Via cable gland M50	Via cable gland M50
Line connection		Via stud M10	Via stud M10
Max. connectable cable cross-section	mm²	50	70
Degree of protection		IP20	IP20
Width x height x depth	mm	740 x 605 x 485	740 x 1325 x 485

## 4.2 Chassis

Order No.:	Units	6SL3000-1BE31-3AA0	6SL3000-1BE32-5AA0
Thermoswitch (NC contact) maximum contact load connecting cable		240 V <sub>AC</sub> / 10 A	240 V <sub>AC</sub> / 10 A
Weight	kg	50	120

## **Duty cycle**

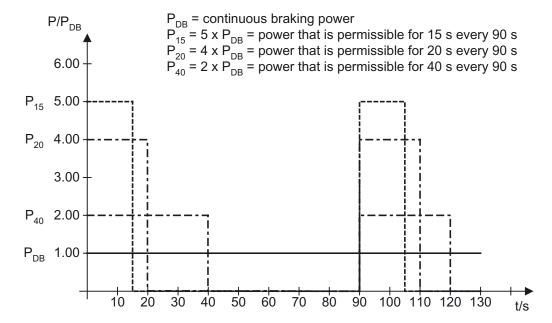


Figure 4-14 Duty cycle for braking resistors

Motor-side power components

# 5

## 5.1 Motor reactors

#### 5.1.1 Blocksize

#### 5.1.1.1 Description

Motor reactors reduce the voltage stress on the motor windings by reducing the voltage gradients at the motor terminals that occur when motors are fed from drive converters. At the same time, the capacitive re-charging currents that additionally load the output of the Power Module when longer motor cables are used are simultaneously reduced.

The motor reactors for Power Modules 3-ph. 380 V to 480 V AC are suitable for a pulse frequency of 4 kHz. Higher pulse frequencies are not permissible.

## 5.1.1.2 Safety information

# / WARNING

The 100 mm clearances above and below the components must be observed.

## Note

The connecting cables to the Power Module must be kept as short as possible (max. 5 m).

#### CAUTION

When using motor reactors that SIEMENS has not approved for SINAMICS, then these can thermally damage the reactor.

# / CAUTION

The surface temperature of the motor reactors can exceed 80 °C.

#### **CAUTION**

The maximum permissible output frequency when motor reactors are used is 150 Hz.

## **CAUTION**

The maximum permissible pulse frequency when motor reactors are used is 4 kHz.

## 5.1.1.3 Dimension drawings

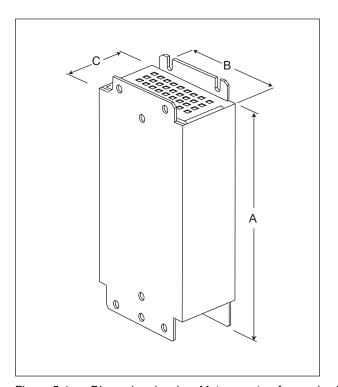


Figure 5-1 Dimension drawing: Motor reactor, frame size FSA

Table 5- 1 Total dimensions: Motor reactor, frame size FSA, all data in mm and (inches)

Motor reactor 6SE6400-	3TC00-4AD2
Frame size	FSA
Dimension A in mm and (inches)	200 (7,87)
Dimension B in mm and (inches)	75,5 (2,97)
Dimension C in mm and (inches)	110 (4,33)

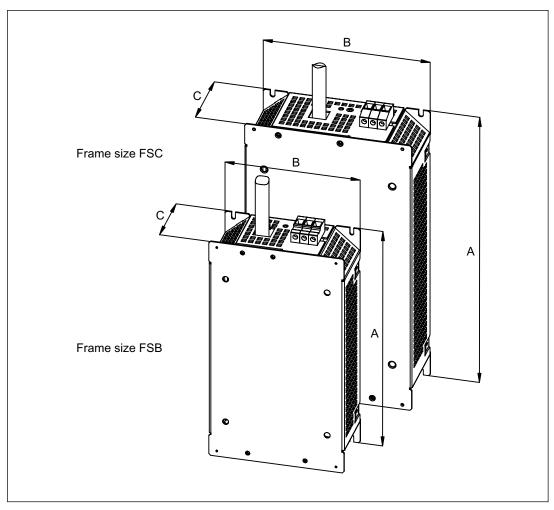


Figure 5-2 Dimension drawing: Motor reactor, frame sizes FSB and FSC

Table 5-2 Total dimensions: Motor reactor, frame sizes FSB and FSC

Motor reactor 6SL3202-	0AE21-0CA0	0AJ23-2CA0
Frame size	FSB	FSC
Dimension A in mm and (inches)	270 (10,62)	334 (13,14)
Dimension B in mm and (inches)	153 (6,02)	189 (7,44)
Dimension C in mm and (inches)	70 (2,75)	50 (1,96)

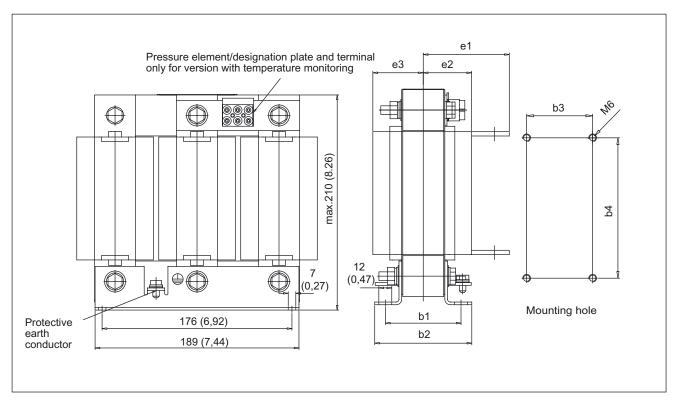


Figure 5-3 Dimension drawing: Motor reactor, frame size FSD

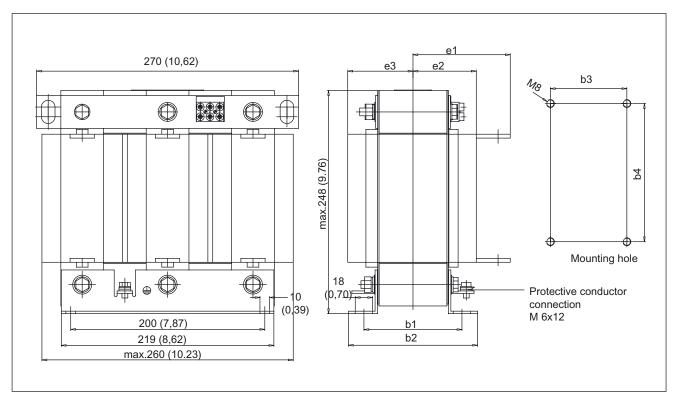


Figure 5-4 Dimension drawing: Motor reactor, frame size FSE

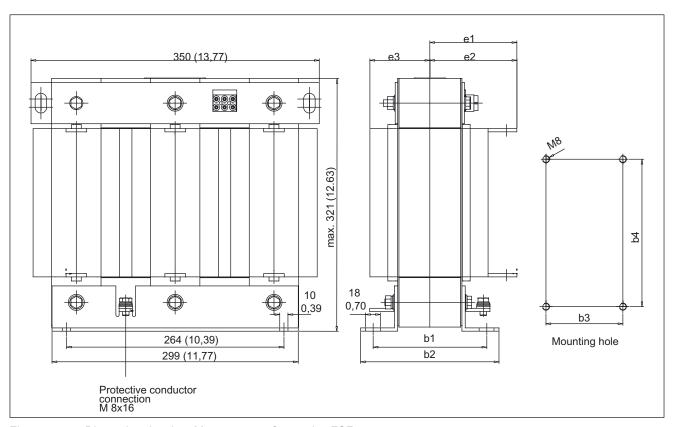


Figure 5-5 Dimension drawing: Motor reactor, frame size FSF

Table 5-3 Total dimensions: Motor reactor, frame sizes FSD, FSE, all data in mm and (inches)

Motor reactor 6SE6400-	3TC05-4DD0	3TC03-8DD0	3TC07-5ED0	3TC08-0ED0
Frame size	FSD	FSD	FSE	FSE
b1	70 (2,75)	94 (3,70)	101 (3,97)	70 (2.75)
b2	91 (3,58)	115 (4,52)	133 (5,23)	90 (3.54)
b3	70 (2,75)	94 (3,70)	101 (3,97)	70 (2.75)
b4	176 (6,92)	176 (6,92)	200 (7,87)	176 (6.92)
e1	91 (3,58)	103 (4,05)	110 (4,33)	89 ± 2 (3.50 ± 0.07)
e2	57 (2,24)	69 (2,71)	76 (2,99)	79 ± 2 (3.50 ± 0.07)
e3	49 (1,92)	61 (2,40)	68 (2,67)	-

Table 5-4 Total dimensions: Motor reactor, frame size FSF, all data in mm and (inches)

Motor reactor 6SE6400-	3TC14-5FD0	3TC15-4FD0
Frame size	FSF	FSF
b1	138 (5,43)	101 (3.97)
b2	169 (6,65)	121 (4.76)
b3	138 (5,43)	101 (3.97)
b4	264 (10,39)	200 (7.87)
e1	131 (5,15)	119 ± 2 (4.68 ± 0.07)
e2	90 (3,54)	109 ± 2 (4.29 ± 0.07)
e3	78 (3,07)	-

# **5.1.1.4** Mounting

The motor reactor must be installed as close as possible to the Power Module.

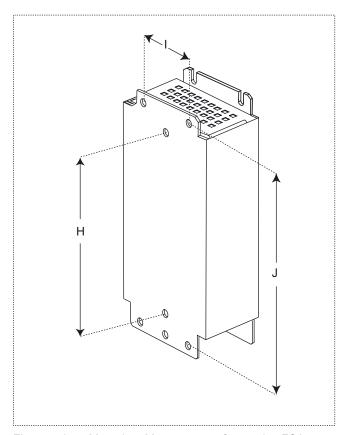


Figure 5-6 Mounting: Motor reactor, frame size FSA

Table 5- 5	Mounting: Motor reactor, frame size FSA, all data in mm and (	inches)

Motor reactor 6SE6400-	3TC00-4AD2	
Suitable for Power Module	1SE11-3UA0	
6SL3210-	1SE11-7UA0	
	1SE12-2UA0	
	1SE13-1UA0	
	1SE14-1UA0	
Frame size	FSA	
Н	160 (6,29)	
l	56 (2,20)	
J	187 (7,36)	

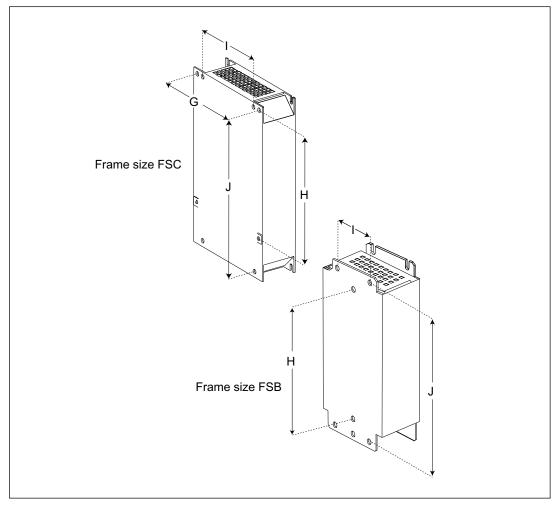


Figure 5-7 Mounting: Motor reactor, frame sizes FSB and FSC

Table 5-6 Mounting: Motor reactor, frame sizes FSB and FSC, all data in mm and (inches)

Motor reactor	6SL3202-	0AE21-0CA0	0AJ23-2CA0
Suitable for Power	6SL3210-	1SE16-0UA0	1SE21-8UA0
Module		1SE17-7UA0	1SE22-5UA0
		1SE21-0UA0	1SE23-2UA0
Frame size		FSB	FSC
Power Module	G	138 (5,43)	174 (6,85)
	Н	174 (6,85)	204 (8,03)
Mounting surface	I	120 (4,72)	156 (6,14)
	J	200 (7,87)	232 (9,13)
Fixing screw		M4	M5

# Cable cross-section and terminal tightening torques Terminals for wiring on site

Frame size	FSA	FSB	FSC
Tightening torque [Nm]	1,1	1,5	2,25
Recommended minimum conductor cross-section [mm²]	1	1,5	2,5
Highest conductor cross-section [mm²]	2,5	6	10

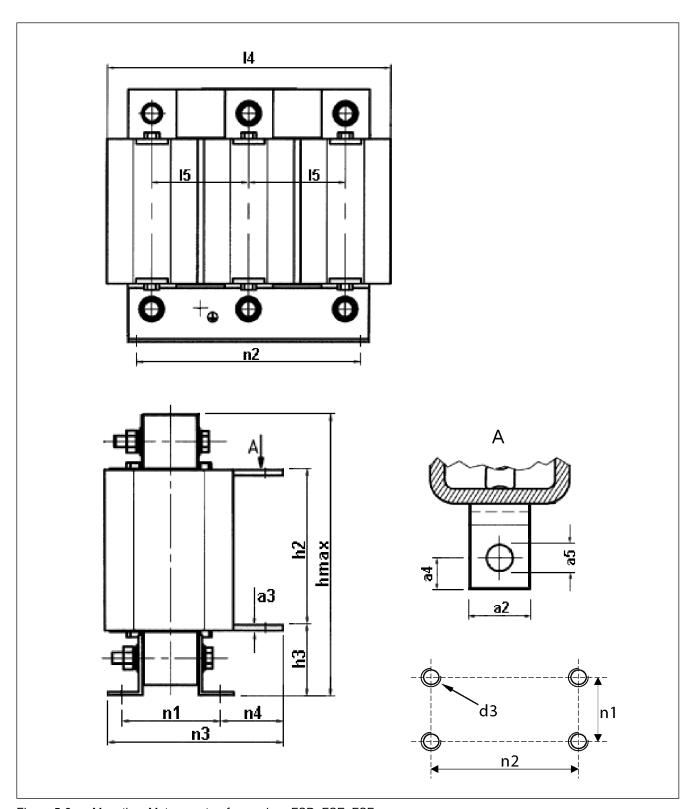


Figure 5-8 Mounting: Motor reactor, frame sizes FSD, FSE, FSF

Table 5-7 Mounting: Motor reactor, frame sizes FSD, FSE, all data in mm and (inches)

Motor reactor	6SE6400-	3TC05-4DD0	3TC03-8DD0	3TC07-5ED0	3TC08-0ED0	
Suitable for Power Module	6SL3210-	1SE23-8UA0 1SE26-0UA0	1SE24-5UA0	1SE27-5UA0	1SE31-0UA0	
Frame size		FSD	FSD	FSE	FSE	
Motor reactor	a2	20 (0.78)	20 (0.78)	20 (0.78)	20 (0.78)	
	а3	4 (0.15)	4 (0.15)	4 (0.15)	4 (0.15)	
	a4	10 (0.39)	10 (0.39)	10 (0.39)	10 (0.39)	
	а5	Ø6 (0.23)	Ø6 (0.23)	Ø7 (0.27)	Ø7	
	14	225 (8.85)	225 (8.85)	270 (10.62)	225 (8.85)	
	15	76 ±5 (2.99 ±0.19)	76 ±5 (2.99 ±0.19)	88 ±5 (3.46 ±0.19)	76 ±5 (2.99 ±0.19)	
	hmax	210 (8.26)	210 (8.26)	248 (9.76)	210 (8.26)	
	h2	120 ±2 (4.72 ±0.07)	120 ±2 (4.72 ±0.07)	140 ±2 (5.51 ±0.07)	120 ±2 (4.72 ±0.07)	
	h3	45 ±2 (1.77 ±0.07)	45 ±2 (1.77 ±0.07)	50 ±2 (1.96 ±0.07)	45 ±2 (1.77 ±0.07)	
	n1	70 (2.75)	94 (3.70)	101 (3.97)	70 (2.75)	
	n2	176 (6.88)	176 (6.88)	200 (7.87)	176 (6.88)	
	n3	max. 140 (5.51)	max. 164	max. 187.5 (7.38)	max. 140 (5.51)	
	n4	54 ±2 (2.12 ±0.07)	54 ±2 (2.12 ±0.07)	68,5 ±2 (2.69 ±0.07)	54 ±2 (2.12 ±0.07)	
	d3	M6	M6	M8	M6	
	PE	M6	M6	M6	M6	
Tightening torque [Nm]		3,5-4,0	3,5-4,0	9,5-10,0 3,5-4,0	3,5-4,0	

Table 5-8 Mounting: Motor reactor, frame size FSF, all data in mm and (inches)

Motor reactor	6SE6400-	3TC14-5FD0	3TC15-4FD0
Suitable for Power Module	6SL3210-	1SE31-1UA0	1SE31-5UA0
Frame size		FSF	FSF
Motor reactor	a2	20 (0.78)	20 (0.78)
	а3	4 (0.15)	4 (0.15)
	a4	10 (0.39)	10 (0.39)
	а5	Ø9 (0.35)	Ø9 (0.35)
	14	357 (14.05)	270 (10.62)
	15	120 ±5 (4.72 ±0.19)	88 ±5 (3.46 ±0.19)
	hmax	321 (12.63)	248 (9.76)
	h2	185 ±2 (7.28 ±0.07)	140 ±2 (5.51 ±0.07)
	h3	60 ±2 (2.36 ±0.07)	50 ±2 (1.96 ±0.07)
	n1	138 (5.43)	101 (3.97)
	n2	264 (10.39)	200 (7.87)
	n3	max. 220.5 (8.68)	max. 187.5 (7.38)
	n4	65,5 ±2 (2.57 ±0.07)	68,5 ±2 (2.69 ±0.07)
	d3	M8	M8
	PE	M8	M6
Tightening torque [Nm]		9,5-10,0	9,5-10,0 3,5-4,0

## **Mounting Power Modules and motor reactors**

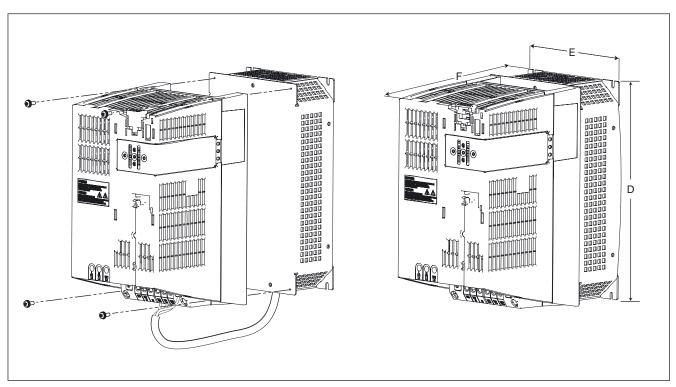


Figure 5-9 Mounting Power Modules and motor reactors, frame sizes FSB and FSC

Table 5- 9 Total dimensions, Power Module 340 and motor reactor, frame sizes FSA, FSB and FSC, all data in mm and (inches)

Motor reactor		6SE6400-3TC00-4AD3	6SE6400-3TC00-4AD2	6SL3202-0AE21-0CA0	6SL3202-0AJ23-2CA0
Suitable for	itable for 6SL3210- 1SB11-0UA0		1SE11-3UA0	1SE16-0UA0	1SE21-8UA0
Power Module			1SE11-7UA0	1SE17-7UA0	1SE22-5UA0
			1SE12-2UA0	1SE21-0UA0	1SE23-2UA0
			1SE13-1UA0		
			1SE14-1UA0		
Frame size		FSA	FSA	FSB	FSC
Total	D	200 (7.87)	200 (7.87)	270 (10.62)	334 (13.14)
dimension of	Е	75,5 (2.97)	75,5 (2.97)	153 (6.02)	189 (7.44)
the Power Module and motor reactor	F	259 (10.19)	259 (10.19)	235 (9.25)	245 (9.64)

## 5.1.1.5 Electrical connection

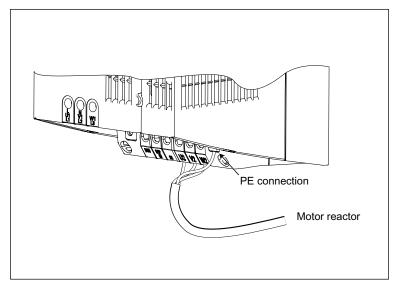


Figure 5-10 Electrical connection

## 5.1.1.6 Technical data

Table 5- 10 Motor reactors for Power Modules 3-ph. 380 V to 480 V AC, Part 1

			Mo	tor reactor (for a 4	kHz pulse freque	ncy)		
		6SE6400-3TC00-4AD2					6SL3202- 0AE21-0CA0	
Rated current	Α			4,5			10	
Power loss	kW			0,005			0,02	
Connection to the Power Module			Cable 4 x 1.5 mm <sup>2</sup> Length approx. 0.3 m					
Motor connection			Screw terminals for cable cross-section 6 mm <sup>2</sup>					
PE connection				M5 stud			M5 stud	
Max. permissible	m	100 (shielded)	100 (shielded)	100 (shielded)	100 (shielded)	100 (shielded)	100 (shielded)	
cable length between motor reactor and motor		150 (non- shielded)	, , , , , , , , , , , , , , , , , , , ,					
Degree of protection		IP20 or IPXXB	P20 or IPXXB   IP20 or IPXXB   IP20 or IPXXB   IP20 or IPXXB   IP20 or IPXXB					
Weight, approx.	kg		2					
Suitable for Power Module, blocksize	Туре	6SL3210- 1SE11-3UA0	SL3210- 6SL3210- 6SL3210- 6SL3210- 6SL3210-					
format							6SL3210- 1SE16-0AA0	

			Motor reactor (for a 4 kHz pulse frequency)					
			6SE6400-3TC00-4AD2 6SL3202- 0AE21-0CA0					
Rated current In (power) of the Power Module	А	1,3	1,7	2,2	3,1	4,1	5,9	
Frame size		FSA	FSA	FSA	FSA	FSA	FSB	

Table 5- 11 Motor reactors for Power Modules 3-ph. 380 V to 480 V AC, Part 2

		Motor reactor (for a 4 kHz pulse frequency)					
		6SL3202-0AE21-0CA0		65	6SE6400- 3TC05-4DD0		
Rated current	Α	10		25	68		
Power loss	kW	0,02		0,06	0,2		
Connection to the Power Module		Cable 4 x AWG14 (1.5 mm²) Length approx. 0.4 m		Cable 4 x AWG14 (1.5 mm²) Length approx. 0.35 m			Flat connector for M6 cable lug
Motor connection		Screw terminals for cable cross- section 6 mm <sup>2</sup>		Screw terminals for cable cross-sections 2.5 to 10 mm <sup>2</sup>			Flat connector for M6 cable lug
PE connection		M5 stud		M5 stud			M6 screw
Max. permissible cable length between motor reactor and motor	m	100 (shielded) 150 (non- shielded)	100 (shielded) 150 (non- shielded)	100 (shielded) 150 (non- shielded)	100 (shielded) 150 (non- shielded)	100 (shielded) 150 (non- shielded)	200 (shielded) 300 (non- shielded)
Degree of protection		IP20 or IPXXB		IP20 or IPXXB			IP00
Weight, approx.	kg	4,5		9			11,5
Suitable for Power Module, blocksize format	Туре	6SL3210- 1SE17-7UA0 6SL3210- 1SE17-7AA0	6SL3210- 1SE21-0UA0 6SL3210- 1SE21-0AA0	6SL3210- 1SE21-8UA0 6SL3210- 1SE21-8AA0	6SL3210- 1SE22-5UA0 6SL3210- 1SE22-5AA0	6SL3210- 1SE23-2UA0 6SL3210- 1SE23-2AA0	6SL3210- 1SE23-8UA0 6SL3210- 1SE23-8AA0
Rated current In (power) of the Power Module	A	7,7	10	18	25	32	38
Frame size		FSB	FSB	FSC	FSC	FSC	FSD

Table 5- 12 Motor reactors for Power Modules 3-ph. 380 V to 480 V AC, Part 3

			Motor reactor (for a 4 kHz pulse frequency)				
		6SE6400- 3TC03-8DD0	6SE6400- 3TC05-4DD0	6SE6400- 3TC08-0ED0	6SE6400- 3TC07-5ED0	6SE6400- 3TC14-5FD0	6SE6400- 3TC15-4FD0
Rated current	Α	45	68	104	90	178	178
Power loss	kW	0,2	0,2	0,17	0,28	0,47	0,25
Connection to the Power Module		Flat connector for M6 cable lug	Flat connector for M6 cable lug	Flat connector for M6 cable lug	Flat connector for M6 cable lug	Flat connector for M8 cable lug	Flat connector for M8 cable lug
Motor connection		Flat connector for M6 cable lug	Flat connector for M6 cable lug	Flat connector for M6 cable lug	Flat connector for M6 cable lug	Flat connector for M8 cable lug	Flat connector for M8 cable lug
PE connection		M6 screw	M6 screw	M6 screw	M6 screw	M8 screw	M6 screw

		Motor reactor (for a 4 kHz pulse frequency)					
		6SE6400- 3TC03-8DD0	6SE6400- 3TC05-4DD0	6SE6400- 3TC08-0ED0	6SE6400- 3TC07-5ED0	6SE6400- 3TC14-5FD0	6SE6400- 3TC15-4FD0
Max. permissible cable length between the motor reactor and motor for line supply voltages 380 V to 400 V for line supply voltages 401 V to 480 V	m	200 (shielded) 300 (non- shielded)					
Degree of protection		IP00	IP00	IP00	IP00	IP00	IP00
Weight, approx.	kg	19	11,5	12	27	57	24
Suitable for Power Module, blocksize format	Туре	6SL3210- 1SE24-5UA0 6SL3210- 1SE24-5AA0	6SL3210- 1SE26-0UA0 6SL3210- 1SE26-0AA0	6SL3210- 1SE27-5UA0 6SL3210- 1SE27-5AA0	6SL3210- 1SE31-0UA0 6SL3210- 1SE31-0AA0	6SL3210- 1SE31-1UA0 6SL3210- 1SE31-1AA0	6SL3210- 1SE31-5UA0 6SL3210- 1SE31-5AA0
Rated current In (power) of the Power Module	A	45	60	75	90	110	145
Frame size		FSD	FSD	FSE	FSE	FSF	FSF

Table 5- 13 Motor reactors for Power Modules 3-ph. 380 V to 480 V AC, Part 4

		Motor reactor (for a 4 kHz pulse frequency)
		6SE6400-3TC14-5FD0
Rated current	Α	178
Power loss	kW	0,47
Connection to the Power Module		Flat connector for M8 cable lug
Motor connection		Flat connector for M8 cable lug
PE connection		M8 screw
Max. permissible cable length between the motor reactor and motor for line supply voltages 380 V to 400 V for line supply voltages 401 V to 480 V	m	200 (shielded) 300 (non-shielded)
Degree of protection		IP00
Weight, approx.	kg	57
Suitable for Power Module, blocksize format	Туре	6SL3210-1SE31-8UA0 6SL3210-1SE31-8AA0
Rated current In (power) of the Power Module	Α	178
Frame size		FSF

### 5.1.2 Chassis

### 5.1.2.1 Description

Motor reactors reduce the voltage stress on the motor windings by reducing the voltage gradients at the motor terminals that occur when motors are fed from drive converters. At the same time, the capacitive re-charging currents that additionally load the output of the Power Module when longer motor cables are used are simultaneously reduced.

## 5.1.2.2 Safety information



The 100 mm clearances above and below the components must be observed.

#### Note

The connecting cables to the Power Module must be kept as short as possible (max. 5 m).

#### **CAUTION**

When using motor reactors that SIEMENS has not approved for SINAMICS, then these can thermally damage the reactor.

# CAUTION

The surface temperature of the motor reactors can exceed 80 °C.

#### **CAUTION**

The maximum permissible output frequency when motor reactors are used is 150 Hz.

#### **CAUTION**

The maximum permissible pulse frequency when motor reactors are used is 4 kHz.

# 5.1.2.3 Dimension drawing

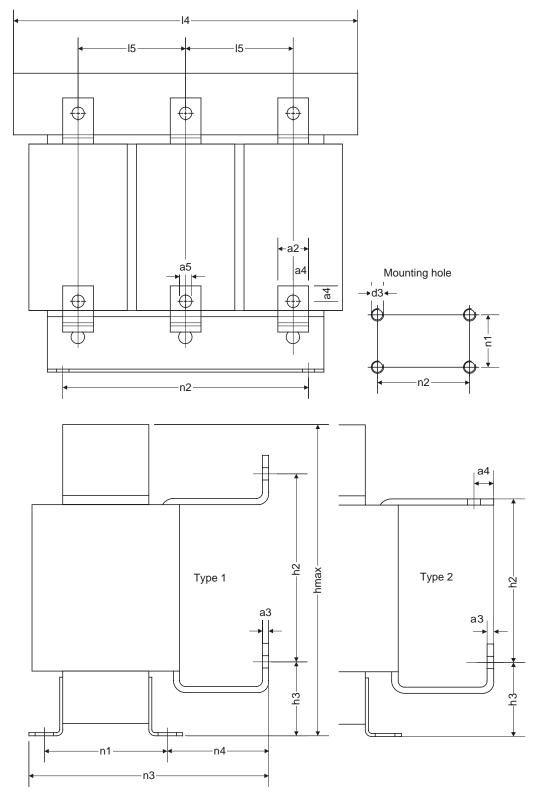


Figure 5-11 Dimension drawing, motor reactor

Table 5- 14 Dimensions of motor reactors, all data in mm and (inches)

6SL3000-	2BE32-1AA0	2BE32-6AA0	2BE33-2AA0	2BE33-8AA0	2BE35-0AA0
Connection type	1	1	1	1	2
a2	25 (0,98)	25 (0,98)	25 (0,98)	25 (0,98)	30 (1,18)
a3	5 (0,19)	5 (0,19)	5 (0,19)	5 (0,19)	6 (0,23)
a4	12,5 (0,49)	12,5 (0,49)	12,5 (0,49)	12,5 (0,49)	15 (0,59)
а5	11 (0,43)	11 (0,43)	11 (0,43)	11 (0,43)	14 (0,55)
14	300 (11,81)	300 (11,81)	300 (11,81)	300 (11,81)	300 (11,81)
15	100 (3,93)	100 (3,93)	100 (3,93)	100 (3,93)	100 (3,93)
hmax	285 (11,22)	315 (12,40)	285 (11,22)	285 (11,22)	365 (14,37)
h2	194 (7,63)	227 (8,93)	194 (7,63)	194 (7,63)	245 (9,64)
h3	60 (2,36)	60 (2,36)	60 (2,36)	60 (2,36)	60 (2,36)
n1 <sup>1)</sup>	163 (6,41)	183 (7,20)	163 (6,41)	183 (7,20)	183 (7,20)
n2 <sup>1)</sup>	224 (8,81)	224 (8,81)	224 (8,81)	224 (8,81)	224 (8,81)
n3	257 (10,11)	277 (10,90)	257 (10,11)	277 (10,90)	277 (10,90)
n4	79 (3,11)	79 (3,11)	79 (3,11)	79 (3,11)	79 (3,11)
d3	M8	M8	M8	M8	M8

<sup>1)</sup> Lengths n1 and n2 correspond to the distance between holes

## 5.1.2.4 Technical data

Table 5- 15 Technical specifications, motor reactors

Order no.	6SL3000-	2BE32-1AA0	2BE32-6AA0	2BE33-2AA0	2BE33-8AA0	2BE35-0AA0
Suitable for Power Module	6SL3310-	1TE32-1AA0	1TE32-6AA0	1TE33-1AA0	1TE33-8AA0	1TE35-0AA0
Rated power of the Power Module	kW	110	132	160	200	250
Rated current	Α	210	260	310	380	490
Power loss	kW	0,486	0,5	0,47	0,5	0,5
Connections - to the Power Module - to the load - PE		M10 M10 M8	M10 M10 M8	M10 M10 M8	M10 M10 M8	M12 M12 M8
Degree of protection		IP00	IP00	IP00	IP00	IP00
Dimensions Width Height Depth	mm mm mm	300 285 257	300 315 277	300 285 257	300 285 277	300 365 277
Weight	kg	66	66	66	73	100

### 5.2 Sinusoidal filter

#### 5.2.1 Chassis

### 5.2.1.1 Description

The sinusoidal filter at the output of the Power Module supplies voltages that are virtually sinusoidal at the motor, thereby enabling standard motors to be used without shielded cables and without the need to reduce the power. Non-shielded cables can be used and, if long motor supply cables are used, no additional motor reactors are required.

Sinusoidal filters with a power rating of up to 200 kW are available

The pulse frequency of the Power Modules must be set to 4 kHz for the sine-wave filters. This reduces the output current of the Power Module, refer to Chapter Technical specifications.

When a sinusoidal filter is used, the available output voltage decreases by 15 %.

### 5.2.1.2 Safety information



The 100 mm clearances above and below the components must be observed.

#### Note

The connecting cables to the Power Module must be kept as short as possible (max. 5 m).

#### **CAUTION**

It is not permissible that the connections are interchanged:

- incoming line from the Power Module: 1U1, 1V1, 1W1 and
- outgoing line to the load: 1U2, 1V2, 1W2.

Non-observance may damage the sine-wave filter.

### **CAUTION**

If sine-wave filters are used that have not been approved for SINAMICS by SIEMENS, the Power Modules may be damaged or may malfunction.



The sinusoidal filters can have surface temperatures of over 80 °C.

### **CAUTION**

If a sine-wave filter is connected to the Power Module, the converter must be activated during commissioning (p0230 = 3) to prevent the filter from being destroyed.

If a sine-wave filter is connected to the Power Module, the Power Module must not be operated without a connected motor, as otherwise the filter may be destroyed.



The maximum permissible output frequency when sine-wave filters are used is 150 Hz.

# 5.2.1.3 Dimension drawing

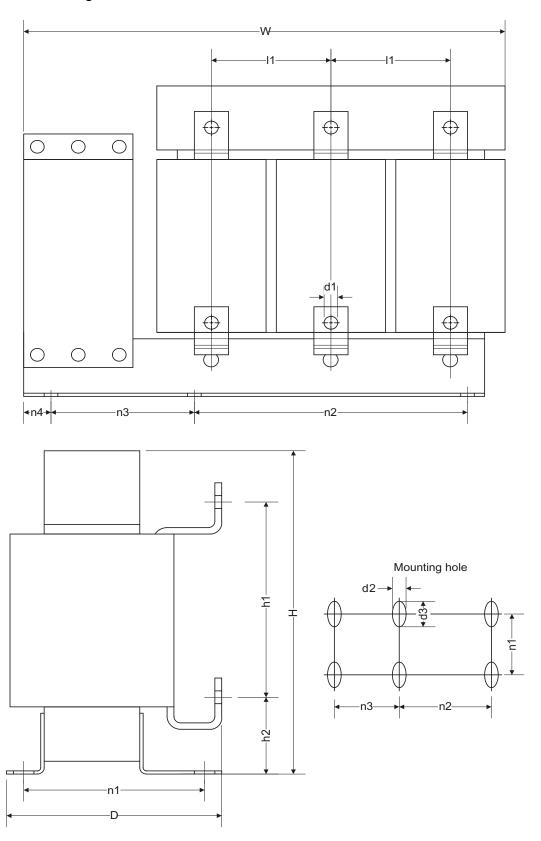


Figure 5-12 Dimension drawing, sinusoidal filter

Table 5- 16 Dimensions of the sinusoidal filters, all data in mm and (inches)

6SL3000-	2CE32-3AA0	2CE32-8AA0	2CE33-3AA0	2CE34-1AA0
W	620 (24,40)	620 (24,40)	620 (24,40)	620 (24,40)
Н	320 (12,59)	320 (12,59)	360 (14,17)	360 (14,17)
D	300 (11,81)	300 (11,81)	370 (14,56)	370 (14,56)
I1	140 (5,51)	140 (5,51)	140 (5,51)	140 (5,51)
h1	180 (7,08)	180 (7,08)	220 (8,66)	220 (8,66)
h2	65 (3,34)	65 (3,34)	65 (3,34)	65 (3,34)
n1 <sup>1)</sup>	280 (11,02)	280 (11,02)	320 (12,59)	320 (12,59)
n2 <sup>1)</sup>	150 (5,90)	150 (5,90)	150 (5,90)	150 (5,90)
n3 <sup>1)</sup>	225 (8,85)	225 (8,85)	225 (8,85)	225 (8,85)
n4	105 (4,13)	105 (4,13)	105 (4,13)	105 (4,13)
d1	12 (0,47)	12 (0,47)	12 (0,47)	12 (0,47)
d2	11 (0,43)	11 (0,43)	11 (0,43)	11 (0,43)
d3	22 (0,86)	22 (0,86)	22 (0,86)	22 (0,86)

<sup>1)</sup> The lengths n1, n2 and n3 correspond to the drill hole spacing

### 5.2.1.4 Technical data

Table 5- 17 Technical specifications, sinusoidal filter

Order no.	6SL3000-	2CE32-3AA0	2CE32-3AA0	2CE32-8AA0	2CE33-3AA0	2CE34-1AA0
Suitable for Power Module	6SL3310-	1TE32-1AA0	1TE32-6AA0	1TE33-1AA0	1TE33-8AA0	1TE35-0AA0
Power rating of the Power Module at a 4 kHz pulse frequency	kW	90	110	132	160	200
Rated current	Α	225	225	276	333	408
Power loss - at 50 Hz - at 150 Hz	kW kW	0,35 0,6	0,35 0,6	0,4 0,69	0,245 0,53	0,38 0,7
Connections - to the Power Module - to the load - PE				10 connecting lug 10 connecting lug M10 drill hole	-	
Degree of protection		IP00	IP00	IP00	IP00	IP00
Dimensions Width Height Depth	mm mm mm	620 300 320	620 300 320	620 300 320	620 370 360	620 370 360
Weight, approx.	kg	124	124	127	136	198

# 5.3 dv/dt filter plus Voltage Peak Limiter

### 5.3.1 Chassis

### 5.3.1.1 Description

The dv/dt filter plus Voltage Peak Limiter consists of two components: the dv/dt reactor and the voltage limiting network (Voltage Peak Limiter), which limits voltage peaks and returns the energy to the DC link.

The dv/dt filters with Voltage Peak Limiter must be used for motors for which the proof voltage of the insulation system is unknown or insufficient. Standard motors of the 1LA5, 1LA6 and 1LA8 series only require them at supply voltages > 500 V +10%.

Dv/dt filters plus Voltage Peak Limiters limit the rate of voltage rise to values <  $500 \text{ V/}\mu\text{s}$  and the typical voltage peaks with rated line voltages to the values below (with motor cable lengths of < 150 m):

< 1000 V at V<sub>line</sub> < 575 V.

### Components

The order numbers of the individual components (dv/dt reactor and voltage peak limiter) are listed in the following table:

Table 5- 18 dv/dt filter with Voltage Peak Limiter, order numbers of the individual components

dv/dt filter plus Voltage Peak Limiter	dv/dt reactor	voltage peak limiter
6SL3000-2DE32-6AA0	6SL3000-2DE32-6CA0	6SL3000-2DE32-6BA0
6SL3000-2DE35-0AA0	6SL3000-2DE35-0CA0	6SL3000-2DE35-0BA0



When a dv/dt filter is used, the pulse frequency of the Power Module must not exceed 4 kHz. If a higher value is set, this could destroy the dv/dt filter.

### 5.3.1.2 Safety information



The 100 mm clearances above and below the components must be observed.

#### Note

The connecting cables to the Power Module must be kept as short as possible (max. 5 m).

#### **CAUTION**

The terminals on the voltage limiting network (Voltage Peak Limiter) must always be connected as follows:

- Cable from the DC link of the Power Module at DCPS, DCNS and
- cable to the dv/dt reactor 1U2, 1V2, 1W2.

Failure to connect the terminals correctly could damage the voltage peak limiter.

### **CAUTION**

When using dv/dt filters that SIEMENS has not approved for SINAMICS, then these dv/dt filters can be thermally damaged.

## /!\CAUTION

The surface temperature of the dv/dt reactors may exceed 80 °C.

### CAUTION

The maximum permissible output frequency when using dv/dt filters is 150 Hz.

# 5.3.1.3 Interface description

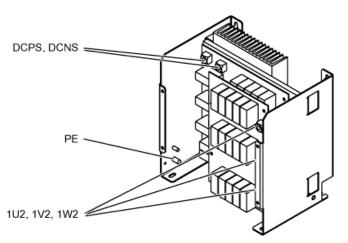


Figure 5-13 Interface overview, voltage peak limiter, type 1

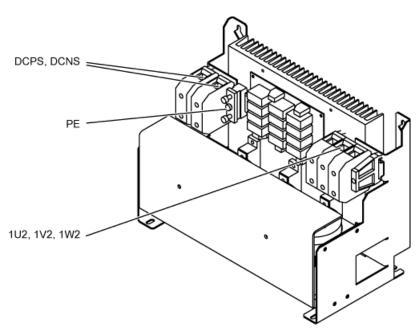


Figure 5-14 Interface overview, voltage peak limiter, type 2

## 5.3.1.4 Connecting the dv/dt filter plus Voltage Peak Limiter

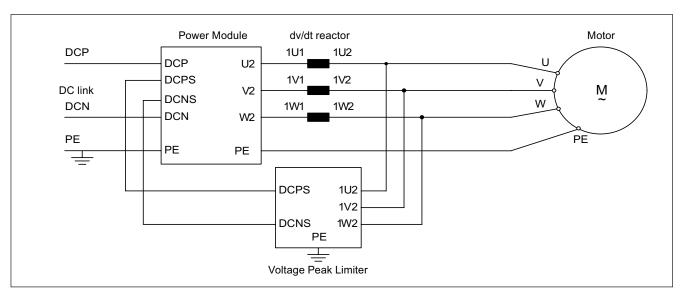


Figure 5-15 Connecting the dv/dt filter plus Voltage Peak Limiter

#### Cable cross-sections

Table 5- 19 Cable cross-sections for connected between a dv/dt filter and Power Module

dv/dt filter plus Voltage Peak Limiter	Connection to the DC link (DCPS / DCNS) [mm²]	Connection between a dv/dt reactor and voltage peak limiter (1U2, 1V2, 1W2) [mm²]
6SL3000-2DE32-6AA0	35	10
6SL3000-2DE35-0AA0	70	16

# / WARNING

The connection to the DC link of the Power Module must be short-circuit proof.

#### Note

The connections should be kept as short as possible.

The maximum cable length for the specified connections is is 5 m.

# 5.3.1.5 Dimension drawing, dv/dt reactor

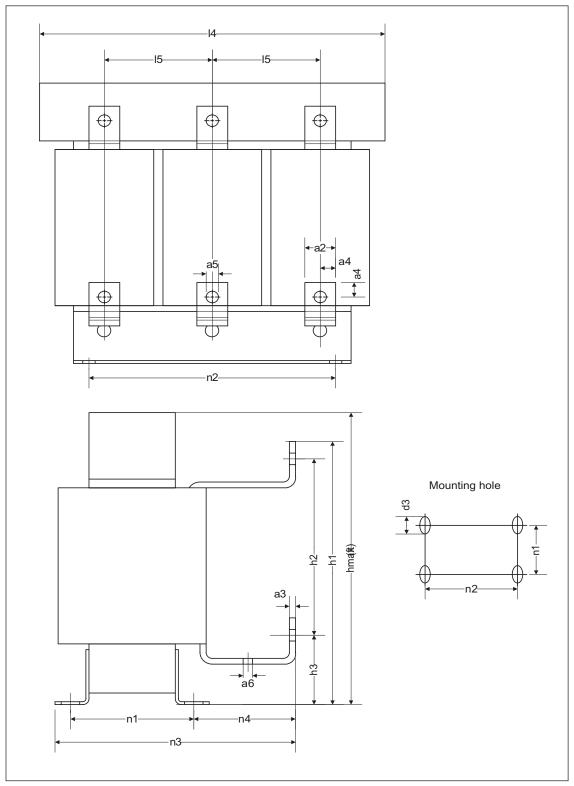


Figure 5-16 Dimension drawing, dv/dt reactor

6SL3000-	2DE32-6CA0	2DE35-0CA0
a2	25 (0,98)	30 (1,18)
a3	5 (0,19)	6 (0,23)
a4	14 (0,55)	17 (0,66)
a5	10.5 x 14 (0.41 x 0.55)	14 x 18 (0.55 x 0.70)
a6	7 (0,27)	9 (0,35)
14	410 (16,14)	460 (18,11)
15	135 (5,31)	152,5 (6,00)
hmax	370 (14,56)	370 (14,56)
h2	258 (10,15)	240 (9,44)
h3	76 (2,99)	83 (3,26)
n1 <sup>1)</sup>	141 (5,55)	182 (7,16)
n2 <sup>1)</sup>	316 (12,44)	356 (14,01)
n3	229 (9,01)	275 (10,82)
n4	72 (2,83)	71 (2,79)
d3	M10 [12 x 18] (0.47 x 0.70)	M12 [15 x 22] (0.59 x 0.86)

Table 5- 20 Dimensions dv/dt reactor, 3-ph. 380 V – 480 V AC, all data in mm and (inches)

# 5.3.1.6 Dimension drawing of the voltage peak limiter

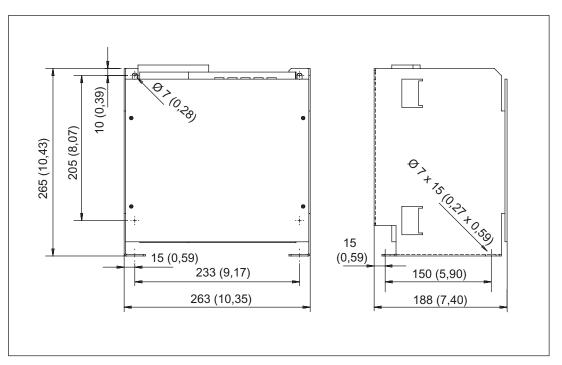


Figure 5-17 Dimension drawing of the voltage peak limiter, type 1

## 5.3 dv/dt filter plus Voltage Peak Limiter

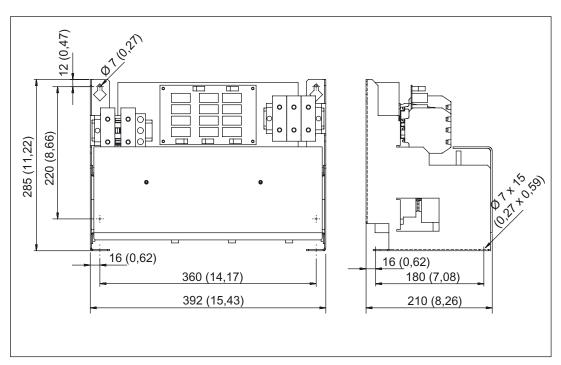


Figure 5-18 Dimension drawing of the voltage peak limiter, type 2

Table 5- 21 Assigning voltage peak limiter to dimension drawings

Voltage peak limiter	Dimension drawing, type
6SL3000-2DE32-6BA0	Type 1
6SL3000-2DE35-0BA0	Type 2

### 5.3.1.7 Technical data

Table 5- 22 Technical specifications for the dv/dt filter plus Voltage Peak Limiter, 3-ph. 380 V – 480 V AC, Part 1

Order no.:	6SL3000-	2DE32-6AA0	2DE32-6AA0	2DE35-0AA0
Suitable for Power Module	6SL3310-	1TE32-1AA0	1TE32-6AA0	1TE33-1AA0
Rated power of the Power Module	kW	110	132	160
dv/dt reactor				
I <sub>thmax</sub>	Α	260	260	490
Power loss, typical	kW	0,573	0,573	0,696
Connections - to the Motor Module - load - PE		M10 M10 M6	M10 M10 M6	M12 M12 M6
Max. permissible cable length between dv/dt reactor and motor	m		300 (shielded) 450 (non-shielded)	
Degree of protection		IP00	IP00	IP00
Dimensions Width Height Depth	mm mm mm	410 370 229	410 370 229	460 370 275
Weight, approx.	kg	66	66	122
Voltage Peak Limiter				
Power loss, typical	kW	0,029	0,029	0,042
Connections - to the dv/dt reactor - DC - PE		M8 M8 M8	M8 M8 M8	Terminal 70 mm² Terminal 70 mm² Terminal 35 mm²
Degree of protection		IP00	IP00	IP00
Dimensions Width Height Depth	mm mm mm	265 263 190	265 263 190	392 285 210
Weight, approx.	kg	6	6	16

## 5.3 dv/dt filter plus Voltage Peak Limiter

Table 5- 23 Technical specifications for the dv/dt filter plus Voltage Peak Limiter, 3-ph. 380 V – 480 V AC, Part 2

Order no.:	6SL3000-	2DE35-0AA0	2DE35-0AA0	
Suitable for Power Module	6SL3310-	1TE33-8AA0	1TE35-0AA0	
Rated power of the Power Module	kW	200	250	
dv/dt reactor				
I <sub>thmax</sub>	Α	490	490	
Power loss, typical	kW	0,696	0,696	
Connections - to the Motor Module - load - PE		M12 M12 M6	M12 M12 M6	
Max. permissible cable length between dv/dt reactor and motor	m		300 (shielded) 450 (non-shielded)	
Degree of protection		IP00	IP00	
Dimensions Width Height Depth	mm mm mm	460 370 275	460 370 275	
Weight, approx.	kg	122	122	
Voltage Peak Limiter			1	<b>T</b>
Power loss, typical	kW	0,042	0,042	
Connections - to the dv/dt reactor - DC - PE		Terminal 70 mm² Terminal 70 mm² Terminal 35 mm²	Terminal 70 mm² Terminal 70 mm² Terminal 35 mm²	
Degree of protection		IP00	IP00	
Dimensions Width Height Depth	mm mm mm	392 285 210	392 285 210	
Weight, approx.	kg	16	16	

Control Units

### 6.1 Introduction

### **Description**

SINAMICS S120 AC Drive Control Units are designed for use with blocksize format or chassis format Power Modules.


### **Advantages**

- 1. The **CU310 DP Control Unit** provides the PROFIBUS external communications interface and a TTL/HTL/SSI encoder evaluation circuit.
- 2. The **CU310 PN Control Unit** provides two PROFINET interfaces and a TTL/HTL/SSI encoder evaluation circuit.
- 3. Power Modules can also be connected to the multi-axis **Control Unit Adapter CUA31** using the adapter module. The combination of a modular power unit and a Control Unit Adapter CUA31 is used to extend an existing DC/AC drive line-up with Control Unit by one axis.
- 4. Power Modules can also be connected to the multi-axis Control Unit via the CUA32 Control Unit Adapter. The combination of a modular power unit and a CUA32 Control Unit Adapter is used to extend an existing DC/AC drive line-up with Control Unit by one axis and also provides a TTL/HTL/SSI encoder evaluation circuit.

#### Note

The firmware and parameter settings are stored on the CompactFlash card, which is plugged into the Control Unit CU310.

### 6.1 Introduction

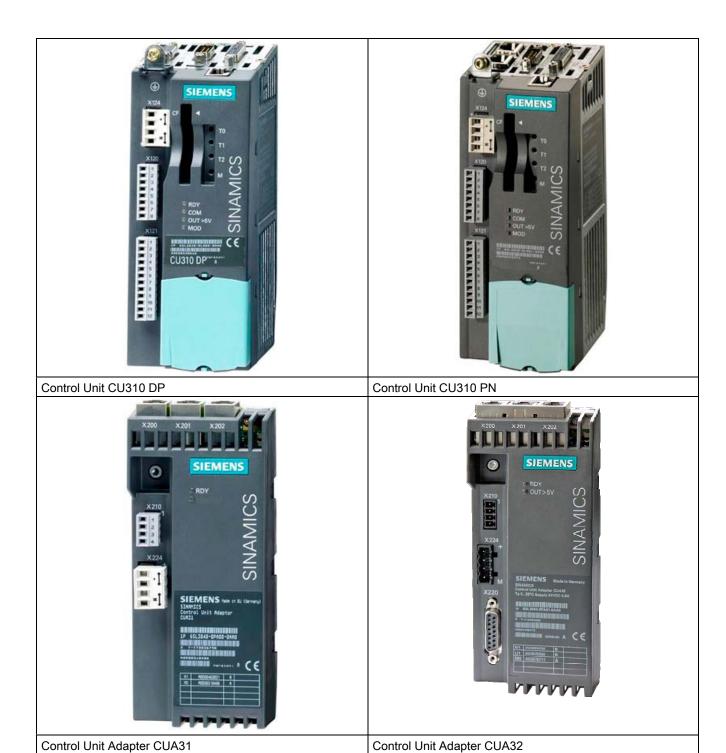

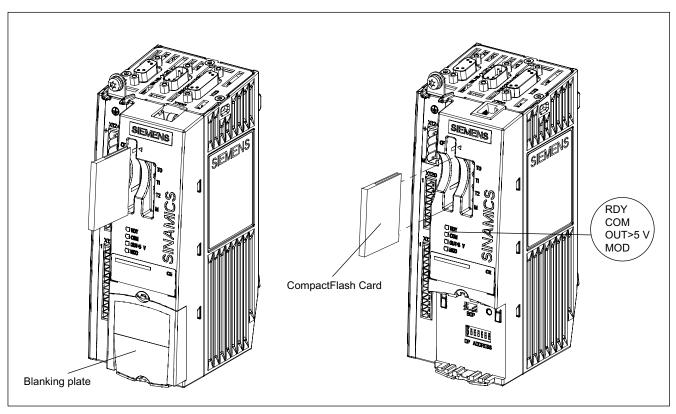


Figure 6-1 Slot for the CompactFlash card on a CU310 Control Unit

### Note

The Control Unit and the CompactFlash card must be ordered separately.

# 6.2 Control Unit CU310 DP (PROFIBUS)

## 6.2.1 Description

The Control Unit 310 DP (PROFIBUS) is the component in which the open-loop and closed-loop control functions of a drive are implemented.

The CU310 DP has the following interfaces (ports):

Table 6-1 Overview of the CU310 interfaces

Туре	Number
Digital inputs	4
Digital inputs/outputs	4
DRIVE-CLiQ interfaces	1
PROFIBUS interface	1
Serial interface (RS232)	1
Power Module Interface (PM-IF)	1
Encoder interface (HTL/TTL/SSI)	1
EP terminals / temperature sensor	1
24 V electronics power supply	1
Test sockets	3+1
Interface for BOP	1

### Note

For test purposes, the fan also runs in the cold state at regular intervals.

## 6.2.2 Safety information

### Note

The CompactFlash card may only be inserted and removed from the Control Unit when in the no-voltage condition.



The cooling clearances of 50 mm above and below the components must be observed. It is not permissible that the connecting cables cover the cooling openings.

# 6.2.3 Interface description

### 6.2.3.1 Overview

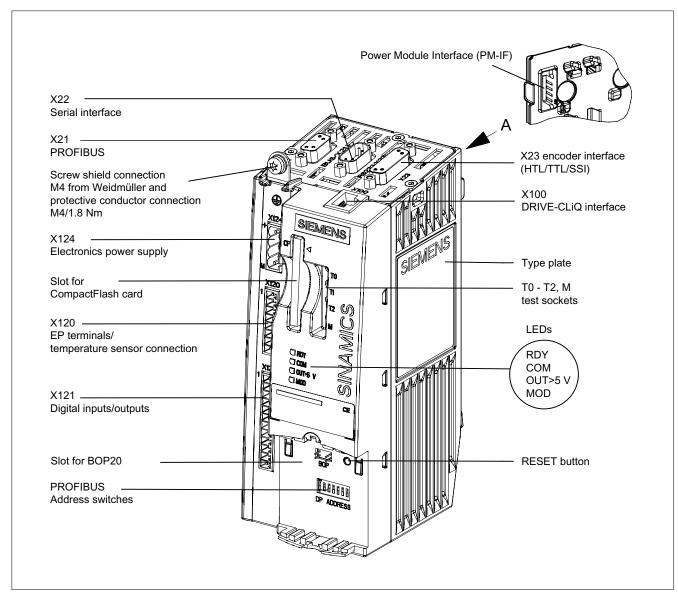


Figure 6-2 Description of the CU310 DP interfaces (ports)

## 6.2.3.2 Sample connection

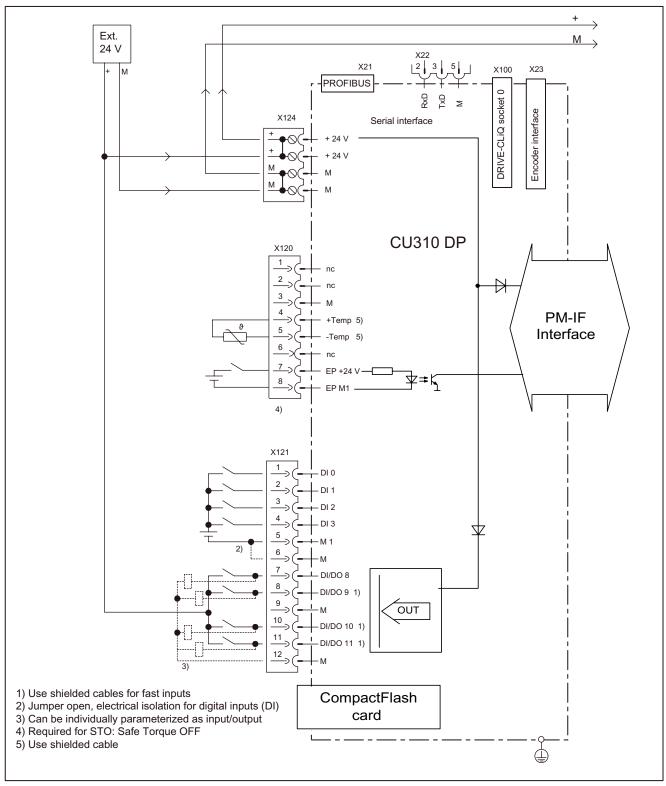


Figure 6-3 Connection example CU310 DP

### 6.2.3.3 X100 DRIVE-CLiQ interface

Table 6-2 DRIVE-CLiQ interface

	Pin	Signal name	Technical specifications	
	1	TXP	Transmit data +	
	2	TXN	Transmit data -	
8   F	3	RXP	Receive data +	
	4	Reserved, do not use		
E BA	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	Α	+ (24 V)	Power supply	
	В	M (0 V)	Electronics ground	
Blanking plate	on DRIVE-	CLiQ interface: Yamaichi company	, Order No.: Y-ConAS-13	

## 6.2.3.4 X120 EP terminals / temperature sensor

Table 6-3 Terminal strip X120

	Terminal	Function	Technical specifications
	1	Reserved, do not use	
_	2	Reserved, do not use	
2	3	M	Ground
3	4	+Temp 1)	KTY or PTC input
	5	-Temp 1)	Ground for KTY or PTC
5	6	Reserved, do not use	
6	7	EP +24 V <sup>2)</sup>	Safe standstill input (+)
7	8	EP M1 <sup>2)</sup>	Safe standstill input (-)
8			
Max. connectable	e cross-section 1.5	mm <sup>2</sup>	

<sup>1)</sup>This is the only temperature channel for Order No. 6SL3040-0LA00-0AA0. For Order No. 6SL3040-0LA00-0AA1, this is the second temperature channel (T2), which can be used as single channel dependent on the parameterization or in combination with the first temperature channel (T1, refer to X23).

<sup>2)</sup> The EP terminals must be wired on the Power Module on chassis units.

### **NOTICE**

The KTY temperature sensor/the PTC must be connected with the correct polarity.

Further information on the temperature sensors can be found in the following literature: Literature: /IH1/ SINAMICS S120, Commissioning Manual, Chapter "Temperature sensors for SINAMICS components."

## 6.2.3.5 X121 digital inputs/outputs

Table 6- 4 Terminal strip X121

	Terminal	Designation <sup>1)</sup>	Technical specifications
	1	DI 0	Voltage: -3 V to 30 V
	2	DI 1	Typical current consumption: 10 mA at 24 V DC
	3	DI 2	Isolation: The reference potential is terminal M1
2	4	DI 3	Level (incl. ripple) High level: 15 V to 30 V
ω [ ω [	5	M1	Low level: -3 V to 5 V
4 5 6	6	М	Signal propagation times: $L \rightarrow H$ approx. 50 $\mu$ s $H \rightarrow L$ : approx. 100 $\mu$ s
7	7	DI/DO 8	As input:
8	8	DI/DO 9	Voltage: -3 V to 30 V
9	9 M T	Typical current consumption: 10 mA at 24 V DC	
	10	DI/DO 10	Level (incl. ripple)
11 12	11	DI/DO 11	High level: 15 V to 30 V Low level: -3 V to 5 V
	12	M	Terminal numbers 8, 10, and 11 are "fast inputs"
			Signal propagation times for inputs/"fast inputs": L $\rightarrow$ H: approx. 50 $\mu$ s/5 $\mu$ s H $\rightarrow$ L: approx. 100 $\mu$ s/50 $\mu$ s
			As output:
			Voltage: 24 V DC
		Max. load current per output: 500 mA Continued-short-circuit-proof	
			Signal propagation times of the outputs: $L \rightarrow H$ : approx. 150 $\mu$ s

Max. connectable cross-section: 1.5 mm<sup>2</sup>
Type: Spring-loaded terminal 1 (see Appendix A)

### **NOTICE**

An open input is interpreted as "low".

The "fast inputs" can be used in conjunction with a measuring system for position sensing.

To enable digital inputs (DI) 0 to 3 to function, terminal M1 must be connected. This can be done as follows:

Connect the digital inputs' ground reference, or a jumper to terminal M. This removes the electrical isolation for these digital inputs.

<sup>1)</sup> DI: digital input; DI/DO: Bidirectional digital input/output; M: Electronics ground M1: Ground reference

### Note

A 24 V voltage supply must be connected to terminal X124 so that the digital outputs can be used.

If a the 24 V supply is briefly interrupted, then the digital outputs are de-activated during this time.

## 6.2.3.6 Electronics power supply X124

Table 6-5 Terminal block X124

+	Electronics power supply	Voltage: 24 V DC (20.4 V - 28.8 V)
+	Electronics power supply	Current consumption: max. 0.8 A (without DRIVE-CLiQ
М	Electronic ground	or digital outputs)
M	Electronic ground	Max. current via jumper in connector: 20 A at 55 °C
		M Electronic ground

Max. connectable cross-section: 2.5 mm<sup>2</sup> Type: Screw terminal 2 (see Appendix A)

#### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

## 6.2.3.7 X21 PROFIBUS

Table 6- 6 PROFIBUS interface X21

	Pin	Signal name	Meaning	Range
	1	-	Not assigned	
	2	M24_SERV	Supply for teleservice, ground	0 V
	3	RxD/TxD-P	Receive/transmit data P (B)	RS485
	4	CNTR-P	Control signal	TTL
	5	DGND	PROFIBUS data reference potential	
	6	VP	Power supply plus	5 V + -10 %
	7	P24_SERV	Supply for teleservice, + (24 V)	24 V (20.4 V - 28.8 V)
	8	RxD/TxD-N	Receive/transmit data N (A)	RS485
	9	-	Not assigned	
Type: 9-pin SI	UB-D female	9		

#### Note

A teleservice adapter can be connected to the PROFIBUS interface (X21) for remote diagnosis purposes.

The power supply for the teleservice terminals 2 and 7 withstands a max. load and continued short-circuit current of 150 mA.



An equipotential bonding conductor with a cross-section of at least 25 mm² must be used between components in a system that are located at a distance from each other. If an equipotential bonding conductor is not used, leakage currents that could destroy the Control Unit or other PROFIBUS nodes can be conducted via the PROFIBUS cable.

### **PROFIBUS** connector

At the first and last node (device) in a line, the terminating resistors must be switched-in in order to ensure disturbance/noise-free communications.

The terminating resistors are activated in the connector.

The cable shield must be connected at both ends over large-surface area contacts.

### 6.2.3.8 X23 HTL/TTL/SSI encoder interface

Table 6-7 Encoder connection X23

	Pin	Signal name	Technical specifications
	1	+Temp*	KTY or PTC input
	2	SSI_CLK*	SSI clock, positive
	3	SSI_XCLK*	SSI clock, negative
	4	P encoder 5 V / 24 V	Encoder power supply
	5	P encoder 5 V / 24 V	Encoder power supply
	6	P sense	Sense input of encoder power supply
	7	M encoder (M)	Ground for encoder power supply
	8	-Temp*	Ground for KTY or PTC
	9	M sense	Ground sense input
	10	RP	R track positive
	11	RN	R track negative
	12	BN	B track negative
	13	BP	B track positive
	14	AN_SSI_XDAT	A track negative / SSI data negative
	15	AP_SSI_DAT	A track positive / SSI data positive
Type: 15-pin sub	D connector		

\*to Pin 1 / Pin 8: These signals are only assigned from Order No. 6SL3040-0LA00-0AA1. The associated temperature channel (T1) can be parameterized as an individual channel or in combination with the second temperature channel (T2) at interface X120 (for parameterization information, refer to the Commissioning Manual).

Re. pin 2 / pin 3: These signals are only assigned from Order No. 6SL3040-0LA00-0AA1.

### **NOTICE**

The KTY temperature sensor/the PTC must be connected with the correct polarity.

Table 6-8 Specification of measuring systems that can be connected

Parameter	Designation	Threshold	Min.	Туре	Max.	Unit
High signal level (TTL bipolar at X23)¹¹)	U <sub>Hdiff</sub>		2		5	V
Low signal level (TTL bipolar at X23)1)	U <sub>Ldiff</sub>		-5		-2	V
High signal level	U <sub>H</sub> :	High	17		Vcc	V
(HTL unipolar)		Low	10		Vcc	V
Low signal level	UL	High	0		7	V
(HTL unipolar)		Low	0		2	V
High signal level (HTL bipolar) <sup>2)</sup>	U <sub>Hdiff</sub>		3		Vcc	V
Low signal level (HTL bipolar) <sup>2)</sup>	U <sub>Ldiff</sub>		-Vcc		-3	V
High signal level (SSI bipolar at X23) <sup>1)3)</sup>	U <sub>Hdiff</sub>		2		5	V
Low signal level (SSI bipolar at X23) <sup>1)3)</sup>	U <sub>Ldiff</sub>		-5		-2	V
Signal frequency	fs		-		500	kHz
Edge clearance	t <sub>min</sub>		100		-	ns
Zero pulse (with T <sub>s</sub> = 1/f <sub>s</sub> )	Length		1/4 · Ts		3⁄4 ⋅ T <sub>s</sub>	
	Center of the pulse position		50	135	220	Degrees

<sup>1)</sup> Other signal levels according to the RS422 standard.

### Note

### We recommend that bipolar encoders are used.

When uni-polar encoders are used, the 15-pin sub D connector should be opened and the unused inverse signals (AN Pin14, BN Pin12 and RN Pin11) connected to ground (Pin7).

 $<sup>^{2)}</sup>$  The absolute level of the individual signals varies between 0 V and V $_{\text{CC}}$  of the measuring system.

<sup>3)</sup> Only from Order No. 6SL3040-0LA00-0AA1 and Firmware 2.5 SP1.

### 6.2.3.9 PROFIBUS address switches

Table 6- 9 PROFIBUS address switches

Technical s	pecifications	Switch	Significance
		S1	20 = 1
0	$2^{0} 2^{1} 2^{2} 2^{3} 2^{4} 2^{5} 2^{6}$	S2	21 = 2
Significance:	1 2 4 8 16 32 64	S3	2 <sup>2</sup> = 4
	ON	S4	23 = 8
	OFF	S5	24 = 16
	S1 S2 S3 S4 S5 S6 S7	S6	2 <sup>5</sup> = 32
Example:	1 + 4 + 32 = 37 PROFIBUS address = 37	S7	26 = 64

#### Note

The factory setting of the DIP switch is 0 or 127. Parameter p0918 can be used to set the bus address for PROFIBUS to values between 1 and 126. The address can also be set manually to values between 1 and 126 using the DIP switch. Then, it is only possible to read the address with p0918.

The address switch is behind the blanking plate. The blanking plate is part of the scope of supply.

### Setting the PROFIBUS address

The following reference contains further information about setting the PROFIBUS address: Reference: /IH1/ SINAMICS S120 Commissioning Manual.

## 6.2.3.10 X22 serial interface (RS232)

Table 6- 10 Serial interface (RS-232-C) X140

	Pin	Designation	Technical data			
	2	RxD	Receive data			
	3	TxD	Transmit data			
9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	5	Ground	Ground reference			
Type: 9-pin SUB D connector	Type: 0 pin SLIB D connector					

## 6.2.3.11 Measurement sockets T0, T1, and T2

Table 6- 11 Measurement sockets T0, T1, and T2

Socket	Function	Technical specifications				
T0	Measurement socket 0	Voltage: 0 V to 5 V				
T1	Measurement socket 1	Resolution: 8 bits				
T2	Measurement socket 2	Load current: max. 3 mA Continued-short-circuit-proof				
M Ground The reference potential is terminal M						
The measurement socket	The measurement sockets are only suitable for bunch pin plugs with a diameter of 2 mm.					

### Note

The test sockets are provided as a support to commissioning and diagnostics; they must not be connected for normal operation.

### 6.2.3.12 Slot for the CompactFlash card



Figure 6-4 Slot for CompactFlash card

#### CAUTION

The CompactFlash card may only be inserted as shown in the figure (arrow top right).

The CompactFlash card may only be inserted or removed when the Control Unit is in a novoltage condition.

When returning a defective Control Unit, remove the CompactFlash card and keep it for insertion in the replacement unit.

### 6.2.3.13 Description of the LEDs on the Control Unit

The individual statuses during booting are indicated via the LEDs on the Control Unit (CU310).

- The duration of the individual statuses varies.
- If an error occurs, booting is aborted and the cause of the error is indicated via the LEDs.
   Remedy: Insert the appropriate CompactFlash card with the correct software and parameters.
- Once the unit has been successfully booted, all the LEDs are switched off briefly.
- Once the unit has been booted, the LEDs are driven via the loaded software.
   The description of the LEDs after booting applies.

# Control Unit 310 - behavior of the LEDs during booting

Table 6- 12 Load software 1

	LED			Status	Comment
RDY	DP1	OPT	MOD		
red	red	red	off	Reset	_
red 2 Hz	red	red	off	error	CompactFlash card not inserted or     Load software 2 has not been installed on the CompactFlash card or is defective.

Table 6- 13 Load software 2

	LED			Status	Comment
RDY	DP1	OPT	MOD		
off	red	red	off	Loaded	_
off	Orange	red	off	Running	_
off	red 2 Hz	red	off	error file	Software on the CompactFlash card is incomplete or defective.
off	red 0,5 Hz	red	off	error crc	CRC invalid.
off	off	red	off	Firmware loaded	-

Table 6- 14 Firmware

	LED		Status	Comment	
RDY	DP1	OPT	MOD		
off	off	off	off	initializing	_
alternating		Running	refer to the following table		

Table 6- 15 Control Unit 310 – description of the LEDs after booting

LED	Color	Status	Description, cause	Remedy
RDY (READY)	-	OFF	Electronics power supply is missing or outside permissible tolerance range.	-
	Green	Continuous	The component is ready and cyclic DRIVE-CLiQ communication takes place or the Control Unit waits for first commissioning.	-
		Flashing 2 Hz	Writing to CompactFlash card.	-
	Red	Continuous	At least one fault is present in this component.	Remedy and acknowledge fault

# 6.2 Control Unit CU310 DP (PROFIBUS)

LED	Color	Status	Description, cause	Remedy
		Flashing 2 Hz	Boot error	Make sure that the CompactFlash card has been inserted properly. Replace the CompactFlash Card. Replace Control Unit. Carry-out a POWER ON.
	Green/ Red	Flashing 0.5 Hz	Control Unit 310 is ready for operation. However there are no software licenses.	Obtain licenses.
	Orange	Continuous	DRIVE-CLiQ communication is being established.	-
		Flashing 0.5 Hz	Updating the firmware of the DRIVE-CLiQ components.	-
		2 Hz flashing light	Firmware update is complete for components. Wait for POWER ON for the components in question	Turn POWER ON for the components in question
	Green/ orange or red/ orange	1 Hz flashing light	Component detection via LED is activated (p0124[0]).  Note:  Both options depend on the LED status when component recognition is activated via p0124[0] = 1.	-
COM PROFIdrive cyclic operation	-	OFF	Cyclic communication has not (yet) taken place.  Note: The PROFIdrive is ready to communicate when the Control Unit is ready to operate (see LED RDY).	-
	Green	Continuous	Cyclic communication is taking place.	-
		Flashing 0.5 Hz	Cyclic communication is not yet running fully.     Possible reasons:              The controller is not transferring any setpoints.              During isochronous operation, no global control (GC) or a faulty global control (GC) is transferred by the Controller.	-
	Red	Continuous	Cyclic communication has been interrupted.	Remedy fault
	Orange	Flashing 2 Hz	Firmware CRC error.	Make sure that the CompactFlash card has been inserted properly. Replace the CompactFlash Card. Replace Control Unit. Carry-out a POWER ON.

LED	Color	Status	Description, cause	Remedy
OUT>5 V	-	OFF	Electronics power supply is missing or outside permissible tolerance range.	-
			Voltage supply 5 V	
	Orange	Continuous	Electronics power supply for measuring system available.	-
			Power supply >5 V.	
			Important:  Make sure that the connected encoder can be operated with a 24 V power supply. If an encoder that is designed for a 5 V supply is operated with a 24 V supply, this can destroy the encoder electronics.	
MOD	-	OFF	Reserved	-

# 6.2.4 Dimension drawing

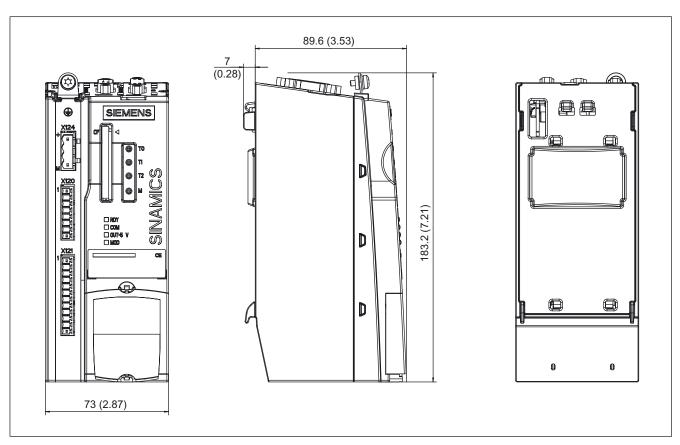


Figure 6-5 Dimension drawing CU310 DP

# 6.2.5 Mounting the CU310 on the Power Module Blocksize

As soon as the Power Module has been been correctly installed, the Control Unit can be attached to the Power Module.



Snap the CU310 onto the Power Module PM340 (Frame size FSD)



Power Module PM340 (frame size FSD) with CU310

The procedure when mounting the Control Unit on the Power Module is independent of the frame size of the Power Modules.

## Removing the Control Unit



In order to remove the Control Unit from the Power Module, the blue release lever, as shown in the diagram, must be pressed downwards and the Control Unit swung-out to the front.

# 6.2.6 Mounting the CU310 in the Power Module Chassis

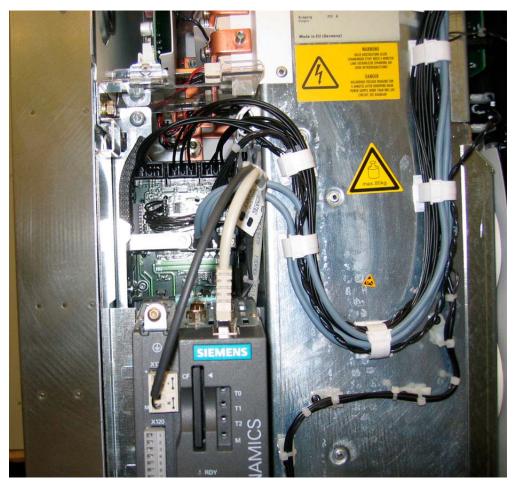


Figure 6-6 Mounting the CU310 in the Power Module chassis format, frame size FX

The DRIVE-CLiQ cable and the cable for the 24 V supply must be correctly routed so that the front flap can close.

### Note

For the Power Module, a connecting cable is also supplied for the power supply of the CU310. Customers must connect-up this cable.

This means that the CU310 no longer has to be supplied from an external 24 V DC.

## 6.2.7 Technical data

Table 6- 16 Technical specifications CU310 DP

	Unit	Value	
Electronics power supply			
Voltage Current (without DRIVE-CLiQ and digital outputs) Power loss	V <sub>DC</sub> A <sub>DC</sub> W	24 DC (20.4 – 28.8) 0.8 <20	
Maximum DRIVE-CLiQ cable length	m	100	
PE/ground connection	On housing with M4/3 Nm screw		
Response time	The response time of digital inputs/outputs depends on the evaluation (refer to the function diagram).		
Reference: /LH1/ SINA diagrams".		st Manual, Chapter "Function	
Weight	kg	0,95	

## 6.3 Control Unit CU310 PN (PROFINET)

#### 6.3.1 Description

The Control Unit 310 PN (PROFINET) is the control module in which the open-loop and closed-loop control functions of a drive are implemented.

The CU310 PN has the following interfaces (ports):

Table 6- 17 Overview of the CU310 PN interfaces (ports)

Туре	Number
Digital inputs	4
Digital inputs/outputs	4
DRIVE-CLiQ interface	1
PROFINET interfaces	2
Serial interface (RS232)	1
Power Module Interface (PM-IF)	1
Encoder interface (HTL/TTL/SSI)	1
EP terminals / temperature sensor	1
24 V electronics power supply	1
Test sockets	3+1
Interface for BOP	1

Available from approx. 07/2006.

#### 6.3.2 Safety information

#### Note

The CompactFlash card may only be inserted and removed from the Control Unit when in the no-voltage condition.



The cooling clearances of 50 mm above and below the components must be observed. It is not permissible that the connecting cables cover the cooling openings.

## 6.3.3 Interface description

#### 6.3.3.1 Overview

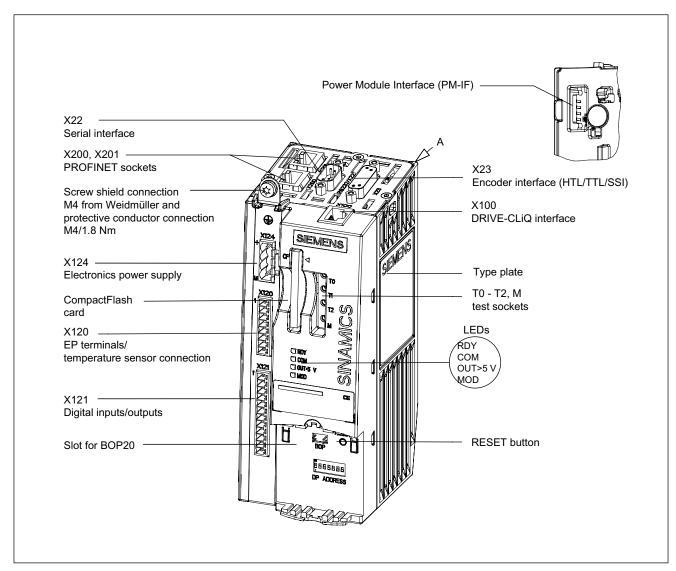


Figure 6-7 Description of the CU310 PN interfaces

#### Note

The PROFIBUS address switch is present for the CU310 PN, however it has not function.

#### 6.3.3.2 Sample connection

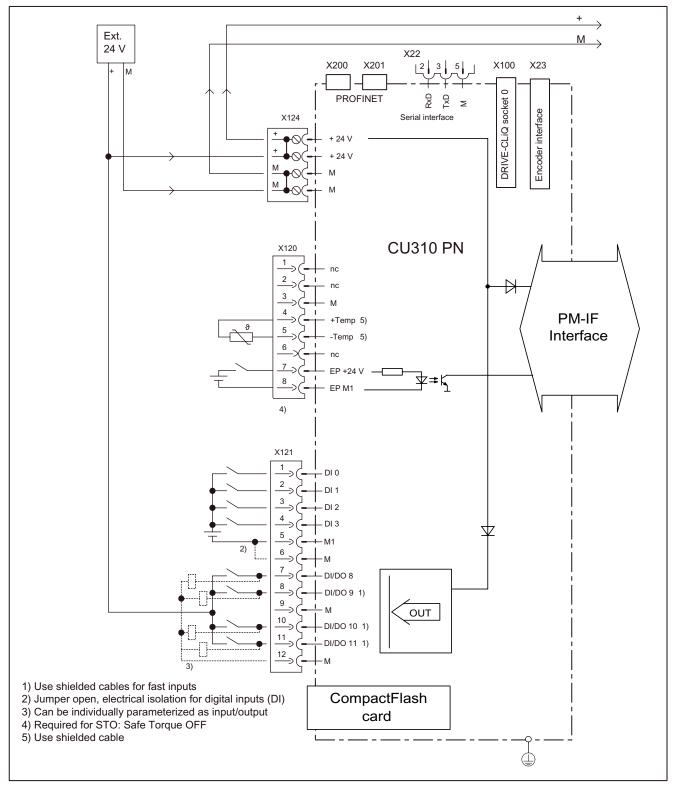


Figure 6-8 Connection example CU310 PN

#### 6.3.3.3 X100 DRIVE-CLiQ interface

Table 6- 18 DRIVE-CLiQ interface

Pin	Signal name	Technical specifications		
1	TXP	Transmit data +		
2	TXN	Transmit data -		
3	RXP	Receive data +		
4	Reserved, do not use			
5	Reserved, do not use			
6	RXN	Receive data -		
7	Reserved, do not use			
8	Reserved, do not use			
Α	+ (24 V)	Power supply		
В	GND (0 V)	Electronic ground		
Blanking cover on DRIVE-CLiQ interface: Yamaichi, Order No.: Y-ConAS-13 The maximum DRIVE-CLiQ cable length is 100 m.				

#### 6.3.3.4 X120 EP terminals / temperature sensor

Table 6- 19 Terminal strip X120

	Terminal	Function	Technical specifications
	1	Reserved, do not use	
_	2	Reserved, do not use	
2	3	M	Ground
<b>ω</b> ω	4	+Temp 1)	KTY or PTC input
4	5	-Temp ¹)	Ground for KTY or PTC
5	6	Reserved, do not use	
6	7	EP +24 V <sup>2)</sup>	Safe standstill input (+)
7	8	EP M1 <sup>2)</sup>	Safe standstill input (-)
8			
Max. connectable	e cross-section 1.5	mm <sup>2</sup>	

<sup>1)</sup>This is the only temperature channel for Order No. 6SL3040-0LA01-0AA0. For Order No. 6SL3040-0LA01-0AA1, this is the second temperature channel (T2), which can be used as single channel dependent on the parameterization or in combination with the first temperature channel (T1, refer to X23).

<sup>2)</sup> The EP terminals must be wired on the Power Module on chassis units.

#### NOTICE

The KTY temperature sensor/the PTC must be connected with the correct polarity.

Further information on the temperature sensors can be found in the following literature:

#### 6.3 Control Unit CU310 PN (PROFINET)

Reference: /IH1/ SINAMICS S120, Commissioning Manual, Chapter "Temperature sensors for SINAMICS components."

#### 6.3.3.5 X121 digital inputs/outputs

Table 6- 20 Terminal strip X121

	Terminal	Designation <sup>1)</sup>	Technical specifications	
	1 2 3	DI 0 DI 1 DI 2	Voltage: -3 V to 30 V Typical current consumption: 10 mA at 24 V DC Isolation: The reference potential is terminal M1	
2 3 4 5 6	4 5 6	DI 3 M1 M	Level (incl. ripple) High level: 15 V to 30 V Low level: -3 V to 5 V Signal propagation times: L → H approx. 50 µs	
7 8 9 10 11	7 8 9 10	DI/DO 8 DI/DO 9 M DI/DO 10	H → L: approx. 100 μs  As input:  Voltage: -3 V to 30 V  Typical current consumption: 10 mA at 24 V DC  Level (incl. ripple)  High level: 15 V to 30 V	
12	11 12	DI/DO 11	Low level: -3 V to 5 V  Terminal numbers 8, 10, and 11 are "fast inputs"  Signal propagation times for inputs/"fast inputs":  L → H: approx. 50 µs/5 µs	
			H → L: approx. 100 μs/50 μs As output:  Voltage: 24 V DC  Max. load current per output: 500 mA  Continued-short-circuit-proof  Signal propagation times of the outputs:	
	hi	4.5 mm²	Signal propagation times of the outputs: $L \rightarrow H$ : approx. 150 µs	

Max. connectable cross-section: 1.5 mm<sup>2</sup>

Type: Spring-loaded terminal 1 (see Appendix A)

#### **NOTICE**

An open input is interpreted as "low".

The "fast inputs" can be used in conjunction with a measuring system for position sensing.

To enable digital inputs (DI) 0 to 3 to function, terminal M1 must be connected. This can be done as follows:

Connect the digital inputs' ground reference, or a jumper to terminal M. This removes the electrical isolation for these digital inputs.

<sup>1)</sup> DI: digital input; DI/DO: Bidirectional digital input/output; M: Electronics ground M1: Ground reference

#### Note

A 24 V voltage supply must be connected to terminal X124 so that the digital outputs can be

If a the 24 V supply is briefly interrupted, then the digital outputs are de-activated during this

#### 6.3.3.6 Electronics power supply X124

Table 6- 21 Terminal block X124

	Terminal	Function	Technical specifications				
	+	Electronics power supply	Voltage: 24 V DC (20.4 V - 28.8 V)				
	+ Electronics power supply		Current consumption: max. 0.8 A (without DRIVE-CLi				
	М	Electronic ground	or digital outputs)				
<b>S</b>	М	Electronic ground	Max. current via jumper in connector: 20 A at 55 °C				

Max. cross-section that can be connected: 2.5 mm<sup>2</sup>

Type: Screw terminal 2 (see Appendix A)

#### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

#### 6.3.3.7 **X200 - X201 PROFINET**

Table 6- 22 PROFINET interfaces X200 - X201

	Pin	Signal name	Meaning	
	1	TXP	Transmit data +	
8 B	2	TXN	Transmit data -	
	3	RXP	Receive data +	
	4	Reserved, do not use		
	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
Connector type: R.	J45plus socket			

Cable type: PROFINET

#### 6.3.3.8 X23 HTL/TTL/SSI encoder interface

Table 6-23 Encoder connection X23

	Pin	Signal name	Technical specifications
	1	+Temp*	KTY or PTC input
	2	SSI_CLK*	SSI clock, positive
	3	SSI_XCLK*	SSI clock, negative
15 0	4	P encoder	Encoder power supply
	5	P encoder	Encoder power supply
000	6	P sense	Remote sense encoder power supply (P)
	7	М	Electronics ground
	8	-Temp*	Ground for KTY or PTC
	9	M sense	Remote sense encoder power supply (N)
	10	RP	R track positive
	11	RN	R track negative
	12	BN	B track negative
	13	BP	B track positive
	14	AN_SSI_XDAT	A track negative / SSI data negative
	15	AP_SSI_DAT	A track positive / SSI data positive
Type: 15-pin su	b D connector		

\*to Pin 1 / Pin 8: These signals are only assigned from Order No. 6SL3040-0LA01-0AA1. The associated temperature channel (T1) can be parameterized as an individual channel or in combination with the second temperature channel (T2) at interface X120 (for parameterization information, refer to the Commissioning Manual). Re. pin 2 / pin 3: These signals are only assigned from Order No. 6SL3040-0LA01-0AA1.

#### **NOTICE**

The KTY temperature sensor/the PTC must be connected with the correct polarity.

Table 6-24 Specification of measuring systems that can be connected

Parameter	Designation	Threshold	Min.	Туре	Max.	Unit
High signal level (TTL bipolar at X23) <sup>1)</sup>	U <sub>Hdiff</sub>		2		5	V
Low signal level (TTL bipolar at X23)1)	U <sub>Ldiff</sub>		-5		-2	V
High signal level	U <sub>н</sub>	High	17		Vcc	٧
(HTL unipolar)		Low	10		Vcc	٧
Low signal level	U <sub>L</sub>	High	0		7	٧
(HTL unipolar)		Low	0		2	٧
High signal level (HTL bipolar) <sup>2)</sup>	U <sub>Hdiff</sub>		3		Vcc	V

Parameter	Designation	Threshold	Min.	Туре	Max.	Unit
Low signal level (HTL bipolar) <sup>2)</sup>	U <sub>Ldiff</sub>		-Vcc		-3	V
High signal level (SSI bipolar at X23) <sup>1)3)</sup>	Undiff		2		5	V
Low signal level (SSI bipolar at X23) <sup>1)3)</sup>	U <sub>Ldiff</sub>		-5		-2	V
Signal frequency	fs		-		500	kHz
Edge clearance	t <sub>min</sub>		100		-	ns
Zero pulse (with T <sub>s</sub> = 1/f <sub>s</sub> )	Length		1/4 · T <sub>s</sub>		3⁄4 ⋅ T <sub>s</sub>	
	Center of the pulse position		50	135	220	Degrees

<sup>1)</sup> Other signal levels according to the RS422 standard.

#### Note

#### We recommend that bipolar encoders are used.

When uni-polar encoders are used, the 15-pin sub D connector should be opened and the unused inverse signals (AN Pin14, BN Pin12 and RN Pin11) connected to ground (Pin7).

#### 6.3.3.9 X22 serial interface (RS232)

Table 6- 25 Serial interface (RS-232-C) X140

	Pin	Designation	Technical data
	2	RxD	Receive data
	3	TxD	Transmit data
9	5	Ground	Ground reference
Type: 9-pin SUB D connector			

 $<sup>^{2)}</sup>$  The absolute level of the individual signals varies between 0 V and  $V_{\text{CC}}$  of the measuring system.

<sup>&</sup>lt;sup>3)</sup> Only from Order No. 6SL3040-0LA01-0AA1 and Firmware 2.5 SP1.

#### 6.3.3.10 Measurement sockets T0, T1, and T2

Table 6- 26 Measurement sockets T0, T1, and T2

Socket	Function	Technical specifications			
Т0	Measurement socket 0	Voltage: 0 V to 5 V			
T1	Measurement socket 1	Resolution: 8 bits			
T2	Measurement socket 2	Load current: max. 3 mA Continued-short-circuit-proof			
M Ground The reference potential is terminal M					
The measurement sockets are only suitable for bunch pin plugs with a diameter of 2 mm.					

#### Note

The test sockets are provided as a support to commissioning and diagnostics; they must not be connected for normal operation.

#### 6.3.3.11 Description of the LEDs on the Control Unit

The individual statuses during booting are indicated via the LEDs on the Control Unit (CU310).

- The duration of the individual statuses varies.
- If an error occurs, booting is aborted and the cause of the error is indicated via the LEDs.
   Remedy: Insert the appropriate CompactFlash card with the correct software and parameters.
- Once the unit has been successfully booted, all the LEDs are switched off briefly.
- Once the unit has been booted, the LEDs are driven via the loaded software.
   The description of the LEDs after booting applies.

## Control Unit 310 - behavior of the LEDs during booting

Table 6-27 Load software 1

LED				Status	Comment
RDY	DP1	OPT	MOD		
red	red	red	off	Reset	_
red 2 Hz	red	red	off	error	CompactFlash card not inserted or     Load software 2 has not been installed on the CompactFlach.
					installed on the CompactFlash card or is defective.

Table 6- 28 Load software 2

	LED			Status	Comment
RDY	DP1	OPT	MOD		
off	red	red	off	Loaded	_
off	Orange	red	off	Running	_
off	red 2 Hz	red	off	error file	Software on the CompactFlash card is incomplete or defective.
off	red 0,5 Hz	red	off	error crc	CRC invalid.
off	off	red	off	Firmware loaded	_

Table 6- 29 Firmware

LED				Status	Comment
RDY	DP1	OPT	MOD		
off	off	off	off	initializing	_
alternating				Running	refer to the following table

Table 6- 30 Control Unit 310 – description of the LEDs after booting

LED	Color	Status	Description, cause	Remedy
RDY (READY)	-	OFF	Electronics power supply is missing or outside permissible tolerance range.	-
	Green	Continuous	The component is ready and cyclic DRIVE-CLiQ communication takes place or the Control Unit waits for first commissioning.	-
		Flashing 2 Hz	Writing to CompactFlash card.	-
	Red	Continuous	At least one fault is present in this component.	Remedy and acknowledge fault
		Flashing 2 Hz	Boot error	Make sure that the CompactFlash card has been inserted properly.
				Replace the CompactFlash Card.
				Replace Control Unit.
				Carry-out a POWER ON.
	Green/ Red	Flashing 0.5 Hz	Control Unit 310 is ready for operation. However there are no software licenses.	Obtain licenses.
	Orange Continuous		DRIVE-CLiQ communication is being established.	-
		Flashing 0.5 Hz	Updating the firmware of the DRIVE-CLiQ components.	-
		2 Hz flashing light	Firmware update is complete for components. Wait for POWER ON for the components in question	Turn POWER ON for the components in question

## 6.3 Control Unit CU310 PN (PROFINET)

LED	Color	Status	Description, cause	Remedy
	Green/ orange or red/ orange	1 Hz flashing light	Component detection via LED is activated (p0124[0]).  Note: Both options depend on the LED status when component recognition is activated via p0124[0] = 1.	-
COM PROFIdrive cyclic operation	-	OFF	Cyclic communication has not (yet) taken place.  Note: The PROFIdrive is ready to communicate when the Control Unit is ready to operate (see LED RDY).	-
	Green	Continuous	Cyclic communication is taking place.	-
		Flashing 0.5 Hz	Cyclic communication is not yet running fully. Possible reasons:	-
			The controller is not transferring any setpoints.	
			During isochronous operation, no global control (GC) or a faulty global control (GC) is transferred by the Controller.	
	Red	Continuous	Cyclic communication has been interrupted.	Remedy fault
	Orange	Flashing 2 Hz	Firmware CRC error.	Make sure that the CompactFlash card has been inserted properly.  Replace the CompactFlash Card.  Replace Control Unit.
				Carry-out a POWER ON.
OUT>5 V	-	OFF	Electronics power supply is missing or outside permissible tolerance range.  Voltage supply 5 V	-
	Orange	Continuous	Electronics power supply for measuring system available.	-
			Power supply >5 V.  Important:  Make sure that the connected encoder can be operated with a 24 V power supply. If an encoder that is designed for a 5 V supply is operated with a 24 V supply, this can destroy the encoder electronics.	
MOD	-	OFF	Reserved	-

## 6.3.4 Dimension drawing

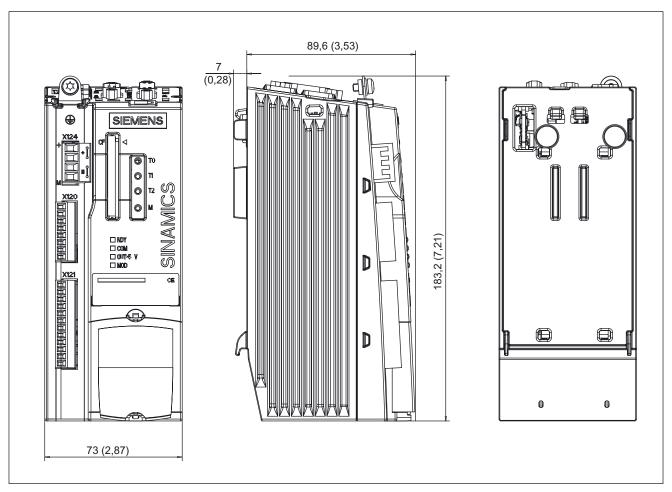


Figure 6-9 Dimension drawing, CU310 PN

## 6.3.5 Mounting the CU310 on the Power Module Blocksize

As soon as the Power Module has been been correctly installed, the Control Unit can be attached to the Power Module.



Snap the CU310 onto the Power Module PM340 (Frame size FSD)



Power Module PM340 (frame size FSD) with CU310  $\,$ 

The procedure when mounting the Control Unit on the Power Module is independent of the frame size of the Power Modules.

## Removing the Control Unit



In order to remove the Control Unit from the Power Module, the blue release lever, as shown in the diagram, must be pressed downwards and the Control Unit swung-out to the front.

#### 6.3.6 Technical data

Table 6- 31 Technical specifications CU310 PN

	Unit	Value	
Electronics power supply			
Voltage Current (without DRIVE-CLiQ and digital outputs) Power loss	V <sub>DC</sub> A <sub>DC</sub> W	24 DC (20.4 – 28.8) 0.8 20	
Maximum DRIVE-CLiQ cable length	m	100	
PE/ground connection	On housing with M4/3 Nm screw		
Response time	The response time of digital inputs/outputs depends on the evaluation (refer to the function diagram).		
	<b>Reference:</b> /LH1/ SINAMICS S List Manual, Chapter "Function diagrams".		
Weight	kg	0,99	

## 6.4 Control Unit Adapter CUA31

#### 6.4.1 Description

The Control Unit Adapter CUA31 combined with a modular power unit is used to extend an existing DC/AC drive line-up e.g. with CU320 by one drive.

The closed-loop control is externally implemented. This is the reason that a SINAMICS, SIMOTION or SINUMERIK closed-loop control is always required for operation.

The Control Unit Adapter CUA31 has the following interfaces (ports):

Table 6-32 Interface overview of the CUA31

Туре	Number
DRIVE-CLiQ interfaces	3
EP terminal / temperature sensor	1
Power Module Interface (PM-IF)	1
24 V electronics power supply	1

## 6.4.2 Safety Information

## / WARNING

The cooling clearances of 50 mm above and below the components must be observed. It is not permissible that the connecting cables cover the cooling openings.

## 6.4.3 Interface description

#### 6.4.3.1 Overview

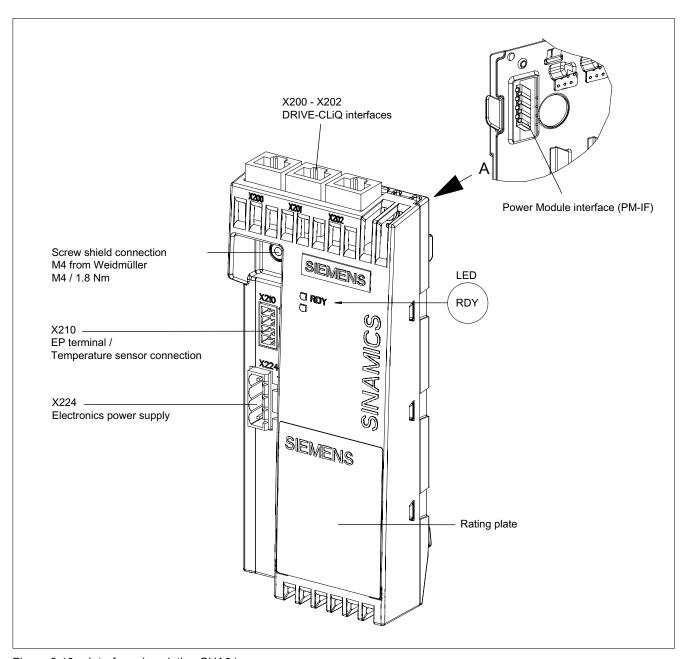


Figure 6-10 Interface description CUA31

#### 6.4 Control Unit Adapter CUA31

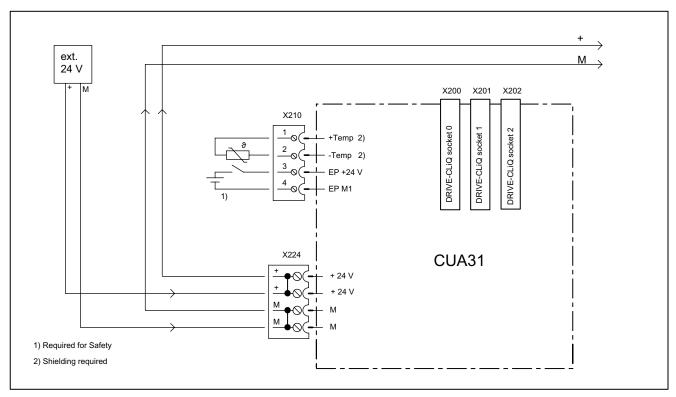


Figure 6-11 Connection example, CUA31

#### 6.4.3.2 X200 - X202 DRIVE-CLiQ interface

Table 6- 33 DRIVE-CLiQ interface

	Pin	Signal name	Technical specifications	
	1	TXP	Transmit data +	
	2	TXN	Transmit data -	
	3	RXP	Receive data +	
	4	Reserved, do not use		
E BA	5	Reserved, do not use		
	6	RXN	Receive data -	
	7	Reserved, do not use		
	8	Reserved, do not use		
	Α	+ (24 V)	Power supply	
	W	M (0 V)	Electronics ground	
Blanking cover	on DRIVE	-CLiQ interface: Yamaichi, order no	o.: Y-ConAS-13	

#### 6.4.3.3 X224 electronics power supply

Table 6- 34 Terminal strip X224

	Terminal	Function	Technical specifications
	+	Electronics power supply	Voltage: 24 V DC (20.4 V - 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.8 A (without DRIVE-CLiQ)
	М	Electronics ground	Max. current via jumper in connector:
<b> 1 1 1 1 1 1 1 1 1 </b>	M	Electronics ground	20 A at 55 °C
Max. connecta	ble cross-secti	on: 2.5 mm <sup>2</sup>	

Max. connectable cross-section: 2.5 mm<sup>2</sup> Type: Screw terminal 2 (see Appendix A)

#### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

#### 6.4.3.4 X210 EP terminals / temperature sensor

Table 6- 35 Terminal strip X210

	Terminal	Function	Technical specifications			
1 2 3	1	+ Temp*	Temperature sensor KTY84–1C130/PTC			
	2	- Temp*				
	3	EP +24 V (Enable Pulses)	Supply voltage: 24 V DC (20.4 V - 28.8 V)			
	4	EP M1 (Enable Pulses)	Current consumption: 10 mA			
		, , , , , , , , , , , , , , , , , , ,	Isolated input			
4			Signal propagation times:			
			L → H 100 µs			
			H → L: 1000 μs			
Max. connectable cross-section 1.5 mm <sup>2</sup>						
Type: Screw te	Type: Screw terminal 1 (see Connection Methods)					

<sup>\*</sup> Further reading: /IH1/ SINAMICS S120, Commissioning Manual, Chapter "Temperature sensors for SINAMICS components".

## NOTICE The KTY temperature sensor/the PTC must be connected with the correct polarity.

#### 6.4 Control Unit Adapter CUA31

#### Note

The temperature sensor is required for motors whose temperature value is not transmitted by DRIVE-CLiQ.

If the "Sicherer Halt" function is selected, 24 V DC must be applied to terminals 3 and 4. Upon removal, pulse inhibit is activated.

#### 6.4.3.5 Description of the LEDs on the Control Unit Adapter CUA31

Table 6- 36 Description of the LEDs at the Control Unit Adapter 31

LED	Color	State	Description
RDY	Red	Steady light	At least one fault is present in this component.
(READY)	Green	Steady light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.

#### Cause and rectification of faults

The following reference contains information about the cause and rectification of faults:

Reference: /IH1/ SINAMICS S120 Commissioning Manual.

## 6.4.4 Dimension drawing


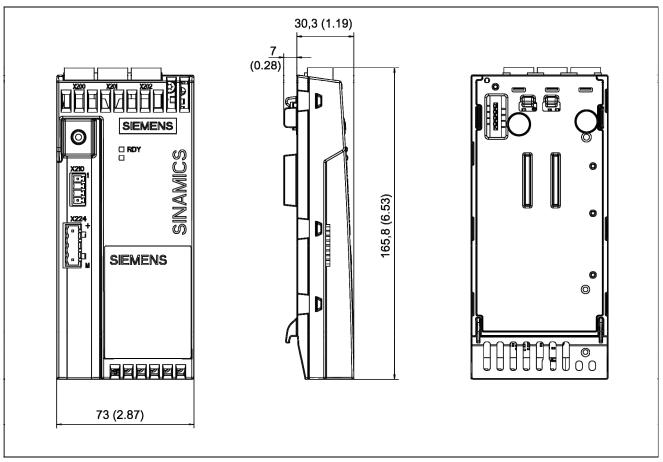


Figure 6-12 Dimension drawing of the Control Unit Adapter CUA31

## 6.4.5 Mounting

 





Power Module 340 (frame size FSD) and CUA31

#### Removing the Control Unit Adapters CUA31



In order to remove the Control Unit Adapter CUA31 from the Power Module, the blue release lever, as shown in the diagram, must be pressed downwards and the Control Unit Adapter CUA31 is swung-out to the front.

#### 6.4.6 Technical data

Table 6- 37 Technical specifications CUA31

	Unit	Value
Electronics power supply		
Voltage	V <sub>DC</sub>	24 DC (20.4 – 28.8)
Current (without DRIVE-CLiQ)	A <sub>DC</sub>	0.1
Power loss	W	2.4
For CUA31 with order no. 6SL3040-0PA00-0AA0, the maximum DRIVE-CLiQ connection length is	m	50
For CUA31 as of order no. 6SL3040-0PA00-0AA1, the maximum DRIVE-CLiQ connection length is	m	100
Weight	kg	0,31

## 6.5 CUA32 Control Unit Adapter

#### 6.5.1 Description

The CUA32 Control Unit Adapter combined with a modular power unit is used to extend an existing DC/AC drive line-up e.g. with CU320 by one drive. It also provides an encoder interface (HTL / TTL / SSI).

The closed-loop control is externally implemented. This is the reason that a SINAMICS, SIMOTION or SINUMERIK closed-loop control is always required for operation.

The CUA32 Control Unit Adapter has the following interfaces (ports):

Table 6-38 Interface overview of the CUA32

Туре	Number
DRIVE-CLiQ interfaces	3
EP terminal / temperature sensor	1
Power Module Interface (PM-IF)	1
24 V electronics power supply	1
Encoder interface (HTL / TTL / SSI <sup>(1)</sup> )	1

<sup>&</sup>lt;sup>1</sup>Only SSI encoders without incremental tracks can be operated on the CUA32.

## 6.5.2 Safety Information



The cooling clearances of 50 mm above and below the components must be observed. It is not permissible that the connecting cables cover the cooling openings.

## 6.5.3 Interface description

#### 6.5.3.1 Overview

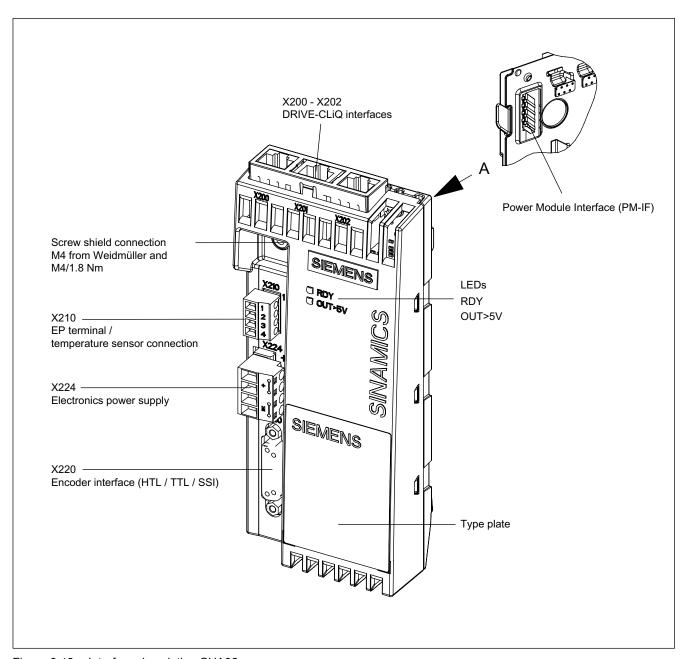


Figure 6-13 Interface description CUA32

#### 6.5 CUA32 Control Unit Adapter

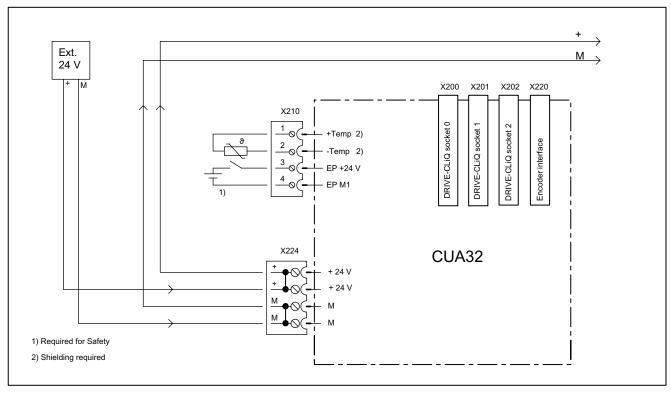


Figure 6-14 Connection example for CUA32

## 6.5.3.2 X200 - X202 DRIVE-CLiQ interface

Table 6-39 DRIVE-CLiQ interface

	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
8   F	3	RXP	Receive data +
	4	Reserved, do not use	
A	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Α	+ (24 V)	Power supply
	В	M (0 V)	Electronics ground
Blanking plate	Blanking plate on DRIVE-CLiQ interface: Yamaichi company, Order No.: Y-ConAS-13		

#### 6.5.3.3 X224 electronics power supply

Table 6- 40 Terminal strip X224

	Terminal	Function	Technical specifications	
+1	+	Electronics power supply	Voltage: 24 V DC (20.4 V - 28.8 V)	
	+	Electronics power supply	Current consumption: max. 0.8 A (without DRIVE-CLiQ	
≥ ≤¶	M	Electronics ground and encoder)	,	
	М	Electronics ground	Max. current via jumper in connector: 20 A at 55 °C	
Max. connectable cross-section: 2.5 mm <sup>2</sup>				
Type: Screw terminal 2 (see Appendix A)				

#### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node and the encoder.

#### 6.5.3.4 X220 HTL/TTL/SSI encoder interface

Table 6-41 Encoder connection X220

	Pin	Signal name	Technical specifications
	1	+Temp	KTY or PTC input
	2	SSI_CLK	SSI clock, positive
	3	SSI_XCLK	SSI clock, negative
	4	P encoder 5 V / 24 V	Encoder power supply
	5	P encoder 5 V / 24 V	Encoder power supply
	6	P sense	Sense input of encoder power supply
15 O O	7	M encoder (M)	Ground for encoder power supply
	8	-Temp	Ground for KTY or PTC
	9	M sense	Ground sense input
	10	RP	R track positive
	11	RN	R track negative
	12	BN	B track negative
	13	ВР	B track positive
	14	AN_SSI_XDAT	A track negative / SSI data negative
	15	AP_SSI_DAT	A track positive / SSI data positive
Type: 15-pin sı	ub D connector		

#### 6.5 CUA32 Control Unit Adapter

#### **NOTICE**

The KTY temperature sensor/the PTC must be connected with the correct polarity.

Table 6- 42 Specification of measuring systems that can be connected

Parameter	Designation	Threshold	Min.	Туре	Max.	Unit
High signal level (TTL bipolar at X220)	U <sub>Hdiff</sub>		2		5	V
Low signal level (TTL bipolar at X220)	U <sub>Ldiff</sub>		-5		-2	V
High signal level	U <sub>H</sub>	High	17		V <sub>CC</sub>	V
(HTL unipolar)		Low	10		Vcc	V
Low signal level	UL	High	0		7	V
(HTL unipolar)		Low	0		2	V
High signal level (HTL bipolar)	U <sub>Hdiff</sub>		3		Vcc	V
Low signal level (HTL bipolar)	U <sub>Ldiff</sub>		-V <sub>CC</sub>		-3	V
High signal level (SSI bipolar at X220)	U <sub>Hdiff</sub>		2		5	V
Low signal level (SSI bipolar at X220)	U <sub>Ldiff</sub>		-5		-2	V
Signal frequency	f <sub>S</sub>		-		500	kHz
Edge clearance	t <sub>min</sub>		100		-	ns
Zero pulse (with T <sub>s</sub> = 1/f <sub>s</sub> )	Length		1⁄4 · Ts		3⁄4 ⋅ T <sub>s</sub>	
	Center of the pulse position		50	135	220	Degrees

#### Note

We recommend that bipolar encoders are used.

When uni-polar encoders are used, the 15-pin sub D connector should be opened and the unused inverse signals (AN Pin14, BN Pin12 and RN Pin11) connected to ground (Pin7).

#### 6.5.3.5 X210 EP terminals / temperature sensor

Table 6-43 Terminal strip X210

	Terminal	Function	Technical specifications	
	1	+ Temp*	Temperature sensor KTY84–1C130/PTC	
	2	- Temp*		
	3	EP +24 V (Enable Pulses)	Supply voltage: 24 V DC (20.4 V - 28.8 V)	
$\begin{vmatrix} 2 \\ 3 \end{vmatrix}$	4	EP M1 (Enable Pulses)	Current consumption: 10 mA	
	3		Isolated input	
4			Signal propagation times:	
			L → H 100 μs	
			H → L: 1000 μs	
H → L: 1000 μs  Max_connectable cross-section 1.5 mm²				

Max. connectable cross-section 1.5 mm<sup>,</sup>

Type: Screw terminal 1 (see Connection Methods)

#### **NOTICE**

The KTY temperature sensor/the PTC must be connected with the correct polarity.

#### Note

The temperature sensor is required for motors whose temperature value is not transmitted by DRIVE-CLiQ.

If the "Sicherer Halt" function is selected, 24 V DC must be applied to terminals 3 and 4. Upon removal, pulse inhibit is activated.

#### 6.5.3.6 Description of the LEDs on the CUA32 Control Unit Adapter

Table 6- 44 Description of the LEDs on the CUA32 Control Unit Adapter

LED	Color	Status	Description
RDY	Red	Continuous	At least one fault is present in this component.
(READY) Green Continuous		Continuous	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.
	-	Off	Electronics power supply is missing or outside permissible tolerance range. Power supply ≤5 V.
OUT > 5V		Continuous	Electronics power supply for measuring system available. Power supply >5 V.
	Orange		Caution
			You must ensure that the connected encoder can be operated with a 24 V power supply.  If an encoder that is designed for a 5 V power supply is operated with
			a 24 V power supply, this can destroy the encoder electronics.

<sup>\*</sup> Further reading: /IH1/ SINAMICS S120, Commissioning Manual, Chapter "Temperature sensors for SINAMICS components".

#### Cause and rectification of faults

The following reference contains information about the cause and rectification of faults:

Reference: /IH1/ SINAMICS S120 Commissioning Manual.

## 6.5.4 Dimension drawing

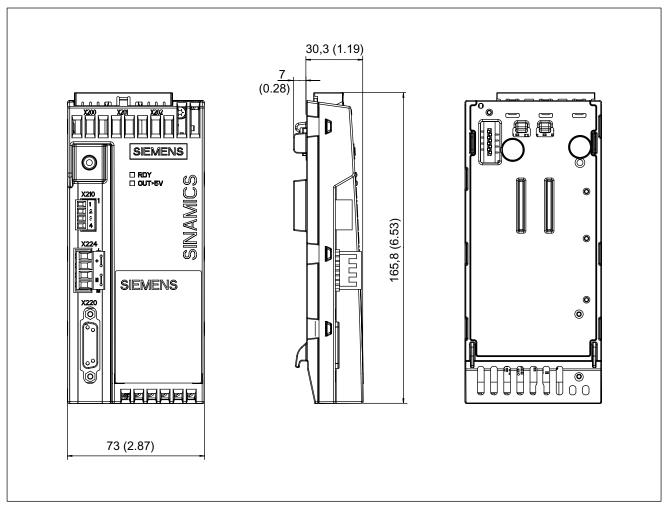


Figure 6-15 Dimension drawing of the CUA32 Control Unit Adapter

## 6.5.5 Assembly

See Section "CUA31 Assembly".

#### 6.5.6 Technical data

Table 6- 45 Technical specifications CUA32

	Unit	Value
Electronics power supply		
Voltage Current (without DRIVE-CLiQ and encoder) maximum current consumption of encoder Power loss	V <sub>DC</sub> A <sub>DC</sub> mA W	24 DC (20.4 – 28.8) 0.11 400 2.6
Maximum DRIVE-CLiQ cable length	m	100
Weight	kg	0,32

6.5 CUA32 Control Unit Adapter

# Supplementary system components and encoder system integration

#### 7.1 Overview

Table 7-1 Overview of the functional capability of supplementary system components with CU310 DP or CU310 PN

	CU310 DP	CU310 PN
BOP20	X	X
CBC10	_	_
CBE20	_	_
TB30	_	_
TM15	X	X
TM31	X	X
TM41	X	X
TM54F	X <sup>1)</sup>	X <sup>1)</sup>
DMC20	X	X
VSM10	X	X
SMC10	X	X
SMC20	X	X
SMC30	X	X
SME20	X	X
SME25	X	X
SME120	X	X
SME125	X	X

<sup>1)</sup> As of firmware V2.5.1

Additional information on the additional system components is provided in the following reference:

Reference: /GH1/ SINAMICS S120 Equipment Manual for Control Units and Additional System Components

## 7.2 Basic Operator Panel BOP20

#### 7.2.1 Description

The Basic Operator Panel BOP20 is a basic operator panel with six keys and a backlit display unit. The BOP20 can be inserted on the SINAMICS Control Unit CU310 DP / PN and operated.

## The BOP20 supports the following functions:

- Input of parameters and activation of functions
- Display of operating modes, parameters, alarms and faults

#### 7.2.2 Interface description



Figure 7-1 Basic Operator Panel BOP20

## Overview of displays and keys

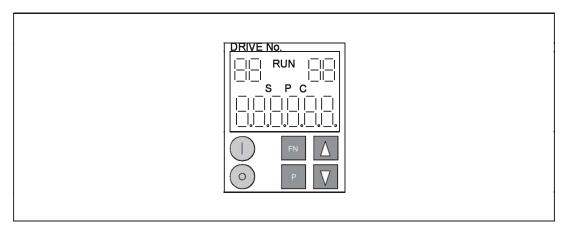


Figure 7-2 Overview of displays and keys

Table 7- 2 Displays

Display	Meaning		
top left 2 positions	The active drive object of the BOP is displayed here. The displays and key operations always refer to this drive object.		
RUN	Is lit (bright) if the displayed drive is in the RUN state (in operation).		
top right 2 positions	<ul> <li>The following is displayed in this field:</li> <li>More than 6 digits: Characters that are present but cannot be seen (e.g. "r2" —&gt; 2 characters to the right are invisible, "L1" —&gt; 1 character to the left is invisible)</li> <li>Faults: Selects/displays other drives with faults</li> <li>Designation of BICO inputs (bi, ci)</li> <li>Designation of BICO outputs (bo, co)</li> <li>Source object of a BICO interconnection to a drive object different than the active one.</li> </ul>		
S	Is (bright) if at least one parameter was changed and the value was not transferred into the non-volatile memory.		
Р	Is lit (bright) if, for a parameter, the value only becomes effective after pressing the P key.		
С	Is light (bright) if at least one parameter was changed and the calculation for consistent data management has still not been initiated.		
Below, 6 position	Displays, e.g. parameters, indices, faults and alarms.		

#### BOP20 keyboard

Table 7-3 Assignment of the BOP20 keyboard

Key	Name	Meaning
	ON	Powering-up the drives for which the command "ON/OFF1", "OFF2" or "OFF3" should come from the BOP.
0	OFF	Powering-down the drives for which the commands "ON/OFF1", "OFF2" or "OFF3" should come from the BOP.
		Note:
		The effectiveness of these keys can be defined using the appropriate BICO parameterization (e.g. using these keys, it is possible to simultaneously control all of the axes that have been configured).
		The structure of the BOP control word corresponds to the structure of the PROFIBUS control word.
	Functions	The significance of these keys depends on the actual display.
FN		Note:
		The effectiveness of this key to acknowledge faults can be defined using the appropriate BiCo parameterization.
Р	Parameter	The significance of these keys depends on the actual display.
Δ	Raise	The keys are dependent on the actual display and are used to
$\nabla$	Lower	raise or lower values.


## Displays and operating the BOP20

Information about the displays and using the BOP20 is provided in the following reference:

Reference: /IH1/ SINAMICS S120 Commissioning Manual.

# 7.2.3 Mounting

Table 7-4 Mounting

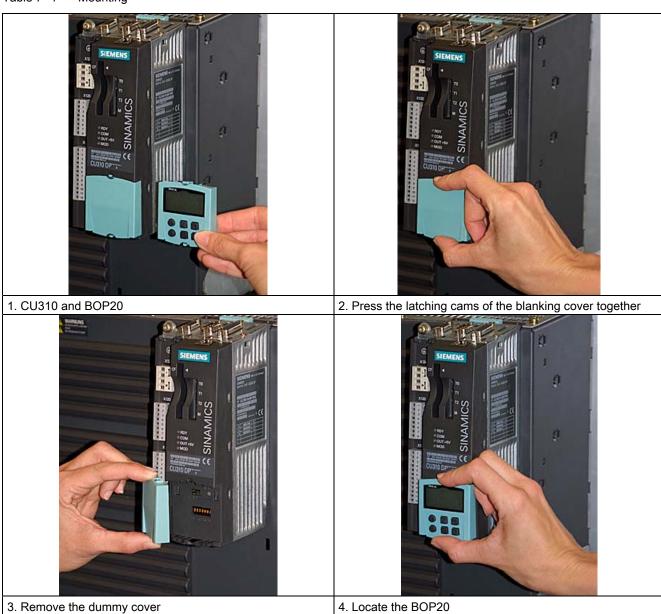

### Note

The Basic Operator Panel BOP20 may be inserted and withdrawn while the Control Unit is operational.

### 7.3 Sensor Module Cabinet-Mounted SMC10

### 7.3.1 Description

The Sensor Module Cabinet-Mounted SMC10 evaluates encoder signals and transmits the speed, actual position value, rotor position and, if necessary, the motor temperature via DRIVE-CLiQ to the Control Unit.

The SMC10 is used to evaluate sensor signals from resolvers.

### 7.3.2 Safety Information



The 50 mm clearances above and below the components must be observed.

#### NOTICE

Only one encoder system may be connected per Sensor Module.

#### Note

There must be no electrical connection between the encoder system housing and the encoder system electronics (this requirement is fulfilled for most encoder systems). If this is not carefully observed, under certain circumstances the system will not be able to reach the required noise immunity (there is then a danger of equalization currents flowing through the electronic ground).

# /!\CAUTION

Connecting cables to temperature sensors must always be installed with shielding. The cable shield must be connected to the chassis potential at both ends over a large surface area. Temperature sensor cables that are routed together with the motor cable must be twisted in pairs and shielded separately.

# 7.3.3 Interface description

### 7.3.3.1 Overview

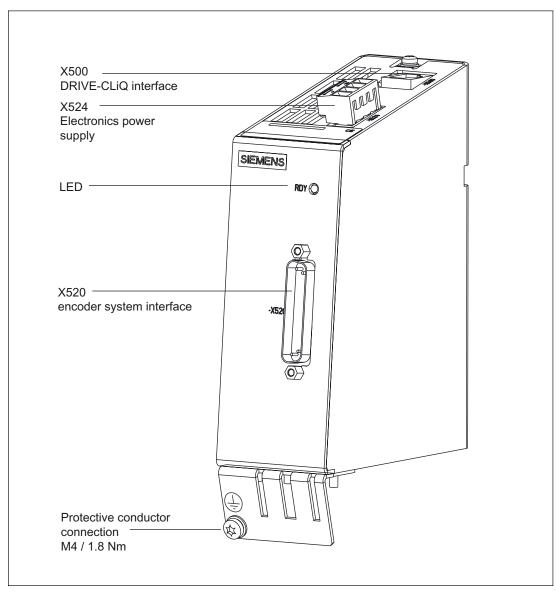


Figure 7-3 Interface description of the SMC10

### 7.3.3.2 DRIVE-CLiQ interface X500

Table 7-5 DRIVE-CLiQ interface X500

	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
8 B	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Α	Reserved, do not use	
	В	GND (0 V)	Electronics ground

# 7.3.3.3 X520 encoder system interface

Table 7- 6 X520 encoder system interface

	Pin	Signal name	Technical specifications
	1	Reserved, do not use	
	2	Reserved, do not use	
	3	S2	Resolver signal A (sin+)
25	4	S4	Inverse resolver signal A (sin-)
	5	Ground	Ground (for internal shield)
	6	S1	Resolver signal B (cos+)
	7	S3	Inverse resolver signal B (cos-)
	8	Ground	Ground (for internal shield)
	9	R1	Resolver excitation positive
	10	Reserved, do not use	
	11	R2	Resolver excitation negative
(•••]	12	Reserved, do not use	
	13	+ Temp	Motor temperature measurement KTY84-1C130 (KTY+) Temperature sensor KTY84-1C130 / PTC
	14	Reserved, do not use	
	15	Reserved, do not use	
	16	Reserved, do not use	
	17	Reserved, do not use	
	18	Reserved, do not use	
	19	Reserved, do not use	
	20	Reserved, do not use	
	21	Reserved, do not use	
	22	Reserved, do not use	

P	Pin	Signal name	Technical specifications
23	23	Reserved, do not use	
24	24	Ground	Ground (for internal shield)
25	25	- Temp	Motor temperature measurement KTY84-1C130 (KTY-) Temperature sensor KTY84-1C130 / PTC

## 7.3.3.4 Electronics power supply X524

Table 7-7 Terminal block X524

	Technical specifications	Function	Terminal	
	Voltage: 24 V (20.4 V – 28.8 V)	Electronics power supply	+	
	Current consumption: max. 0,35 A	Electronics power supply	+	
ctor: 20 A at 55°C	Maximum current via jumper in connector: 20 A at	Electronic ground	М	
		Electronic ground	М	
_		ction: 2.5 mm²	able cross see	Max connecta

Max. connectable cross-section: 2.5 mm² Type: Screw terminal 2 (see Appendix)

#### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures the supply voltage is looped through.

### 7.3.3.5 Significance of LEDs on the Sensor Module Cabinet-Mounted SMC10

Table 7-8 Sensor Module Cabinet-Mounted SMC10 – description of the LEDs

LED	Color	State	Description, cause	Remedy
RDY READY			Electronics power supply is missing or outside permissible tolerance range.	_
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	_
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	_
	Red	Continuous light	At least one fault is present in this component.  Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remedy and acknowledge fault
	Green/re d	Flashing, 0.5 Hz	Firmware is being downloaded.	-
		Flashing, 2 Hz	Firmware download is complete. Wait for POWER ON	Carry out a POWER ON
	Green/or ange or Red/oran ge	Flashing	Component recognition via LED is activated (p0144).  Note:  Both options depend on the LED status when component recognition is activated via p0144 = 1.	-

### Cause and rectification of faults

The following reference contains further information about the cause and rectification of faults:

References: /IH1/ SINAMICS S, Commissioning Manual

# 7.3.4 Dimension drawing

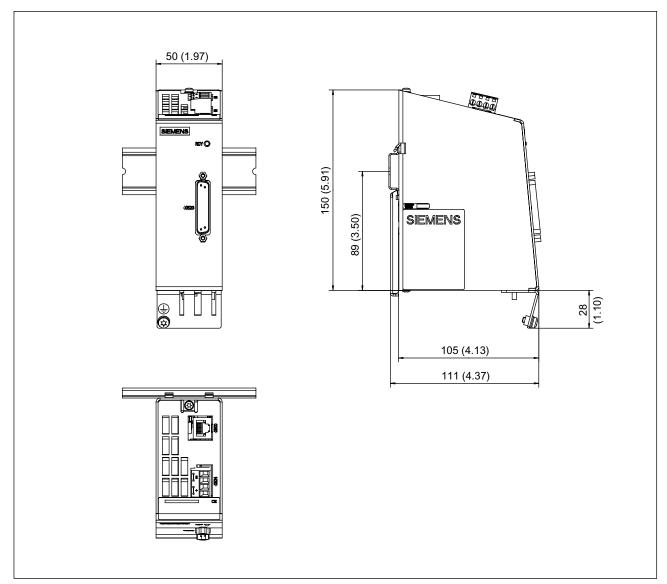


Figure 7-4 Dimension drawing of the SMC10

### 7.3.5 Installation

### Installation

- 1. Place the component on the DIN rail.
- 2. Snap the component on to the DIN rail. Make sure that the mounting slides at the rear latch into place.
- 3. You can now move the component on the DIN rail to the left or to the right to its final position.

### Removal

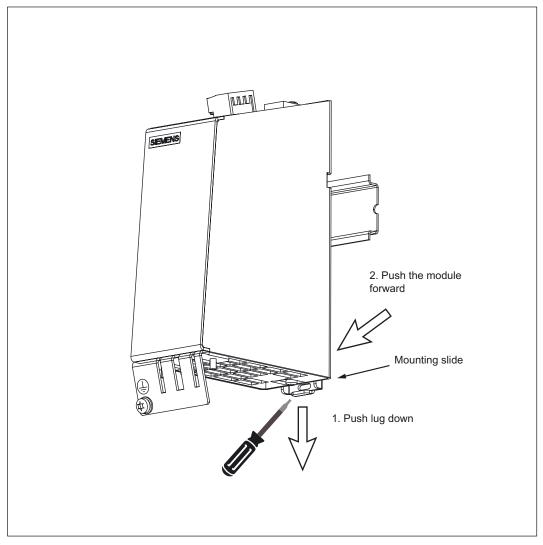


Figure 7-5 Releasing the component from a DIN rail

### 7.3.6 Technical data

Table 7-9 Technical data

Sensor Module Cabinet-Mounted SMC10	Designation	Unit	Value
6SL3055-0AA00-5AAx			
Electronics power supply			
Voltage	V <sub>DC</sub>	V	24 DC (20.4 – 28.8)
Current (without encoder system)	A <sub>DC</sub>	Α	≤ 0.20
Current (with encoder system)	A <sub>DC</sub>	Α	≤ 0.35
Power loss	W	W	≤ 10
Specification			
Transmission ratio (ü) of the resolver	ü =		0,5
Excitation voltage on the SMC10 when ü=0.5	V <sub>rms</sub>	V	4,1
Amplitude monitoring threshold (secondary	V <sub>rms</sub>	V	1
tracks) of the SMC10			
Excitation voltage (cannot be parameterized)	V <sub>rms</sub>	V	4,1
Excitation frequency (synchronized to the current		kHz	5 to 10
controller clock cycle)			
PE/ground connection		On housing w	ith M4 / 1.8 Nm screw
Max. encoder cable length		m	130
Weight		kg	0,8
Degree of protection		IP20 or IPXXE	3

Table 7- 10 Max. frequency that can be evaluated (speed)

Res	olver	Max. speed resolver / motor		
Number of poles	Number of pole pairs	8kHz/125 µsec	4kHz/250 µsec	2kHz/500 µsec
2-pole	1	120,000 rpm	60,000 rpm	30,000 rpm
4-pole	2	60,000 rpm	30,000 rpm	15,000 rpm
6-pole	3	40,000 rpm	20,000 rpm	10,000 rpm
8-pole	4	30,000 rpm	15,000 rpm	7,500 rpm

The ratio between the ohmic resistance R and the inductance L (the primary winding of the resolver) determines whether the resolver can be evaluated with the SMC10. See the following diagram:

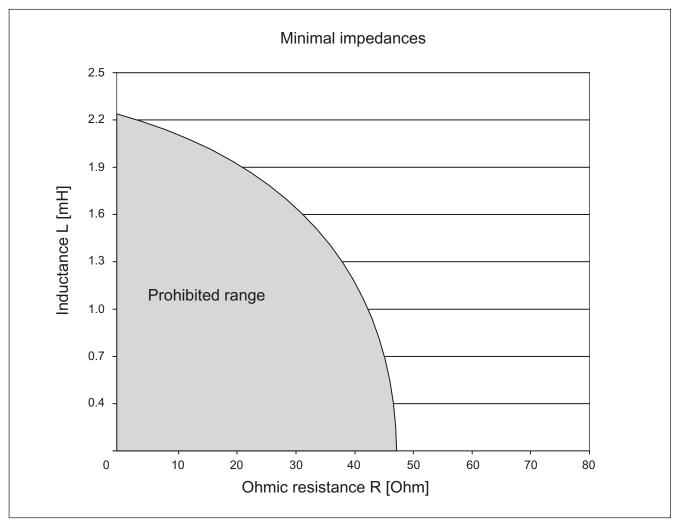


Figure 7-6 Connectable impedances with an excitation frequency f = 5000 Hz

### 7.4 Sensor Module Cabinet-Mounted SMC20

### 7.4.1 Description

The Sensor Module Cabinet-Mounted SMC20 evaluates encoder signals and transmits the speed, actual position value, rotor position and, if necessary, the motor temperature and reference point via DRIVE-CLiQ to the Control Unit.

The SMC20 is used to evaluate encoder signals from incremental encoders with SIN/COS (1 Vpp) or absolute encoders with EnDat 2.1 or SSI.

### 7.4.2 Safety information



The 50 mm clearances above and below the components must be observed.

#### NOTICE

Only one encoder system may be connected per Sensor Module.

#### Note

There must be no electrical connection between the encoder system housing and the encoder system electronics (this requirement is fulfilled for most encoder systems). If this is not carefully observed, under certain circumstances the system will not be able to reach the required noise immunity (there is then a danger of equalization currents flowing through the electronic ground).

# /!\CAUTION

Connecting cables to temperature sensors must always be installed with shielding. The cable shield must be connected to the chassis potential at both ends over a large surface area. Temperature sensor cables that are routed together with the motor cable must be twisted in pairs and shielded separately.

# 7.4.3 Interface description

### **7.4.3.1** Overview

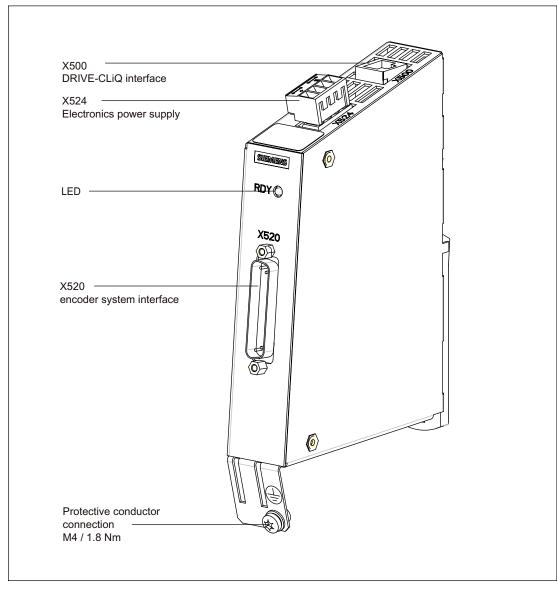


Figure 7-7 Interface description SMC20, 30 mm wide, order number: 6SL3055-0AA00-5BA2

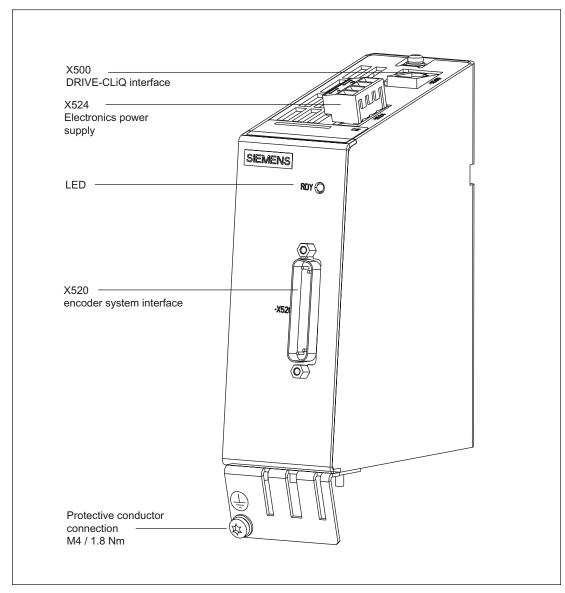


Figure 7-8 Interface description SMC20, 50 mm wide, order number: 6SL3055-0AA00-5BA1

### 7.4.3.2 DRIVE-CLiQ interface X500

Table 7- 11 DRIVE-CLiQ interface X500

	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
8 B	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Α	Reserved, do not use	
	В	GND (0 V)	Electronics ground

# 7.4.3.3 X520 sensor system

Table 7- 12 X520 encoder system interface

	Pin	Signal name	Technical specifications
	1	P encoder	Encoder power supply
	2	M encoder	Ground for encoder power supply
	3	А	Incremental signal A
25	4	A*	Inverse incremental signal A
	5	Ground	Ground (for internal shield)
•	6	В	Incremental signal B
	7	B*	Inverse incremental signal B
• •	8	Ground	Ground (for internal shield)
	9	Reserved, do not use	
	10	Clock	Clock, EnDat interface, SSI clock
: •	11	Reserved, do not use	
	12	Clock*	Inverted clock, EnDat interface, inverted SSI clock
	13	+ Temp	Motor temperature measurement KTY84-1C130 (KTY+) Temperature sensor KTY84-1C130 / PTC
	14	P sense	Sense input encoder power supply
	15	Data	Data, EnDat interface, SSI data
	16	M sense	Ground sense input encoder power supply
	17	R	Reference signal R
	18	R*	Inverse reference signal R
	19	С	Absolute track signal C
	20	C*	Inverted absolute track signal C
	21	D	Absolute track signal D
	22	D*	Inverse absolute track signal D
	23	Data*	Inverse data, EnDat interface, Inverse SSI data
	24	Ground	Ground (for internal shield)
	25	- Temp	Motor temperature measurement KTY84-1C130 (KTY-) Temperature sensor KTY84-1C130 / PTC

### 7.4.3.4 Electronics power supply X524

Table 7- 13 Terminal block X524

	Terminal	Function	Technical specifications
	+	Electronics power supply	Voltage: 24 V (20.4 V – 28.8 V)
	+	Electronics power supply	Current consumption: max. 0,35 A
	M	Electronic ground	Maximum current via jumper in
<b>S</b>	М	Electronic ground	connector: 20 A at 55°C
	bla anna anation. O F mana?		•

Max. connectable cross-section: 2.5 mm<sup>2</sup> Type: Screw terminal 2 (see Appendix A)

#### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures the supply voltage is looped through.

### 7.4.3.5 Significance of LEDs on the Sensor Module Cabinet-Mounted SMC20

Table 7- 14 Sensor Module Cabinet-Mounted SMC20 – description of the LEDs

LED	Color	State	Description, cause	Remedy
RDY READY	-	Off	Electronics power supply is missing or outside permissible tolerance range.	_
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	_
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	At least one fault is present in this component.  Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remedy and acknowledge fault
	Green/re d	Flashing, 0.5 Hz	Firmware is being downloaded.	_
		Flashing, 2 Hz	Firmware download is complete. Wait for POWER ON	Carry out a POWER ON
	Green/or ange or Red/oran ge	Flashing	Component recognition via LED is activated (p0144).  Note: Both options depend on the LED status when component recognition is activated via p0144 = 1.	_

### Cause and rectification of faults

The following reference contains further information about the cause and rectification of faults:

References: /IH1/ SINAMICS S, Commissioning Manual

# 7.4.4 Dimension drawing

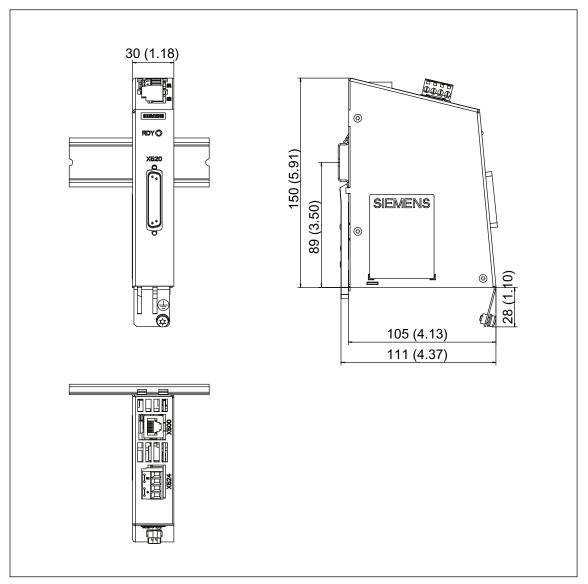


Figure 7-9 Interface description SMC20, 30 mm wide, order number: 6SL3055-0AA00-5BA2

### 7.4 Sensor Module Cabinet-Mounted SMC20

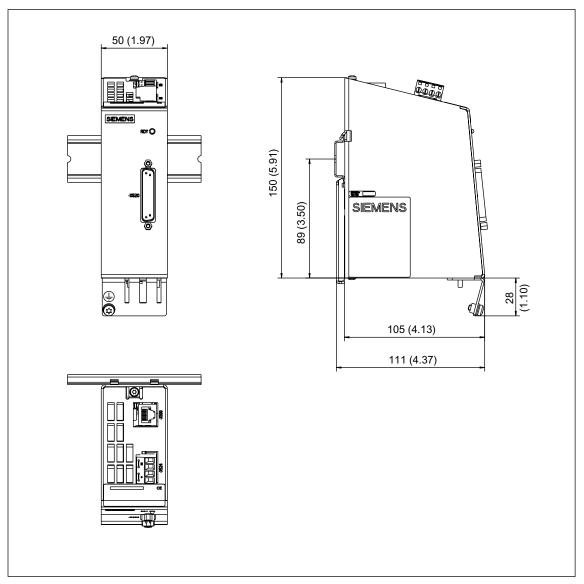


Figure 7-10 Interface description SMC20, 50 mm wide, order number: 6SL3055-0AA00-5BA1

# 7.4.5 Mounting

### Mounting

- 1. Place the component on the DIN rail.
- 2. Snap the component on to the DIN rail. Make sure that the mounting slides at the rear latch into place.
- 3. You can now move the component on the DIN rail to the left or to the right to its final position.

#### Removal

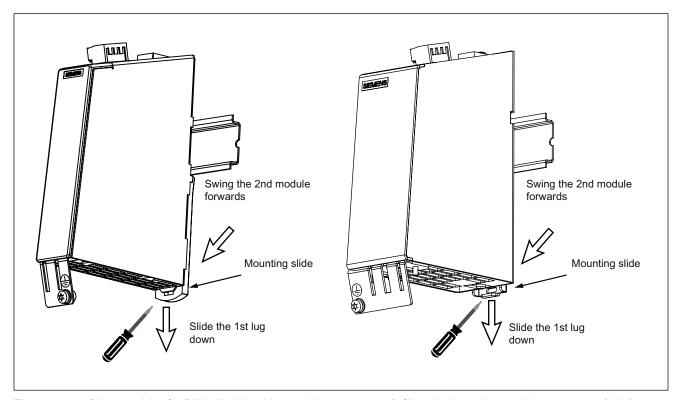


Figure 7-11 Disassembly of a DIN rail with a 30mm wide component (left) and with a 50mm wide component (right).

## 7.4.6 Technical Specifications

Table 7- 15 Technical data

Sensor Module Cabinet-Mounted SMC20	Designation	Unit	Value
6SL3055-0AA00-5BAx			
Electronics power supply			
Voltage	V <sub>DC</sub>	V	24 DC (20.4 – 28.8)
Current (without encoder system)	ADC	A	≤ 0.20
Current (with encoder system)	A <sub>DC</sub>	Α	≤ 0.35
Power loss	W	W	≤ 10
Encoder system power supply			
Voltage	V <sub>encoder</sub>	V	5 V DC (with Remote Sense) 1)
Current	Aencoder	Α	0.35
Encoder frequency that can be evaluated	f <sub>encoder</sub>	kHz	≤ 500
SSI baud rate <sup>2)</sup>		kHz	100
Max. encoder cable length		m	100
PE/ground connection		On housing with M	14 / 1.8 Nm screw
Weight		kg	0.45 (Order no.: 6SL3055-0AA00- 5BA2) 0.8 (Order no.: 6SL3055-0AA00- 5BA1)
Degree of protection		IP20 or IPXXB	

<sup>&</sup>lt;sup>1)</sup> A controller compares the encoder system supply voltage - sensed via the remote sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the drive module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply). A controller compares the encoder system supply voltage - sensed via the remote sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the drive module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply).

<sup>&</sup>lt;sup>2)</sup> only possible for SSI encoders with 5 V supply.

## 7.5 Option modules, brake control

### 7.5.1 Introduction

A brake control option module (Safe Brake Relay) is required for operating motors with holding brakes.

The brake control option module is the electrical interface between the CU/PM340 and the brake of a motor.

This is mounted in the Screening Kit (refer to the Chapter "Screening Kit") or alternatively at the rear cabinet panel.

### 7.5.2 Safe Brake Relay

The Safe Brake Relay in conjunction with Power Modules of the Blocksize format can be used to trigger a 24 V DC motor brake.

The brake is electronically controlled. All holding brakes can be used up to 2 A. To operate the brake, it is necessary to connect the power supply voltage for the brake separately at the option module brake control. In this case, a regulated power supply is required whose rated value (to balance the voltage drop in the supply cable for the 24 V DC motor brake coil) can be set to 26 V (e.g. SITOP modular).

Table 7- 16 Overview of the Safe Brake Relay interfaces

Туре	Number
Connection for the solenoid of the motor brake	1
Connection for a 24 V DC power supply	1
Connection for the pre-fabricated (CTRL) to the Power Module, Blocksize format	1

The Safe Brake Relay is shipped with the pre-fabricated cable to connect to the Power Module and all of the customer connectors.

7.5 Option modules, brake control

### 7.5.2.1 Safety Information

#### Note

A regulated DC power supply is required to operate motors with a built-in holding brake. The power supply is supplied via the internal 24 V busbars. The voltage tolerances of the motor holding brakes and the voltage drops of the connection cables must be taken into account.

The DC power supply should be set to 26 V. This ensures that the power supply for the brake remains within the permissible range when the following conditions are fulfilled:

- Using Siemens three-phase motors
- Using Siemens MOTION-CONNECT power cables
- Motor cable lengths: max. 100 m

### 7.5.2.2 Interface description

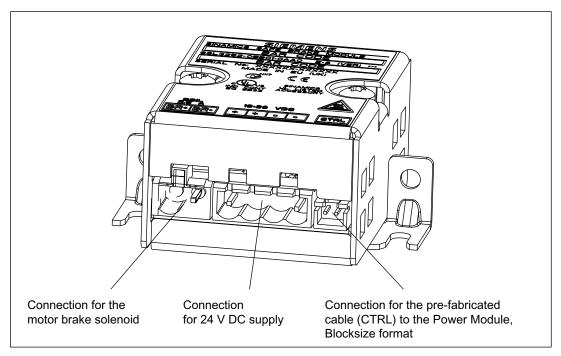


Figure 7-12 Interface description: Safe Brake Relay

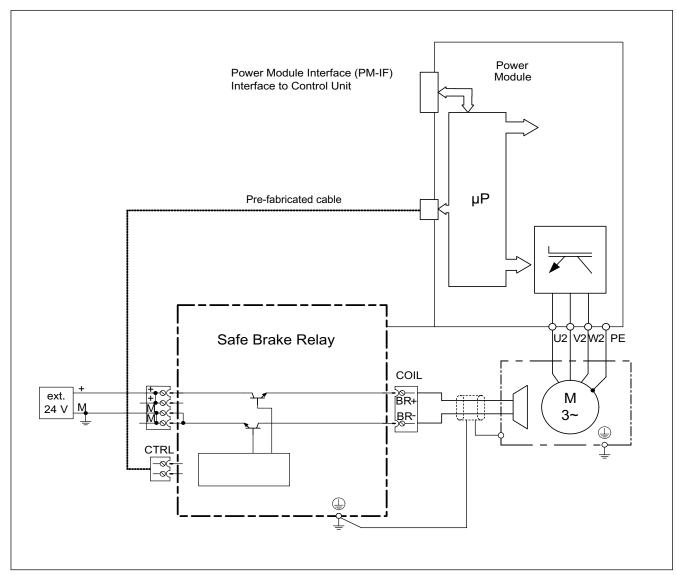


Figure 7-13 Connection example: Safe Brake Relay

# Electronics power supply X524

Table 7- 17 Terminal block X524

	Terminal	Function	Technical specifications	
	+	Electronics power supply	Voltage: 24 V (20.4 V - 28.8 V)	
+		Electronics power supply	Current consumption: max. 0.3 A (without	
M M	Electronic ground	motor holding brake)		
<b>I</b> ≥	М	Electronic ground	Maximum current via jumper in connect 20 A at 55°C	
Max. cross-section that can be connected: 2.5 mm²				
Type: Screw terminal 2 (see Appendix)				

### 7.5 Option modules, brake control

#### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures the supply voltage is looped through.

### **Brake connection**

Table 7- 18 Connector

Designation	Technical specifications	
Brake connection	Relay output (close)	
PE connection	M4 / 3 Nm	

## 7.5.2.3 Dimension drawing

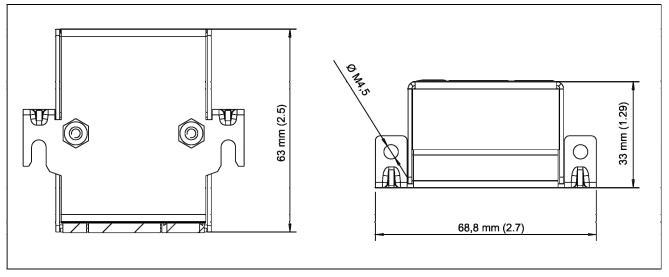


Figure 7-14 Dimension drawing: Safe Brake Relay

# **7.5.2.4** Mounting

The Safe Brake Relay can be mounted below the Power Module on the Screening Kit.

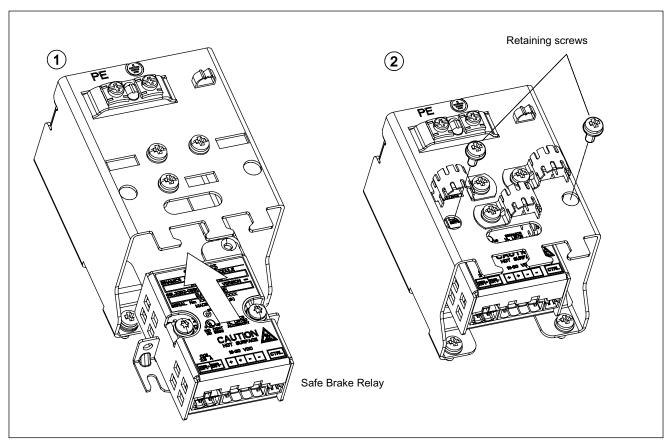


Figure 7-15 Mounting the Safe Brake Relay on the Screening Kit (frame size FSA)

### 7.5 Option modules, brake control

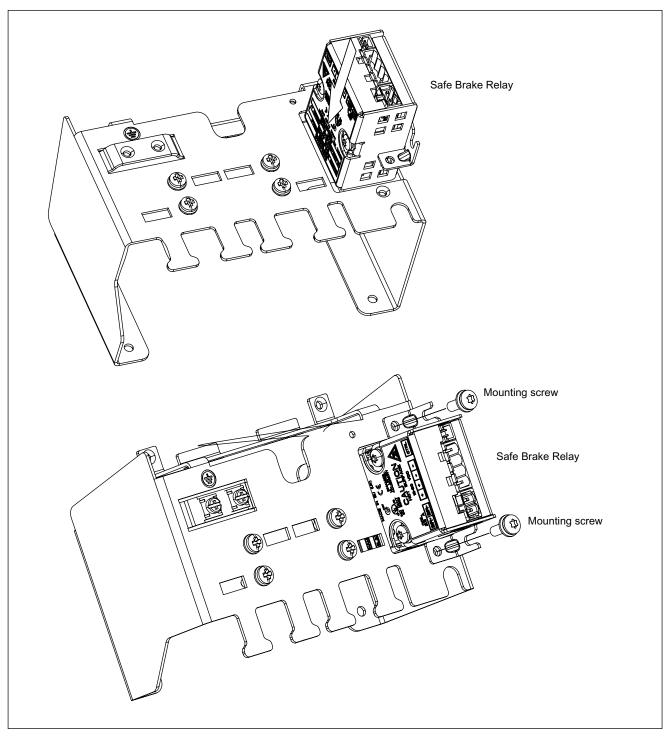


Figure 7-16 Mounting the Safe Brake Relay on the Screening Kit (frame sizes FSB and FSC)

### 7.5.2.5 Technical data

Safe Brake Relay	
Power supply	20.4 to 28.8 V DC Recommended nominal value of the power supply 26 V DC (to equalize and compensate for the voltage drop along the feeder cable to the 24 V DC solenoid of the motor brake)
Max. permissible current drain of the motor brake	2 A
Max. current requirements (at 24 V DC)	0.05 A + the current drain of the motor brake
Max. connectable cross section	2.5 mm <sup>2</sup>
Weight, approx.	0.17 kg

7.5 Option modules, brake control

Accessories

# 8.1 DRIVE-CLiQ cabinet gland

### 8.1.1 Description

The DRIVE-CLiQ cabinet gland is used to connect two DRIVE-CLiQ cables and can be installed in a cabinet panel.

At the interface outside the cabinet, a DRIVE-CLiQ connection is implemented with degree of protection IP67 acc. to EN 60529; however, on the other hand inside the cabinet, a connection with degree of protection IP20 or IPXXB acc. to EN 60529. The interface between the cabinet wall and DRIVE-CLiQ cabinet gland should have degree of protection IP54 acc. to EN 60529.

In addition to the data lines, the power supply contacts of DRIVE-CLiQ are also routed via the coupling.

## 8.1.2 Safety Information

#### Note

Only Siemens cables should be used for DRIVE-CLiQ connections.

### 8.1 DRIVE-CLiQ cabinet gland

# 8.1.3 Interface description

### 8.1.3.1 Overview

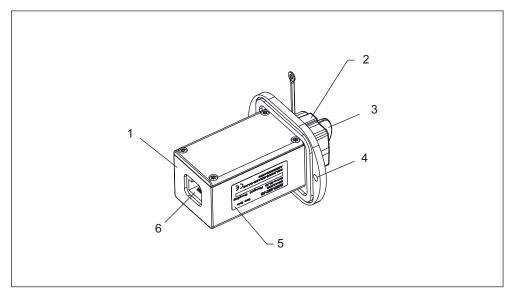


Figure 8-1 DRIVE-CLiQ cabinet gland

1	DRIVE-CLiQ cabinet gland
2	Covering cap, Yamaichi, order no.: Y-ConAS-24-S
3	IP67 acc. to EN 60529 interface
4	Mounting holes
5	Rating plate
6	IP20 or IPXXB acc. to EN 60529 interface

# 8.1.4 Dimension drawing

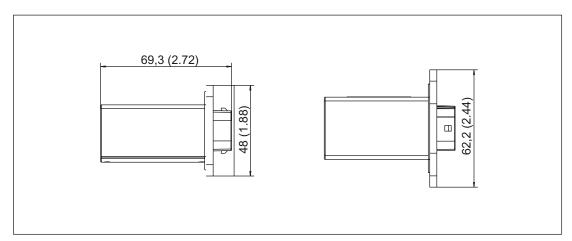


Figure 8-2 Dimensions of the DRIVE-CLiQ cabinet gland, all dimensions in mm and (inches)

Accessories	W [mm]	D [mm]	H [mm]
DRIVE-CLiQ cabinet gland (with	69,3 (2.72)	62,2 (2.44)	48 (1.88)
seal)			

### 8.1 DRIVE-CLiQ cabinet gland

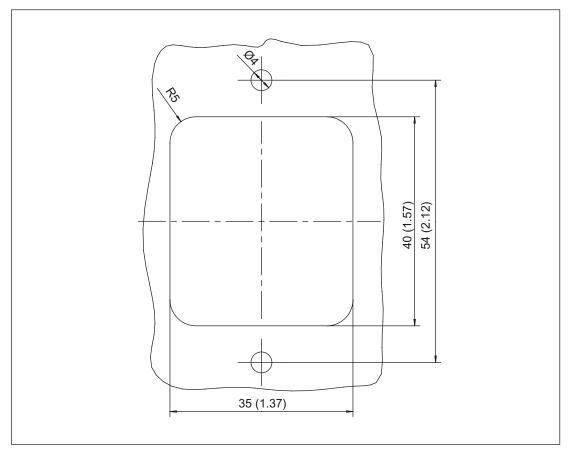


Figure 8-3 Cut-out for the cabinet

# 8.1.5 Mounting

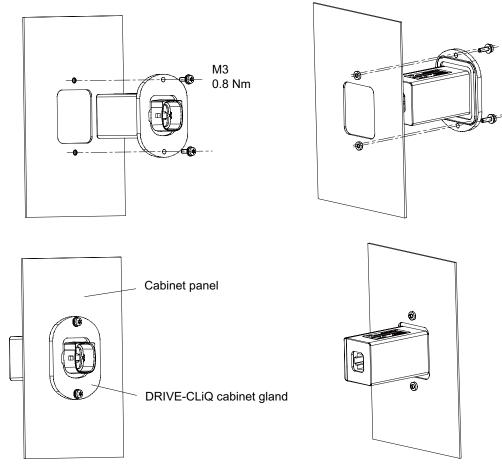


Figure 8-4 DRIVE-CLiQ cabinet gland

### Installation

- 1. Make an opening in the cabinet panel according to the Chapter "Dimension drawing" for the DRIVE-CLiQ cabinet gland.
- 2. Insert the components from the outer side of the cabinet through the opening in the cabinet.
- Secure the DRIVE-CLiQ cabinet gland to the outer cabinet panel using two M3 screws and two nuts. In order to ensure good electromagnetic compatibility, a good electrical connection must be established between the DRIVE-CLiQ cabinet gland and the cabinet panel.

### 8.2 DRIVE-CLiQ coupling

### 8.1.6 Technical data

Table 8- 1 Technical data

DRIVE-CLiQ cabinet gland 6SL3066-2DA00-0AAx	Unit		
Weight	kg	0,135	
Degree of protection	IP20 or IPXXB acc. to EN 60529 in the electrical cabinet		
	IP54 to EN 60529 outside the electrical cabinet		

# 8.2 DRIVE-CLiQ coupling

### 8.2.1 Description

The DRIVE-CLiQ coupling is used to connect two DRIVE-CLiQ cables in accordance with degree of protection IP67 acc. to EN 60529.

In addition to the data lines, the power supply contacts of DRIVE-CLiQ are also routed via the coupling.

You can find information on the permissible cable length in the chapter "DRIVE-CLiQ cable".

# 8.2.2 Safety Information

#### Note

Only Siemens cables should be used for DRIVE-CLiQ connections.

# 8.2.3 Interface description

### 8.2.3.1 Overview

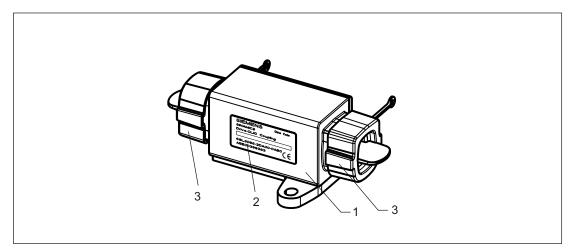


Figure 8-5 DRIVE-CLiQ coupling

1	DRIVE-CLiQ coupling
2	Rating plate
3	Covering caps, Yamaichi, Order No.: Y-ConAS-24-S

# 8.2.4 Dimension drawing

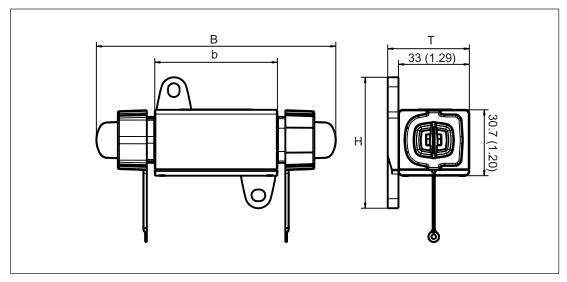


Figure 8-6 Dimension drawing, DRIVE-CLiQ coupling

Table 8-2 Dimensions of the DRIVE-CLiQ coupling, all data in mm and (inches)

Accessories	W [mm]	b [mm]	H [mm]	D [mm]
DRIVE-CLiQ	111,5 (4.38)	57,1 (2.24)	61 (2.40)	38 (1.49)
coupling				

### 8.2.5 Installation

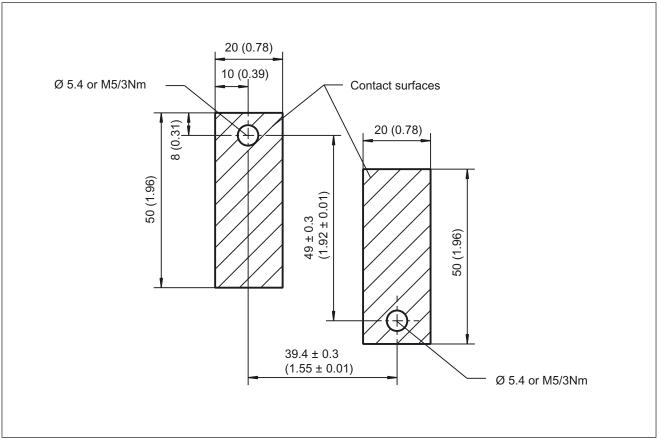


Figure 8-7 Hole drilling template for installation

- 1. Fit the DRIVE-CLiQ coupling to the mounting surface in accordance with the drilling template.
- 2. Remove the protective caps on the DRIVE-CLiQ coupling.
- 3. Insert the DRIVE-CLiQ connector at both ends of the DRIVE-CLiQ coupling.

# 8.2.6 Technical data

Table 8-3 Technical data

DRIVE-CLiQ coupling 6FX2003- 0DC1x	Unit	
Weight	kg	0,14
Degree of protection	IP67 acc. to EN 60529	

# 8.3 Screening Kit

### Shielding methods

A Screening Kit is available as option for all frame sizes to connect the shield. This Screening Kit is used to connect the shield of power cables. For frame sizes FSA to FSC, the Screening Kit is directly mounted on the electrical cabinet panel and for frame sizes FSD to FSF, it is screwed to the Power Module.

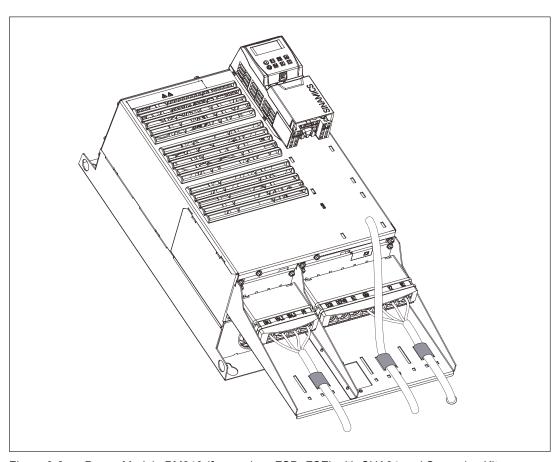


Figure 8-8 Power Module PM340 (frame sizes FSD, FSE) with CUA31 and Screening Kit

Table 8-4 Overview, Screening Kit

Screening Kit 6SL3262-	1AA00-0BA0	1AB00-0DA0	1AC00-0DA0	1AD00-0DA0	1AD00-0DA0	1AF00-0DA0
for PM340 Frame size	FSA	FSB	FSC	FSD	FSE	FSF

# 8.3.1 Dimension drawings

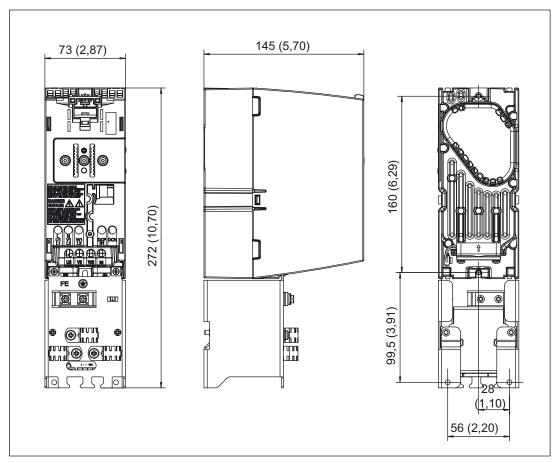


Figure 8-9 Dimension drawing: Power Module PM340 with Screening Kit and Brake Relay, frame size FSA

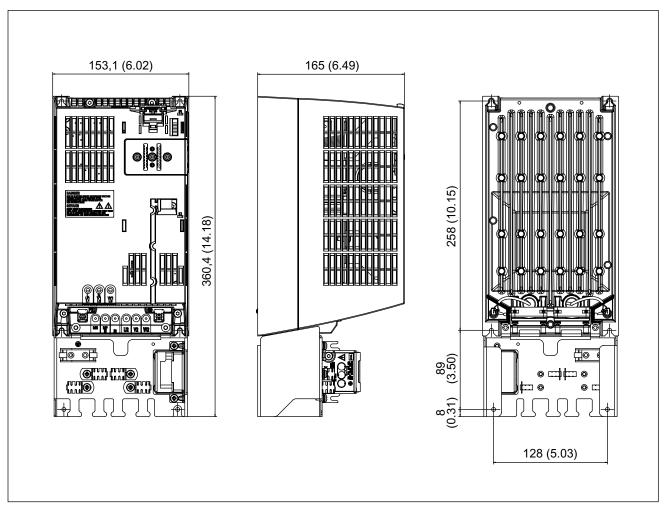


Figure 8-10 Dimension drawing: Power Module PM340 with Screening Kit and Brake Relay, frame size FSB

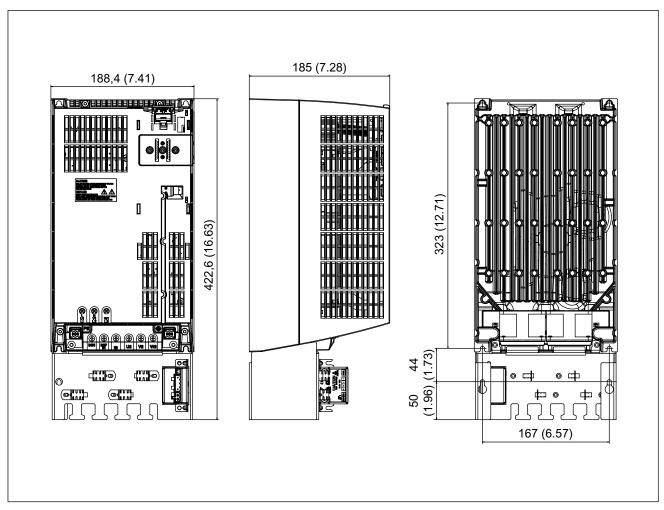


Figure 8-11 Dimension drawing: Power Module PM340 with Screening Kit and Brake Relay, frame size FSC

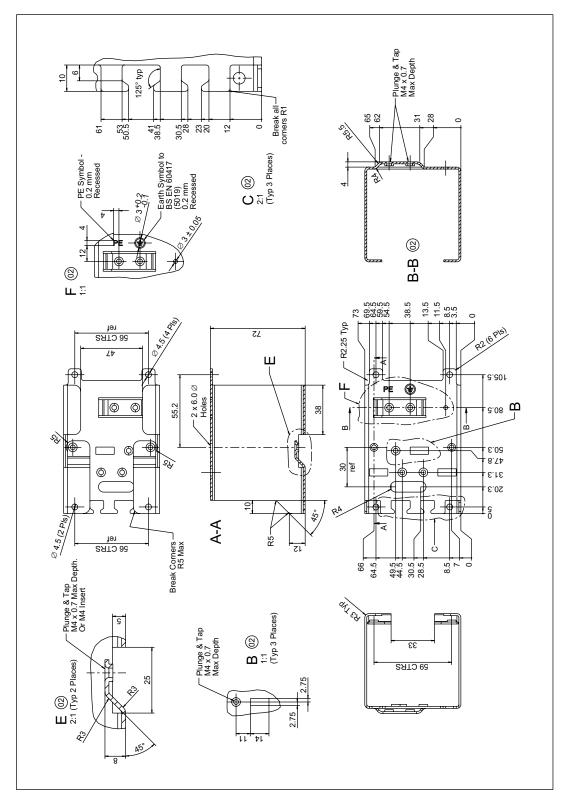


Figure 8-12 Dimension drawing: Screening Kit, frame size FSA

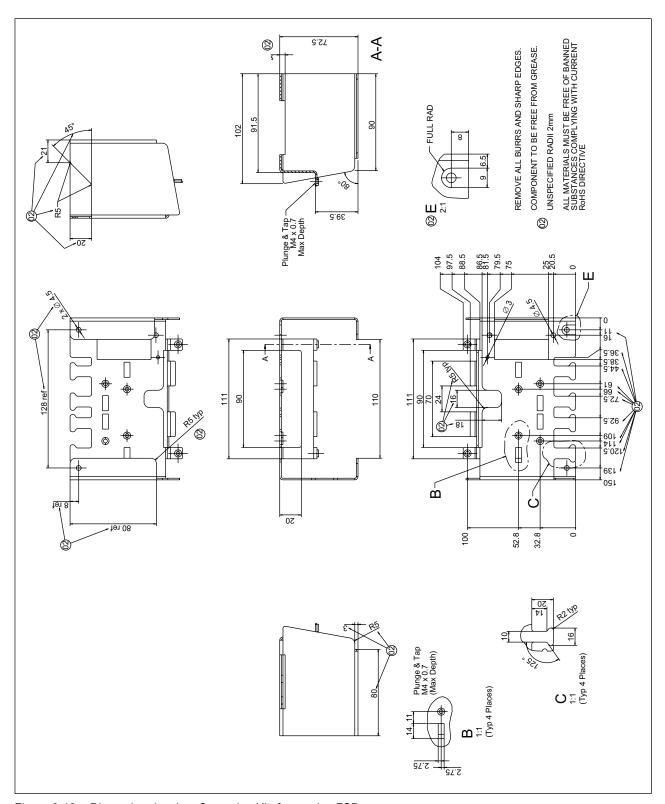


Figure 8-13 Dimension drawing: Screening Kit, frame size FSB

# 8.3 Screening Kit

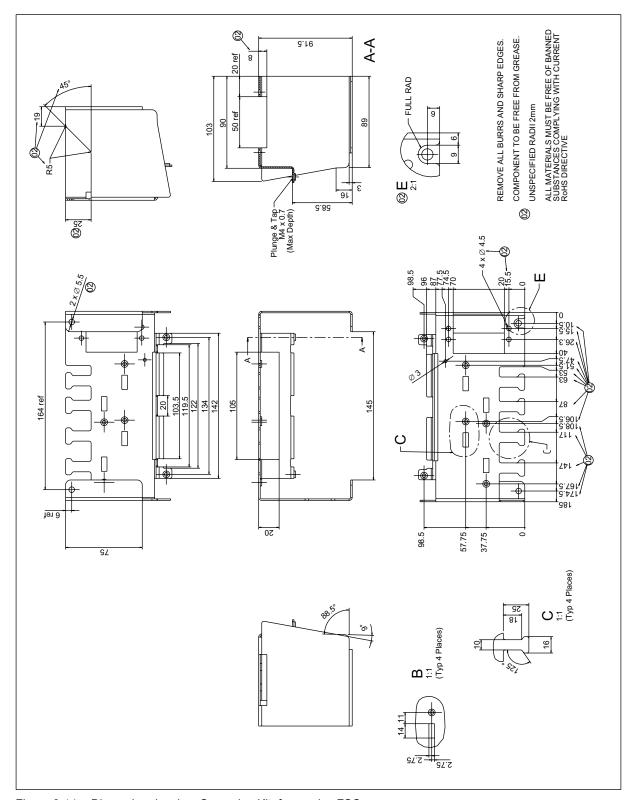


Figure 8-14 Dimension drawing: Screening Kit, frame size FSC

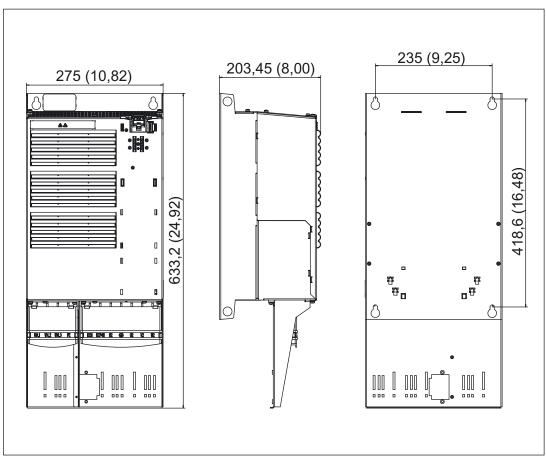


Figure 8-15 Dimension drawing: Power Module PM340 with Screening Kit, frame size FSD

# 8.3 Screening Kit

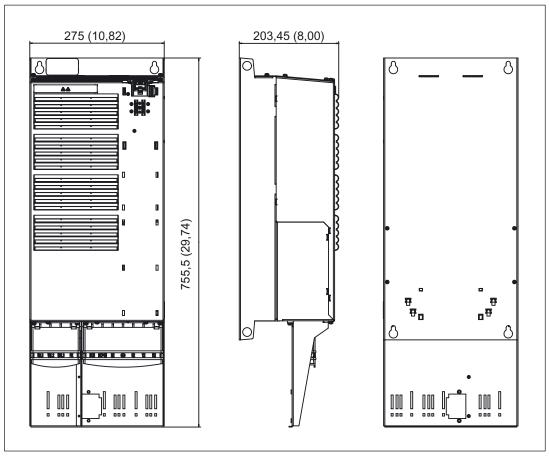


Figure 8-16 Dimension drawing: Power Module PM340 with Screening Kit, frame size FSE

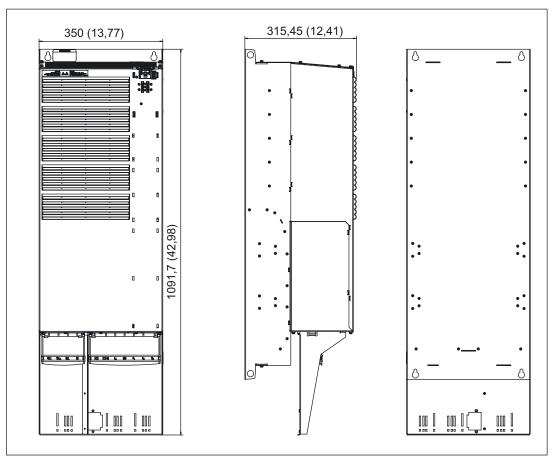


Figure 8-17 Dimension drawing: Power Module PM340 with Screening Kit, frame size FSF

# 8.3.2 Mounting

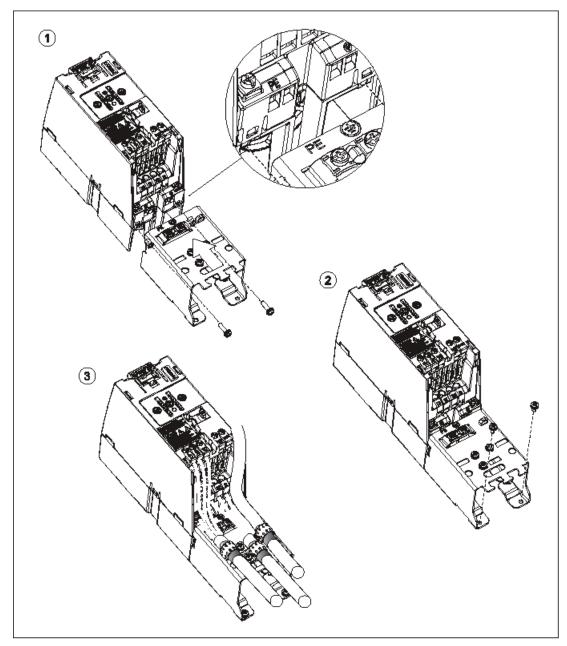


Figure 8-18 Mounting: Power Module PM340, frame size FSA, with Screening Kit

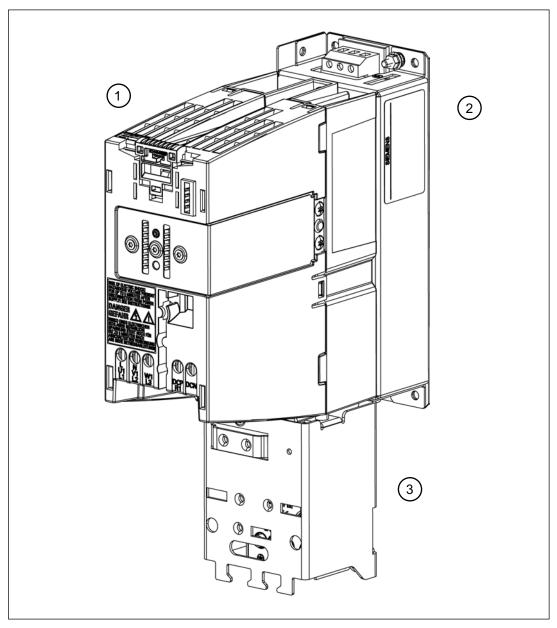


Figure 8-19 Power Module PM340, frame size FSA, with line filter and Screening Kit

# 8.3 Screening Kit

- 1. Power Module PM340 frame size FSA
- 2. Line filters
- 3. Screening Kit

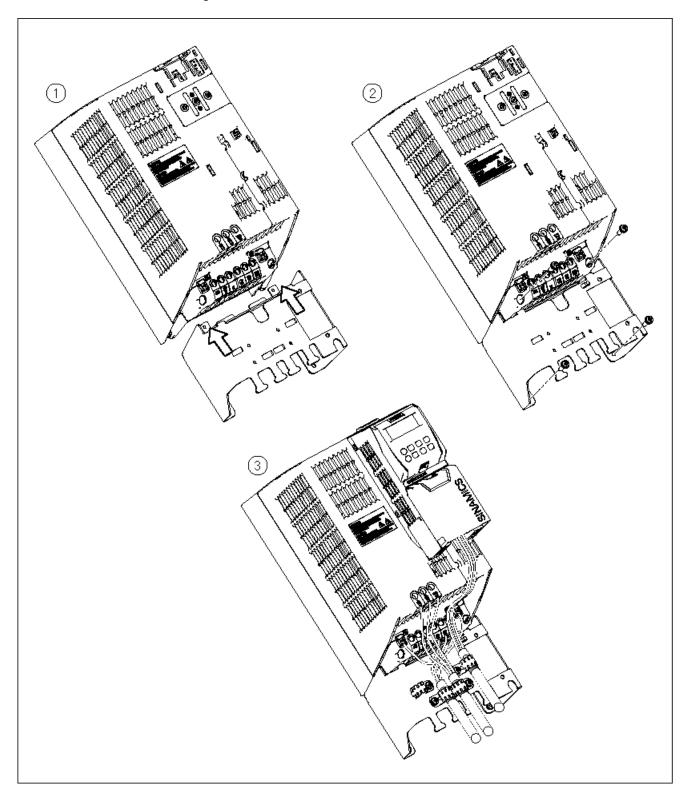


Figure 8-20 Mounting: Power Module PM340, frame sizes FSB and FSC, with Screening Kit

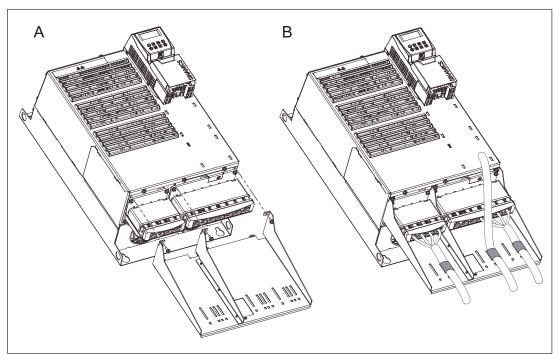


Figure 8-21 Mounting: Power Module PM340, frame sizes FSD and FSE, with Screening Kit

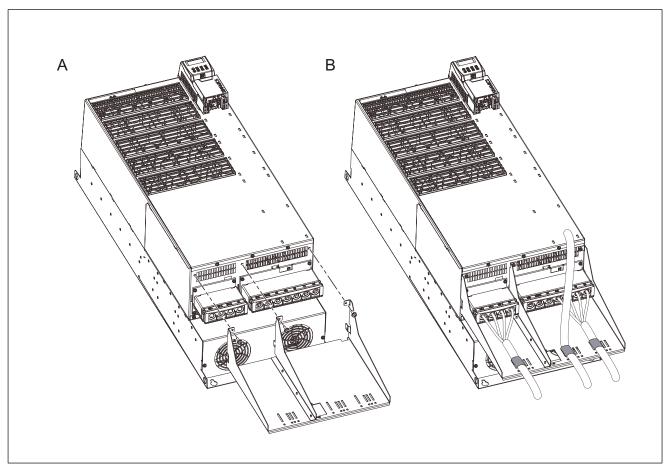


Figure 8-22 Mounting: Power Module PM340, frame size FSF, with Screening Kit

# Cabinet design and EMC for components, Blocksize

### 9.1 Information

### 9.1.1 General

format

The SINAMICS S components are designed in accordance with degree of protection IP20 or IPXXB acc. to EN 60529 and as open-type devices to UL 50. This ensures protection against electric shocks. To ensure protection against mechanical stress and climatic conditions too, the components should only be operated in housing/cabinets/rooms that fulfill at least degree of protection IP54 and, as enclosure types, are designed to UL 50.

Prefabricated MOTION-CONNECT cables are recommended.

#### The Safety Integrated safety function:

The components must be protected against conducted contamination (e.g. by installing them in a cabinet with degree of protection IP54).

Provided that conducted interference can be prevented at the installation site, the degree of protection for the cabinet can be decreased accordingly.

### Low-voltage switchgear and controlgear assemblies

Part 1: Type-tested and partially type-tested low-voltage switchgear and controlgear assemblies

If the SINAMICS S drive line-up is used for the electrical equipment of machines, the applicable requirements of EN 60204-1 must also be adhered to.

### Safety of machinery

Electrical equipment of machines

Part 1: General requirements

All information for device selection in this section applies to

- Operation in a TN system
- Operating voltage range 1-ph. 200 V AC to 3-ph. 440 V AC



If the shielding procedures described and the specified cable lengths are not observed, the machine may not operate properly.

### 9.1.2 Safety information

#### Note

When installing the equipment in cabinets, the ventilation slots must be covered to prevent drill swarf, wire end ferrules, and the like from falling into the housing.

Safety regulations governing shock protection must be observed. See also EN 60204-1.

#### **CAUTION**

To ensure that the encoder system works properly, you are advised to use the original Siemens accessories from catalog PM 21.

Only motors with a safe electrically isolated holding brake may be connected. The brake conductors must also be safely electrically isolated.

If the motor power cable is connected to intermediate terminals, the power cables and brake cables must be routed apart (≥ 300 mm).

After an intermediate terminal (e.g. due to a terminal block), it is best to continue routing using the approved MOTION-CONNECT cable.

#### CAUTION

The conductor pair for the motor holding brake must be themselves shielded (braided shield). For MOTION-CONNECT cables, this is provided by the inner shield.



Cable shields and unused conductors of power cables (e.g. brake conductors) must be connected to PE potential.

Non-observance can cause lethal shock voltages.

# /!\DANGER

To protect against electric shock the components should only be operated in closed electrical operating areas or in cabinets. Furthermore, an internal protective conductor connection of the components is absolutely essential.

The components generate high leakage currents in the protective conductor. In order to ensure protection against electric shocks if the external protective conductor is interrupted, one of the following measures must be implemented for the external connection:

- stationary connection and protective conductor connection by means of ≥ 10 mm<sup>2</sup> Cu or
   ≥ 16 mm<sup>2</sup> Al
- stationary connection and automatic shutdown of the power supply if the protective conductor is interrupted

# 9.2 Selection of Devices Required for Operating SINAMICS

### 9.2.1 General

The following components are required to connected to the line supply:

- Line disconnecting device
- Line fuse
- Line contactor (this is required for electrical isolation)
- Line filter (optional for Power Module PM340, frame size FSA)
- Line reactor (refer to Chapter Line supply connection)

To protect the units against line-side surge voltages, you are advised to install an overvoltage protection device directly at the infeed point (upstream of the main switch). To fulfill the requirements of CSA C22.2 no. 14-05, surge protection is essential. For examples of suitable voltage surge arresters, see www.raycap.com (for example)

### 9.2.2 Information about line disconnecting devices

The line disconnecting device for the electrical equipment may be used for correct isolation of the drive line-up from the power supply. This line disconnecting device must be designed for the electrical equipment of machines in accordance with the requirements of EN 60204-1, Section 5.3. The relevant technical specifications must be taken into consideration for the purpose of selecting the device. Other consumers of the electrical equipment must also be taken into consideration when the device is selected.

The accessories required for the line disconnecting device must be selected from the manufacturer catalogs. See also catalog PM 21.

### 9.2.3 Overcurrent protection using line fuses or circuit-breakers

The cables for the drive line-up power supply must be protected against overcurrents. NH, D, and DO-type fuses with a gL characteristic or suitable circuit-breakers can be used for this purpose.

#### Note

The devices can be connected to line supplies up to 480  $V_{AC}$ , which can supply a maximum of 36 kA symmetrical ("uninfluenced current" acc. to EN 60269-1).

# /Î\WARNING

During operation from networks with low short-circuit power (e.g. trial operation, operation with isolating transformer), the fuses must be designed in such a way that, if a fault occurs, the line fuses trip after 0.4 s with mobile equipment and after 5 s with stationary equipment to provide protection against electric shock after indirect contact and in the event of short-circuits.

For further information: See catalog PM 21.

### 9.2.4 Line filter

A separate line filter (see catalog) must be used for the SINAMICS S120 drive line-up.

#### NOTICE

An additional line filter must be used to suppress interference in other loads. To prevent mutual interference, this line filter must not be equipped with line-side capacitors with respect to ground. Filter series B84144A\*R120 (EPCOS) is recommended.

In conjunction with line reactors and a systematic plant configuration, line filters limit the conducted interference emitted by the power modules to the limit values of category C2 to EN 61800-3. Line filters are only suitable for direct connection to TN systems.

#### Note

According to product standard IEC61800-3 RI suppression commensurate with the relevant operating conditions must be provided and is a legal requirement in the EU (EMC Directive). Line filters and line reactors are required for this purpose. The use of filters of other makes can lead to limit value violations, resonances, overvoltages and irreparable damage to motors or other equipment. The machine manufacturer must provide verification that the machinery to be operated with the drive products and the installed suppression elements, e.g. line filters, are CE/EMC-compliant before the machines are approved for delivery.

### 9.2.5 Line Contactors

Line contactors are required to provide electrical isolation between the drive line-up and the line supply.

When selecting a line contactor, the characteristic values in the technical data apply. The cable routing, the bundling factor and the factor for the ambient temperature according to EN 60204-1 must be taken into account when dimensioning the various cables.

#### Note

To limit the switching overvoltage, the contactor coil must be connected to an overvoltage limiter (e.g. flywheel diode or varistor).



Line contactors must not be switched under load.

When the digital output is used to control the line contactor, its making/breaking capacity must be taken into account.

# 9.3 24 V DC Supply Voltage

### 9.3.1 General

The 24 V DC voltage is required for the power supply of:

- The load voltage of the Control Unit digital outputs.
   The Control Units are supplied with power via the PM-IF. 24 V must also be connected in the following cases:
  - Commissioning / diagnostics when the Power Module power supply is switched-out.
  - Using the digital outputs CU310
- 2. The electronics of the Sensor Module
- 3. The Safe Brake Relay (motor holding brake)

Other loads can be connected to these power supply units if they are separately protected from overcurrent.

#### Note

The user should provide the electronics power supply as described in Chapter "System data" in this documentation.

When connecting to a "DC power supply" in the sense of EN 60204-1:1997, Chapter 4.3.3, functional faults can occur due to the voltage interruptions that are permitted there.

#### NOTICE

If other consumers are connected to the power supply, connected inductance devices (contactors, relays) must be fitted with suitable overvoltage protection circuits.

#### **NOTICE**

A regulated DC power supply is required to operate motors with a built-in holding brake. The power is supplied via the 24 V connection (Safe Brake Relay). The voltage tolerances of the motor holding brakes and the voltage drops of the connection cables must be taken into account.

The DC power supply should be set to 26 V. This ensures that the power supply for the brake remains within the permissible range when the following conditions are fulfilled:

- · Using Siemens three-phase motors
- Using Siemens MOTION-CONNECT power cables
- Motor cable lengths: max. 100 m

# 9.3.2 Selecting power supply units

You are advised to use the devices in the following table. These devices meet the applicable requirements of EN 60204-1.

Table 9-1 Recommended SITOP Power

Rated output current [A]	Input voltage range [V]	Short-circuit current [A]	Order No.
5	2 AC 85-132/170 – 550	5,5	6EP1333-3BA00
10	2 AC 85-132/176 – 550	30 for 25 ms	6EP1334-3BA00
20	3-ph. 320 – 550 V AC	23	6EP1336-3BA00
40	3-ph. 320 – 550 V AC	46	6EP1337-3BA00

Table 9-2 Recommendation for Control Supply Module

Rated output current [A]	Input voltage range [V]	Short-circuit current [A]	Order No.
20	3-ph. 380 V AC -10% (-15% < 1 min) to 3-ph. 480 V AC+10%	< 24	6SL3100-1DE22-0AA0
	DC 300 – 800		

See catalog PM 21.

# / WARNING

When an external power supply is used, e.g. SITOP, the ground potential must be connected to the protective conductor system (DVC A).

# 9.3.3 24 V component current consumption

A separate 24 V power supply must be used for the SINAMICS S120 drive line-up.

The following table can be used to calculate the 24 V DC power supply. The values for typical current consumption are used as a basis for configuration.

Table 9-3 Overview of 24 V DC current consumption

Component	Typical current consumption [A <sub>DC</sub> ]
CU320	0,8
CU310 DP for each digital output	0,8
CU310 PN for each digital output	0,8
CUA31 for each digital output	0,15
DRIVE-CLiQ (e.g. motors with DRIVE-CLiQ interface)	0,19
Brake (e.g. motor holding brake)	Typ. 0.4 to 1.1; max. 2
Sensor Module Cabinet	
SMC10	0,2
SMC20	0,2
Sensor Module External	

### 9.3 24 V DC Supply Voltage

Component	Typical current consumption [A <sub>DC</sub> ]
SME20	0,11
SME25	0,11
SME120	0,16
SME125	0,16

### 9.3.4 Overcurrent Protection

Cables on both the primary and the secondary side of the power supply unit must be protected from overcurrent. Primary side protection must be implemented according to the manufacturer's instructions. Secondary side protection must be rated to deal with the actual conditions. In particular:

- Loading due to loads, possibly the simultaneity factor in response to machine operation
- Current carrying capacity of the conductors used and cables in normal and short-circuit conditions
- Ambient temperature
- Cable bundling (e.g. laying in a common duct)
- Cable laying method to EN 60204-1

EN 60204-1, Section 14, can be used to determine the overcurrent protection devices.

Circuit-breakers from the Siemens LV 1 and LV 1T catalogs are recommended as overcurrent protection devices on the primary side, and miniature circuit-breakers or SITOP select 6EP1961-2BA00 as overcurrent protection devices on the secondary side. The miniature circuit-breakers can also be selected from the Siemens LV 1 and LV 1T catalogs.

Miniature circuit-breakers are recommended as overcurrent protective device for cables and busbars. The ground potential M must be connected to the protective conductor system (DVC A).

When selecting the circuit-breaker, the following standards must be carefully observed:

EN 61800-5-1, EN 60204-1, IEC 60364-5-52, IEC 60287-1 to -3, EN 60228 and UL 508C.

In so doing, the following conditions for the conductors/cables must be carefully taken into consideration:

- Ambient temperature 55 °C
- Limiting conductor temperature ≥ 75 °C for operation with the rated load current
- Cable length max.:
  - 10 m for the supply supply cables
  - 30 m for signal lines

In addition, the conductors/cables should be routed so that

- Max. 1 conductor pair is bundled, and
- The 24 V conductors/cables must be routed separately from other cables and conductors that can conduct operating currents.

Table 9-4 MCBs by conductor cross-section and temperature

Conductor cross-section	Max. value up to 40 °C	Max. value up to 55°C
1.5 mm <sup>2</sup>	10 A	6 A
2.5 mm <sup>2</sup>	16 A	10 A
4 mm <sup>2</sup>	25 A	16 A
6 mm <sup>2</sup>	32 A	20 A

The trip characteristic of the MCBs must be selected to match the loads to be protected and the max. current provided by the power supply unit in the event of a short-circuit.

# 9.4 Arrangement of components and equipment

### 9.4.1 General

The arrangement of the components and equipment takes account of

- Space requirements
- Cable routing
- Bending radiuses of the connection cables MOTION-CONNECT lines, see D21.1 catalog
- Heat dissipation
- EMC

Components are usually located centrally in a cabinet.

Always observe the mounting clearances necessary above and below the components.

# 9.4.2 Mounting

The components should be mounted on a conductive mounting surface to ensure low impedance between the component and the mounting surface. Mounting plates with a galvanized surface are suitable.



Figure 9-1 Mounting the CU310 onto the Power Module PM340 (frame size FSD)

### Wiring rules for DRIVE-CLiQ

Refer to /IH1/ SINAMICS Commissioning Manual.

# 9.5 Information about Electromagnetic Compatibility (EMC) and Cable Routing

### 9.5.1 General

Requirements to implement EMC are listed in EN 61000-6-2, EN 61000-6-4, EN 61800-3, EN 60204-1 and in the EMC Design Directives - Order No. 6FC5297-0AD30-0\*P2. German, \*B: English). Conformance with the EMC Directive of the EC can be secured by following the measures described in the EMC Design Directives.

When mounting components in cabinets, in order to fulfill the EMC directive, the following conditions must be additionally observed:

- Connected to TN line supply systems with grounded neutral point
- SINAMICS line filter (optional for frame size FSA)
- Observance of information about cable shielding and equipotential bonding
- Only the recommended Siemens power and signal cables are used
- Only cables from Siemens may be used for DRIVE-CLiQ connections.

For MOTION-CONNECT cables see catalog D21.1

### **CAUTION**

If couplings or cabinet glands are needed for the DRIVE-CLiQ connections, only the DRIVE-CLiQ coupling and DRIVE-CLiQ cabinet gland, described in the Chapter Accessories, may be used.

# DANGER

If the shielding procedures described and the specified cable lengths are not observed, the machine may not operate properly.

# 9.5.2 Cable Shielding and Routing

In order to comply with the EMC requirements, certain cables must be routed apart from other cables and from certain components. To full EMC requirements, the following cables must be used with shields:

- Power supply cables from line filter via line reactor to Power Module
- All motor cables (if necessary, including cables for motor holding brake)
- Cables for "fast inputs" of the Control Unit
- · Cables for analog direct voltage/current signals

### 9.5 Information about Electromagnetic Compatibility (EMC) and Cable Routing

- Signal cables for sensors
- Cables for temperature sensors

# DANGER

A suitable PE conductor must be connected to all devices in protection class I.

The PE conductor connection of the individual components must have at least 4 mm<sup>2</sup>.

Alternative measures (e.g. routing behind mounting plates, suitable clearances) can also be used provided they have similar results. This excludes measures that relate to the design, installation, and routing of motor power cables and signal cables. If non-shielded cables are used between the line connection point and line filter, make sure that no interfering cables are routed in parallel.

The cable shields must be connected as close to the conductor terminal connections as possible to ensure a low-impedance connection with cabinet ground.

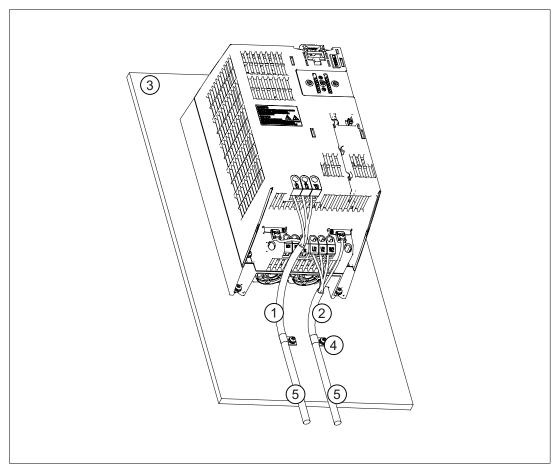


Figure 9-2 Shielding of a Power Module PM340

- 1. Line supply input
- 2. Motor cable
- 3. Rear metal panel
- 4. Use suitable clamps/clips to reliably connect the shield of the motor and field cable to the rear metal panel.
- 5. Shielded cable

Alternatively, the cable shields can be connected to them metal mounting plate using pipe clamps and serrated rails. The cable length between the shield contact point and the terminals for cable conductors must be kept as short as possible.

Shield connection plates with pre-prepared clip contacts are available for connecting the shields for power cables of Power Modules.

All cables inside the cabinet must be connected as closely as possible to parts connected with cabinet ground, such as a mounting plate or cabinet wall. Ducts made of sheet steel or routing cables between between steel sheets (e.g. between the mounting plate and back wall) should provide adequate shielding.

Avoid, where possible, routing non-shielded cables, connected to the drive line-up, in the immediate vicinity of noise sources, e.g. transformers. Signal cables (shielded and unshielded) connected to the drive line-up must be laid at a great distance from strong external magnetic sources (e.g. transformers, line reactors). In both cases, a distance of  $\geq$  300 mm is usually sufficient.

### Signal and DC power supply cables

Operating unshielded signal and direct current supply cables (e.g. 24 V infeed with external supply):

- DC power supply cables: Max. permissible length: 10 m
- Non-shielded signal cables: Max. permissible length: 30 m (without additional wiring)

For greater lengths, suitable wiring must be connected by the user to provide overvoltage protection. For example:

Table 9-5 Recommendations for overvoltage protection

DC power supply	24 V signal cables	
Weidmüller	Weidmüller	
Type no.: PU DS 24V 16A	Type no.: MCZ OVP TAZ	
Weidmüller GmbH & Co. KG		
An der Talle 89		
33102 Paderborn		
Tel. 05252/960-0		
Fax 05252/960-116		
http://www.weidmueller.com		

#### CAUTION

The connected signal and power cables must not cover the ventilation slots.

#### CAUTION

Non-shielded signal cables must not be routed parallel to power cables.

# 9.5.3 Equipotential bonding

The SINAMICS S drive system is designed for use in cabinets with a PE conductor connection.

The machinery construction OEM must carefully ensure that all of the conditions regarding the assignment of the ground cable, ground connecting cables, protective conductor and potential bonding cable connections and terminals are clearly specified in his Technical User/Manufacturer Documentation, are clearly specified (this is especially important if there are several protective conductor/potential bonding conductor connections/terminals in the unit). It is especially important to note that the connections for potential bonding cables that exist in parallel to connections for protective connecting cables may not be used to loop-through the protective connecting cable.

If the drive line-up is arranged on a common unpainted metal-surfaced mounting plate, e.g. with a galvanized surface, no additional equipotential bonding is needed within the drive line-up as

- All parts of the switchgear assembly are connected to the protective conductor system.
- The mounting plate is connected with the external PE conductor by means of a finelystranded copper conductor with a cross-section of 16 mm², including the outer conductor. From a cross-section of 25 mm² copper, the outer cross-section of the finely-stranded conductor is halved.

For other installation methods, equipotential bonding must be implemented using conductor cross-sections as stated in the second item in the list or at least equal to the conductance.

If components are mounted on DIN rails, the data listed in the second item applies for equipotential bonding. If only smaller connection cross-sections are permissible on components, the largest must be used (e.g. 6 mm² for TM31 and SMC). These requirements also apply to distributed components located outside the cabinet.

### **CAUTION**

An equipotential bonding conductor with a cross-section of at least 25 mm² must be used between components in a system that are located a considerable distance from each other. If an equipotential bonding conductor is not used, leakage currents that could destroy the Control Unit or other PROFIBUS nodes can be conducted via the PROFIBUS cable.

# 9.6 Connection Methods

### 9.6.1 Screw terminals

### Connectable conductor cross-sections of screw terminals

Table 9- 6 Screw terminals

Screv	v terminal type		
1	Connectable conductor cross- sections	Flexible With wire end ferrule, without plastic sleeve With wire end ferrule, with plastic sleeve	0.14 mm <sup>2</sup> to 1.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> to 1.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> to 0.5 mm <sup>2</sup>
	Insulation stripping length	7 mm	
	Tool	Screwdriver 0.4 x 2.0 mm	
	Tightening torque	0.22 to 0.25 Nm	
2	Connectable conductor cross- sections	Flexible With wire end ferrule, without plastic sleeve With wire end ferrule, with plastic sleeve	0.2 mm <sup>2</sup> to 2.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> to 1 mm <sup>2</sup> 0.5 mm <sup>2</sup> to 1 mm <sup>2</sup>
	Insulation stripping length	7 mm	
	Tool	Screwdriver 0.6 x 3.5 mm	
	Tightening torque	0.5 to 0.6 Nm	

# 9.7 Information on cabinet cooling

### 9.7.1 General

Electrical cabinets can be cooled, using among other things the following:

- filtered fans
- heat exchangers or
- · cooling units.

The decision in favor of one of these methods will depend on the prevailing ambient conditions and the cooling power required.

The air routing within the electrical cabinet and the cooling clearances specified here must be observed. No other components or cables must be located in these areas.

#### **CAUTION**

If you do not observe the guidelines for installing SINAMICS equipment in the cabinet, this can reduce the service life of the equipment and result in premature component failure.

You must take into account the following specifications when mounting/installing SINAMICS components:

- Cooling clearance
- Cable routing
- Air guidance, air-conditioner

Table 9-7 Cooling clearances around the components

Component	Clearance above and below	Lateral clearance
	in mm and (inches)	in mm and (inches)
CU310 DP	50 (1.97)	0
CU310 PN	50 (1.97)	0
CUA31	50 (1.97)	0
SMCxx	50 (1.97)	0
Line filters	100 (3.93)	
Line reactor	100 (3.93)	0
PM340 blocksize, frame size FSA	100 (3.93)	0
PM340 blocksize, frame size FSB	100 (3.93)	40 (1.57)
PM340 blocksize, frame size FSC	125 (4.92)	50 (1.97)
PM340 blocksize, frame sizes FSD and FSE	300 (11.81)	0
PM340 blocksize, frame size FSF	350 (13.77)	0

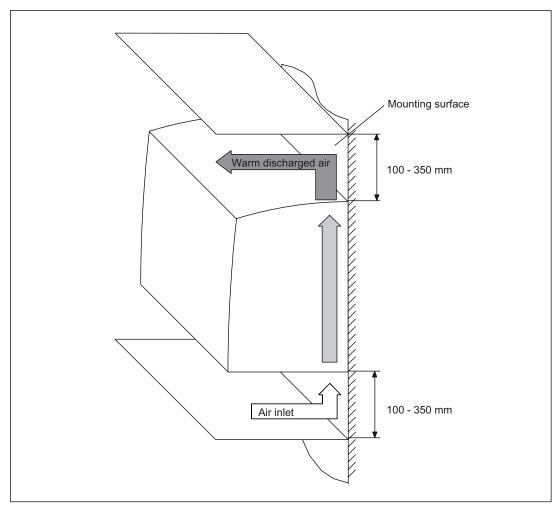


Figure 9-3 Cooling clearances

### 9.7.2 Ventilation

The SINAMICS equipment is ventilated separately by means of integrated fans and is in some cases cooled by means of natural convection.

The cooling air must flow through the components vertically from bottom (cooler region) to top (region heated by operation).

If filtered fans, heat exchangers, or air conditioners are used, you must ensure that the air is flowing in the right direction. You must also ensure that the warm air can escape at the top. The cooling clearance above and below must be observed.

### Note

Cables must not be routed on the components; the ventilation meshes must not be covered. Cold air must not be allowed to blow directly onto electronic equipment.

9.7 Information on cabinet cooling

### Note

The distance between the blow-out aperture of the air conditioner and the electronic equipment must be at least 200 mm.

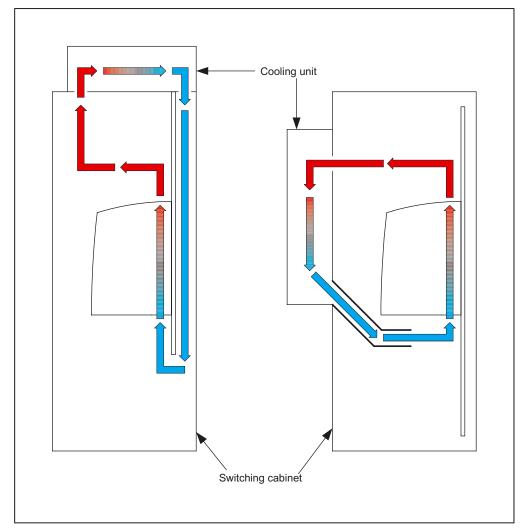


Figure 9-4 Examples of cabinet ventilation

### **CAUTION**

The air guidance and arrangement of the cooling equipment must be chosen in such a way as to prevent condensation from forming.

If necessary, cabinet enclosure heating may have to be installed.

If air conditioners are used, the relative air humidity of the expelled air increases as the air in the air conditioner cools and may exceed the dew point. If the relative humidity of the air

entering the SINAMICS equipment is over 80% for an extended period of time, the insulation in the equipment may fail to function properly due to electrochemical reactions (refer to System Overview). Using air baffle plates, for example, you must ensure that the cold air expelled from the air conditioner mixes with warm air in the cabinet before it enters the equipment. This reduces the relative air humidity to uncritical values.

### 9.7.3 Power Loss of Components in Rated Operation

The following table shows the power loss for components. The characteristic values apply for the following conditions:

- Line supply voltage for Power Modules 1-ph. 200 V AC to 3-ph. 380 V to 480 V AC ±10 %.
- Pulse frequency of the Power Modules 4 kHz
- Rated pulse frequency of the Power Modules 8 kHz
- · Operating components at their rated power

Table 9-8 Overview of power losses

	Unit	Power loss	
Control Units			
CU320	W	20	
CU310 DP	W	20	
CU310 PN	W	20	
CUA31	W	7.2	
Line reactors for Power Modules Blocksize	W	Refer to Line reactors, Chapter "Technical data".	
Line filter for Power Modules Blocksize	W	Refer to Line filter, Chapter "Technical data".	
PM340	W	Refer to Power Modules, Chapter "Technical data".	
Sensor Modules			
SMC10	W	< 10	
SMC20	W	< 10	

9.7 Information on cabinet cooling

Cooling circuit and coolant properties 10

# 10.1 Cooling circuit requirements

Technical cooling circuits can be divided into three systems:

## 1. Closed cooling circuits (recommended)

In closed systems, the circuit water is separated from the surrounding atmosphere, which prevents the ingress of oxygen. The coolant is only routed through the SINAMICS devices, the components required for heat dissipation and, if necessary, a motor. The heat is dissipated to the atmosphere indirectly by means of heat exchangers. The system should ideally function without losing any circuit water and, once filled, should not require any added water. The composition of the cooling water can be adjusted as required (e.g. by using desalinated water and adding anti-corrosion agents). It either does not change at all during operation, or changes only in a defined manner. The closed cooling circuit is recommended as a standard solution.

## 2. Open cooling circuit

The coolant is routed not only through the SINAMICS devices and components required for heat dissipation, but also through external devices.

The heat given off to the circuit water evaporates via a cooling tower. This evaporation causes the circuit water to become more concentrated (densification) because water molecules escape while dissolved substances remain in the circuit water. During operation, therefore, the composition of the water changes significantly, which means that it must be monitored and topped up continuously. Open cooling circuits are permitted.

### 3. Semi-open cooling circuit

Oxygen can only enter the coolant via the pressure compensator. Otherwise, see 1. Semi-open cooling circuits are permitted.

A closed cooling circuit with a membrane-pressure compensator (MAG), safety valve (SV) and heat exchanger (WT), which couples the cooling circuit with an external recooler, is recommended (see also "Materials and water composition").

The liquid-cooled Power Modules are designed to be connected in parallel to the cooling circuit, whereby the pressure drop in the joint supply and return lines is to be kept at negligible levels by choosing a sufficiently large pipe diameter. The differential pressure between the supply (P1) and return (P2) must remain between 70 kPa and 200 kPa. This ensures that each of the connected devices receives the required cooling liquid flow rate. Pressure P1 and P2 with respect to the atmosphere must not exceed 600 kPa.

### 10.1 Cooling circuit requirements

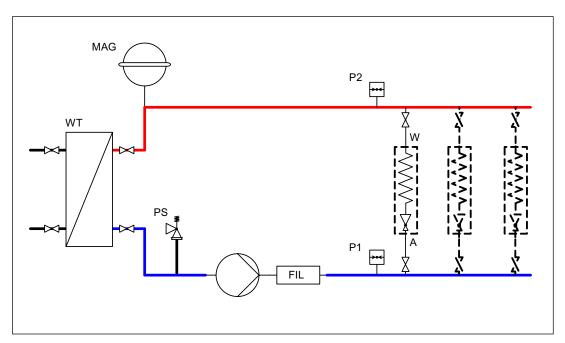


Figure 10-1 Example: Closed cooling circuit

P1 - P2 = 70 kPa ... 200 kPa (in operation)

P2 ≤ P1 ≤ 600 kPa

A filter must be installed in the cooling circuit supply line to prevent foreign particles from being washed in. Recommended nominal filter mesh:  $100 \mu m$ .

The liquid-cooled Power Modules should be connected to the cooling circuit by means of shut-off valves so that they can be disconnected from the cooling circuit for servicing or repair without the need to empty the entire cooling system. A cooling water hose (EPDM) can be used to connect the shut-off valve and unit. Coolant connections A and B must never be closed if cooling liquid is still present in the device. Reason: if the cooling fluid expands due to heating, the pressure can build up beyond permissible levels and cause the integrated heat exchanger to burst.

When the pump is switched off, static pressure occurs in the system. The static pressure can be influenced by the primary pressure of the membrane-pressure compensator (MAG) and should be at least 30 kPa at the intake side of the pump. If the static pressure is too low, the pump may be damaged due to cavitation during operation. If necessary, note any differing minimum pressure values from the pump manufacturer. When components are installed at different heights, the geodesic pressure caused by the height difference must be taken into account (1 m height difference corresponds to 10 kPa).

When the pump is switched on, a (location-dependent) flow pressure is present in the cooling circuit, which must be determined from the pump characteristic curve and the volume-flow-dependent pressure drop. For the pressure drop for the Power Modules, characteristic curves are specified to which the pressure drop in the filter and, if necessary, further pressure drops in connection pipes must be added. Up to 50 kPa must be added for the pressure drop in a (contaminated) filter and in connection pipes. The intersection of the pump characteristic curve and the pressure drop of the whole system yields the volume flow  $V_n$  of the coolant at this operating point.

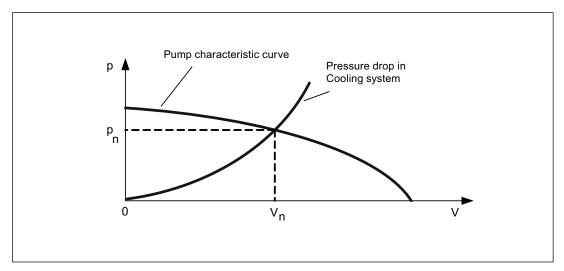


Figure 10-2 Pump characteristic curve

### 10.1.1 Pressure

The maximum system pressure is 600 kPa. The lowest possible pressure should be selected to allow pumps with a flat characteristic to be used.

The maximum permissible differential pressure for a heatsink is 200 kPa.

The layout must be selected so that the total length of supply and drain pipe is equal for each SINAMICS unit or motor.

Water cooling systems with series-connected modules and/or modules and motors are not permitted because the increased volumetric flow increases the risk of cavitation and abrasion. This arrangement is only acceptable if the pressure difference for each device does not exceed 200 kPa.

## 10.1.2 Installation

The following requirements must be observed during installation:

- Seals must be free of chloride, graphite, and rust.
- Permissible sealing materials: Viton, AFM34, and EPDM.

### Note

Teflon-based seals are not permitted.

To ensure mechanical decoupling, the devices should be connected by means of hoses. Recommendation for hose type:

### 10.1 Cooling circuit requirements

- EPDM hoses with an electrical conductivity >10<sup>9</sup> ohms, e.g. Semperflex FKD supplied by Semperit, or
- DEMITEL made of PE / EPDM supplied by Telle
- Secure with clips that comply with DIN2871, available from Telle, for example.

#### Recommendation for installation:

- A closed stainless steel cooling circuit is recommended to ensure the longest possible service life of the cooling unit.
- Cooling circuit pipes, fittings made of ABS, stainless steel (Nirosta) or common steel (ST37).
- To prevent blockages and corrosion, you are advised to install a flushback filter in the circuit (so that residues can be rinsed out when the system is running).

# 10.1.3 Preventing cavitation

The following applies to all cooling circuits:

- The cooling circuit must always be designed in such a way that the pressure compensator is located on the suction side of the pump (if possible, directly on the pump).
- The minimum pressure on the suction side of the pump must be approximately 30 kPa, or the geodesic height from the reservoir to the pump suction side must be > 3 m.
- The pressure drop across a SINAMICS device must not exceed 200 kPa in continuous operation, otherwise the high volumetric flow can increase the risk of cavitation and/or abrasion damage.
- The guidelines provided in "Information about configuring cooling circuits" below regarding series connections and maximum pressure must also be followed.

## 10.1.4 Information about configuring cooling circuits

The operating pressure must be set according to the flow conditions in the supply and return lines of the cooling circuit. The required coolant flow rate per time unit must be set according to the technical specifications of the equipment. The units are normalized to a rated pressure of  $70,000 \, \text{Pa}$  (for coolant type  $\text{H}_2\text{O}$ ) via an orifice.

If a mixture of Antifrogen N and  $H_2O$  is used as a coolant, the rated pressure must be calculated according to the mixing ratio. The following table specifies the pressure drop across components at different coolant temperatures for a coolant with mixing ratio 45 % Antifrogen N.

Table 10- 1 Pressure drop for various coolant temperatures

PM340 Liquid Cooled	dV/dt H₂O [l/min]	dP H₂O [Pa]	dP Antifrogen N 45 % 0 °C [Pa]	dP Antifrogen N 45 % 20 °C [Pa]	dP Antifrogen N 45 % 45 °C [Pa]	dP Antifrogen N 45 % 50 °C [Pa]
Power Module, frame size FSD	8	66700	115300	92700	76700	74700
Power Module, frame size FSE	8	69100	119500	96000	79400	77300
Power Module, frame size FSF	8	69500	120200	96600	79900	77800

The maximum permissible pressure (with respect to the atmosphere) in the heatsink and, in turn, the cooling circuit must not exceed 600 kPa. If a pump whose maximum pressure exceeds this value is used, steps must be taken (e.g. safety valve  $p \le 600$  kPa, pressure control) to ensure that the maximum pressure limit is not exceeded.

The lowest possible differential pressure between the coolant in the supply and return lines should be selected to allow pumps with a flat characteristic to be used.

The maximum differential pressure across a heat sink is 200 kPa. Higher differential pressures significantly increase the risk of cavitation and abrasion.

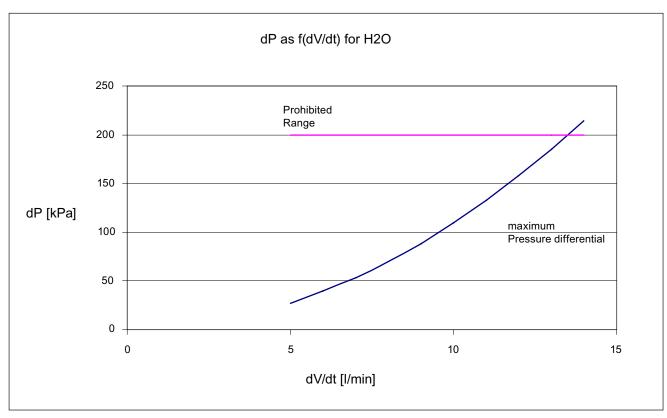


Figure 10-3 Pressure difference as a function of volumetric flow

Water cooling systems with series-connected SINAMICS devices cannot be recommended for the following reasons:

- The risk of cavitation and abrasion increases as a result of the high total volumetric flow.
- SINAMICS S120 cannot be connected in series because the total volumetric flow needed for any series-connected configuration requires system pressures in the range of 600 kPa or above.

The characteristic curves for the pressure drop across the heatsinks as a function of volumetric flow vary depending on the temperature and the Antifrogen N / water coolant mix.

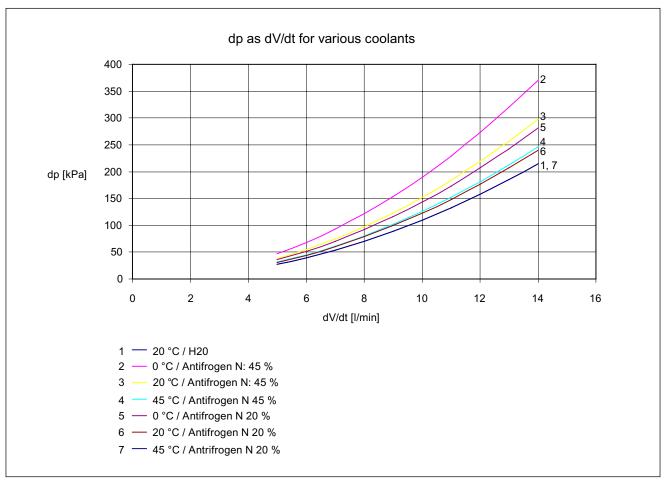


Figure 10-4 Pressure difference as a function of the volumetric flow for Power Modules PM340 Liquid Cooled, frame sizes FSD to FSF

Recommendation for dimensioning the cooling circuit:

The differential pressure between the supply and return lines should be selected so that:

$$\Sigma$$
dPi < dP<sub>Syst</sub> <  $\Sigma$ dPi + 30 kPa

The individual pressure drops Pi represent the pressure drops of components (heat exchanger, piping, 70 kPa for the SINAMICS units connected in parallel, valves, dirt traps, pipe bends, etc.).

Coolant pipes must be routed with extreme care. The pipes must never come into contact with electrically live components. An insulation clearance of > 13 mm must always be maintained between pipes and live parts. The pipes must be securely mounted and checked for leaks.

# 10.2 Coolant requirements

## Properties of the cooling medium

Water or a water/anti-freeze mixture that meets the relevant requirements can be used as a cooling medium. The cooling medium must be chemically neutral, clean, and not contain any solids.

The cooling water must fulfill the following requirements over the long term:

- · Chemically neutral, clean, and free of solids
- Max. inlet temperature: 50 °C
- Max. outlet temperature: 55 °C
- System pressure 600 kPa
- Max. size of any particles transported: 100 μm
- pH value: 6.0 to 8.0
- Chlorides < 200 ppm</li>
- Sulfates < 600 ppm
- Loose materials < 340 ppm
- Total hardness < 170 ppm
- Electrical conductivity < 500 μS/cm</li>

### Note

Normal tap water does not generally fulfill these requirements, although it can be mixed with de-ionized water. Losses must always be replenished with de-ionized water.

Operating pressures must not exceed 600 kPa.

### NOTICE

Condensation must not be allowed to form on the SINAMICS S120 equipment as a result of supercooling. The temperature of the cooling water may have to be regulated.

A particle filter (particle size < 100 µm) must be installed in the cooling water circuit.

If there is a risk of frost, preventive measures must be taken during operation, storage, and transportation (e.g. emptying and blowing out with air, additional heating).

The cooling water should be checked 3 months after the cooling circuit is filled for the first time and, subsequently, once a year. If the cooling water becomes cloudy, is colored, or becomes contaminated by mould spores, the cooling circuit must be cleaned and refilled.

An inspection glass should be provided in the cooling circuit to make it easier to check the cooling water.

# 10.3 Anti-corrosion additives (inhibitors)

### Inhibitor without anti-freeze effect

The NALCO 00GE056 inhibitor (Manufacturer: Nalco) must always be used in a mixing ratio of 0.2 % to 0.25 %. A prerequisite for the inhibitor is the specified coolant, which must not contain any magnesium carbonate. Control kits can be ordered from Nalco to check the inhibitor concentration.

# 10.4 Anti-freeze additives

## Anti-freeze protection

Antifrogen N (Manufacturer: Clariant) with a proportion X of 20 % < X  $\le$  45 % is the antifreeze used. Coolants containing 45 % Antifrogen N are anti-freeze-protected down to -30  $^{\circ}$ C.

Antifrogen N contains anti-corrosion inhibitors that permanently protect the metal in the cooling system against corrosion.

It is particularly important to ensure that the proportion of Antifrogen N is always >20 % when a system is refilled, otherwise the mixture becomes corrosive.

Inhibitors and Antifrogen N must not be mixed.

# 10.5 Biocide additives (only if required)

## **Biocide**

Closed cooling circuits with soft water (°DH>4) are susceptible to microbes. The risk of corrosion caused by microbes is virtually non-existent in chlorinated drinking water systems.

No strain of bacteria can survive if >20 % Antifrogen N is added.

The following types of bacteria are encountered in practice:

- Slime-forming bacteria
- Corrosive bacteria
- Iron-depositing bacteria

The type of bacteria determines the suitability of a biocide. At least one water analysis per year (to determine the number of bacterial colonies) is recommended. Suitable biocides are available, for example, from Nalco (Manufacturer: Nalco).

#### Note

The type of bacteria determines the biocide.

The manufacturer's recommendations must be followed regarding dosage and compatibility with any inhibitor used.

Biocides and Antifrogen N must not be mixed.

Antifrogen N has a biocidal effect even at the minimum required concentration of >20 %.

## 10.6 Anti-condensation measures

The customer must take measures to protect the devices against condensation.

Condensation occurs when the inlet temperature of the coolant is significantly lower than room temperature (ambient temperature). The permissible temperature difference between coolant and air varies as a function of the relative humidity  $\phi$  of the ambient air. The air temperature at which the aqueous phase precipitates is referred to as the "dew point".

The table below shows the dew points (in  $^{\circ}$ C) for an atmospheric pressure of 100 kPa ( $\approx$  installation altitude: 0 to 500 m). If the temperature of the coolant is below the specified value, condensation may occur (i.e. the coolant temperature must always be  $\geq$  the dew point temperature).

Table 10- 2 Dew point temperature as a function of relative air humidity φ and room temperature at an installation altitude of 0 m.

T room [°C]	Ф=20%	Ф=30%	Ф=40%	Ф=50%	Ф=60%	Ф=70%	Ф=80%	Ф=85%	Ф=90%	Ф=95%	Ф=100%
10	<0	<0	<0	0.2	2.7	4.8	6.7	7.6	8.4	9.2	10
20	<0	2	6	9.3	12	14.3	16.4	17.4	18.3	19.1	20
25	0.6	6.3	10.5	13.8	16.7	19.1	21.2	22.2	23.2	24.1	24.9
30	4.7	10.5	14.9	18.4	21.3	23.8	26.1	27.1	28.1	29	29.9
35	8.7	14.8	19.3	22.9	26	28.6	30.9	32	33	34	34.9
38	11.1	17.4	22	25.7	28.8	31.5	33.8	34.9	36	36.9	37.9
40	12.8	19.1	23.7	27.5	30.6	33.4	35.8	36.9	37.9	38.9	39.9
45	16.8	23.3	28.2	32	35.3	38.1	40.6	41.8	42.9	43.9	44.9
50	20.8	27.5	32.6	36.6	40	42.9	45.5	46.6	47.8	48.9	49.9

The dew point also depends on the absolute pressure (i.e. the installation altitude).

The dew points for low atmospheric pressure are lower than those at an altitude of 0 m (i.e. it is always acceptable to calculate the coolant supply temperature for an altitude of 0 m).

For short periods of condensation in Power Modules PM340 Liquid Cooled, framed size FSF, the condensate may be collected inside the components and removed by a hose (see dimensional drawing).

# 10.7 Equipotential bonding

All components in the cooling system (SINAMICS units, heat exchanger, piping system, pump, pressure compensator, etc.) must be connected to an equipotential bonding system. A copper bar or stranded copper with the appropriate conductor cross-sections must be used for this purpose to eliminate electrochemical processes.

If the installation comprises more than one control cabinet, they must be bolted together with good conductivity (e.g. bolt cabinet cross-beams together directly at several points to establish a conductive connection). This eliminates potential differences and, in turn, the risk of electrochemical corrosion. A PE bar must be installed in every cabinet (including the recooling system) and the individual bars interconnected.

Service and maintenance

# 11.1 Safety information

# / DANGER

Only Siemens customer service, repair centers that have been authorized by Siemens or authorized personnel may repair drive equipment. All of the persons involved must have indepth knowledge of all of the warnings and operating instructions as listed in this Manual.

All damaged parts or components must be replaced only using parts and components that are listed in the relevant spare parts list.

# DANGER

Before starting any work, after the specified waiting time has elapsed, carefully measure the voltage! The voltage can be measured between the DC link terminals DCP and DCN and must be below 42.2 V DC.

# /!\DANGER

If the auxiliary 230 V AC supplies are present, then a hazardous voltage is present at the components even when the main switch is in the open state.

# 11.2 Spare parts

Spare parts are available on the Internet at: http://support.automation.siemens.com/WW/view/de/16612315

# 11.3 Service and maintenance for components, Blocksize format

## 11.3.1 Replacing hardware components

#### NOTICE

Hardware components may only be replaced when in the no-voltage state!

The following components can be replaced with replacement/exchange components with the same Order No.:

- Power Modules
- DRIVE-CLiQ components
- Control Units

## 11.3.2 Replacing the fan

 CU310 DP: The CU310 DP fan must only be replaced by trained personnel who strictly adhere to ESD instructions.

When the fan is replaced, the plastic housing must be removed by releasing all of the catches one after another using a slotted screwdriver. After pressing the release clip, the fan connectors can be removed without the need for any other tools. The fan can then be withdrawn from the front and replaced.

At the same time, a qualified specialist should reset the fan's operating hours counter to "0"

The fan can be ordered as a spare part.

 CU310 PN: The CU310 DP fan must only be replaced by trained personnel who strictly adhere to ESD instructions.

When the fan is replaced, the plastic housing must be removed by releasing all of the catches one after another using a slotted screwdriver. After pressing the release clip, the fan connectors can be removed without the need for any other tools. The fan can then be withdrawn from the front and replaced.

At the same time, a qualified specialist should reset the fan's operating hours counter to "0".

The fan can be ordered as a spare part.

- PM340: For all frame sizes, the fans are accessible from the outside. For frame sizes FSA to FSC, a Phillips screwdriver is required for replacing fans.
   The fan can be ordered as a spare part.
- The CUA31 does not have a fan.

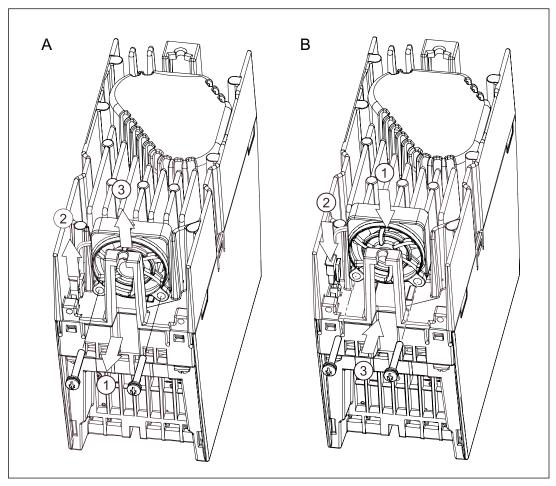


Figure 11-1 Replacing the fan for a Power Module PM340, frame size FSA (tightening torque 0.4 Nm)

# 11.3 Service and maintenance for components, Blocksize format

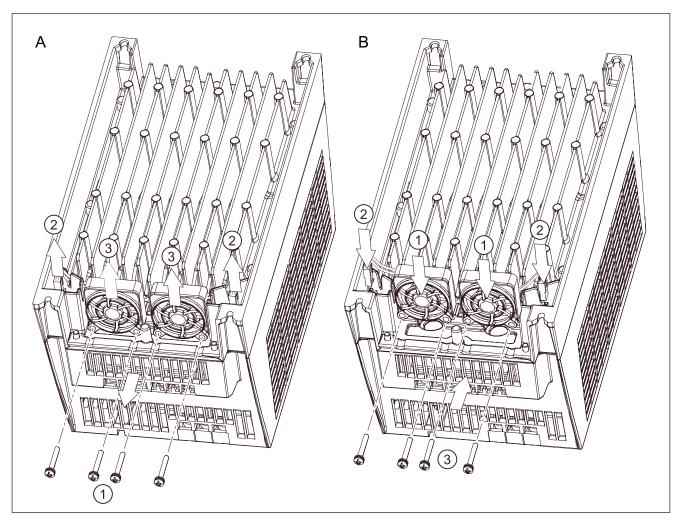


Figure 11-2 Replacing a fan for a Power Module PM340, frame sizes FSB and FSC

(tightening torque 0.4 Nm)

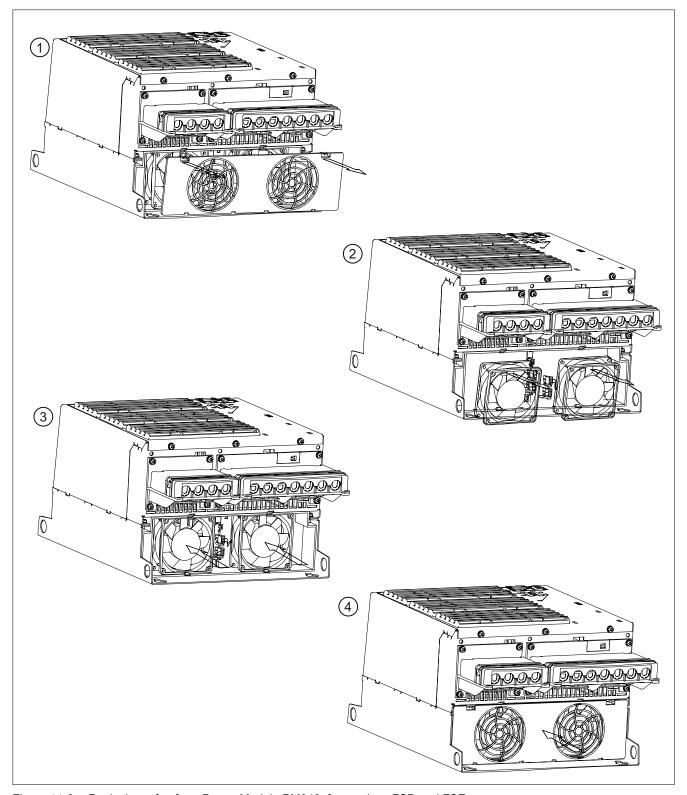


Figure 11-3 Replacing a fan for a Power Module PM340, frame sizes FSD and FSE

## 11.3 Service and maintenance for components, Blocksize format

- 1. Removing the cover using a suitable tool.
- 2. Withdraw the two connectors shown and lift-out the fan.
- 3. Use the new fan and insert both connectors.
- 4. Close the protective cover.

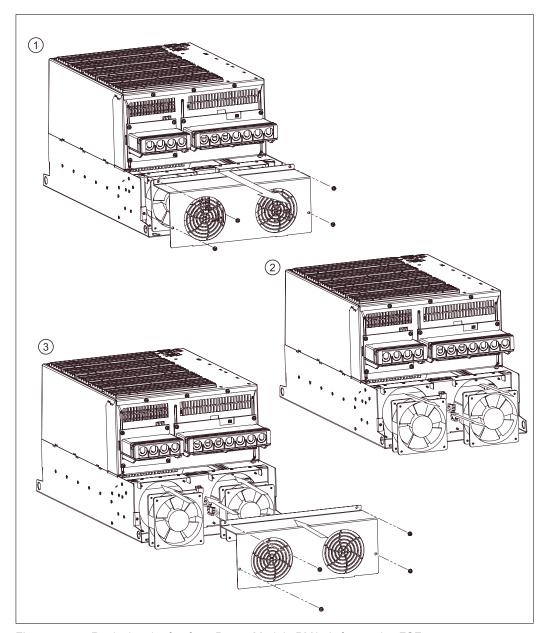


Figure 11-4 Replacing the fan for a Power Module PM340, frame size FSF

- 5. Release the screws and remove the cover.
- 6. Withdraw the two connectors shown and lift-out the fan.
- 7. Insert the new fan, locate both connectors, close the cover and tighten the screws (tightening torque, 3.0 Nm).

Maintenance is intended to ensure that the equipment remains in the specified condition. Dirt and contamination must be removed regularly and parts subject to wear replaced.

The following points must generally be observed.

# **Dust deposits**

Dust deposits inside the device must be removed at regular intervals (or at least once a year) by qualified personnel in line with the relevant safety regulations. The device must be cleaned using a brush and vacuum cleaner. Areas that cannot be easily reached must be cleaned with dry compressed air (max. 100 kPa).

### Ventilation

The ventilation openings in the device must never be obstructed. The fans must be checked to make sure that they are functioning correctly.

### Cable and screw terminals

Cable and screw terminals must be checked regularly to ensure that they are secure in position, and if necessary, retightened. Cabling must be checked for defects. Defective parts must be replaced immediately.

#### Note

The actual intervals at which maintenance procedures are to be performed depend on the installation conditions (cabinet environment) and the operating conditions.

Siemens offers its customers support in the form of a service contract. For further details, contact your regional office or sales office.

## 11.4.1 Maintenance

Servicing involves activities and procedures for maintaining and restoring the operating condition of the devices.

## Required tools

The following tools are required for replacing components:

- Spanner or socket spanner (w/f 10)
- Spanner or socket spanner (w/f 13)
- Spanner or socket spanner (w/f 16/17)
- Spanner or socket spanner (w/f 18/19)
- Hexagon-socket spanner (size 8)
- Torque wrench up to 50 Nm
- Screwdriver size 1 / 2
- Screwdriver Torx T20
- Screwdriver Torx T30

## Tightening torques for current-carrying parts

When securing connections for current-carrying parts (line supply, motor connections, busbars), you must observe the following tightening torques.

Table 11- 1 Tightening torques for connecting current-carrying parts

Screw	Torque
M6	6 Nm
M8	13 Nm
M10	25 Nm
M12	50 Nm

# 11.4.2 Installation equipment

# **Description**

The installation equipment is used to install and remove the power blocks for Power Modules in the Chassis format.

It is used as an installation aid, which is placed in front of and secured to the module. The telescopic guide support allows the withdrawable device to be adjusted according to the height at which the power blocks are installed. Once the mechanical and electrical connections have been removed, the power block can be removed from the module, whereby the power block is guided and supported by the guide rails on the withdrawable devices.



Figure 11-5 Installation equipment

## Order No.

Order number for the installation device: 6SL3766-1FA00-0AA0.

# 11.4.3 Replacing components

# 11.4.3.1 Safety information

# DANGER

When transporting the devices and replacing components, note the following:

- Some of the devices and components are heavy or top heavy.
- Due to their weight, the devices must be handled with care by trained personnel.
- Serious injury or even death and substantial material damage can occur if the devices are not lifted or transported properly.

# DANGER

The equipment is operated with hazardous voltages

All connection wok must be carried-out in a no-voltage condition!

All work on the units must be carried out by trained personnel only. Death, serious injury, or substantial material damage can result if these warnings are not taken into account.

Work on an open device must be carried out with extreme caution because external supply voltages may be present. The power and control terminals may be live even when the motor is not running.

Dangerously high voltage levels are still present in the cabinet up to five minutes after it has been disconnected due to the DC link capacitors. For this reason, the cabinet should not be opened until after a reasonable period of time has elapsed.

# 11.4.3.2 Replacing the Powerblock, Power Module, frame size FX

# Replacing the Powerblock

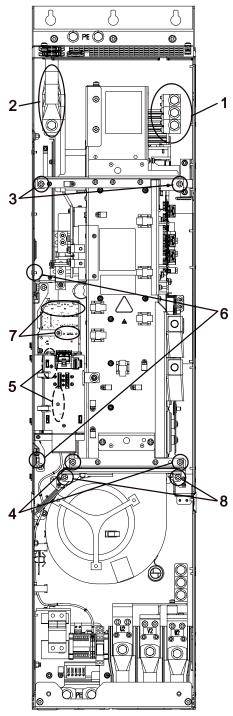


Figure 11-6 Replacing the Powerblock, Power Module, frame size FX

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA0.

## **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Unscrew the connection to the outgoing motor section (3 screws).
- 2. Unscrew the connection to the line supply (3 screws).
- 3. Remove the retaining screws at the top (2 screws).
- 4. Remove the retaining screws at the bottom (2 screws).
- 5. Remove the DRIVE-CLiQ cables and connections on –X41 / –X42 (5 plugs).
- 6. Remove the retaining elements of the electronic module (2 nuts) and carefully remove the electronics module.
  - When removing the plug-in module, 5 additional connectors (2 at the top, 3 at the bottom) must be removed one after the other.
- 7. Disconnect the plugs for the fiber optic cables and signal cables (5 plugs).
- 8. Unscrew the two retaining screws for the fan and attach the tool for de-installing the powerblock at this position.

You can now remove the powerblock.



When removing the powerblock, ensure that you do not damage any signal cables.

#### Installation

To re-install the fan, carry out the above steps in reverse order.



You must observe the specified tightening torques.

Carefully re-establish the plug connections and ensure that they are secure.

The fiber-optic cable plugs must be reinstalled in their original slot. Fiber-optic cables and sockets are labeled appropriately to allow the correct assignment (U11, U21, U31).

# Replacing the Powerblock

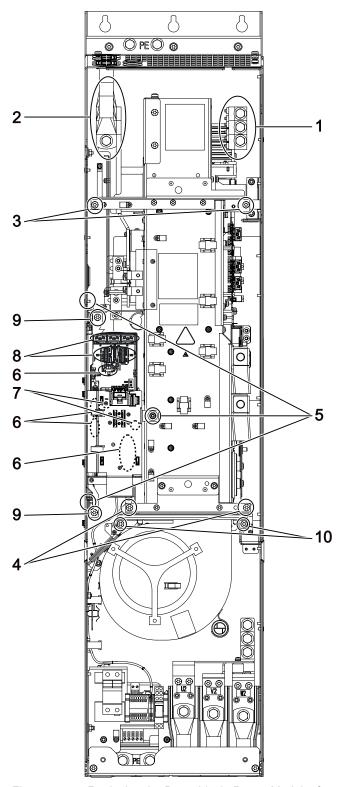


Figure 11-7 Replacing the Powerblock, Power Module, frame size FX

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA3.

## **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Unscrew the connection to the outgoing motor section (3 screws).
- 2. Unscrew the connection to the mains supply (3 screws).
- 3. Remove the retaining screws at the top (2 screws).
- 4. Remove the retaining screws at the bottom (2 screws).
- 5. Remove the retaining nuts of the supporting plate for the Control Unit and then remove the supporting plate itself (3 nuts).
- 6. Remove the DRIVE-CLiQ cables and connections on –X41 / –X42 / –X46 (6 plugs).
- 7. Take out the retaining screws for the IPD card (2 screws) and remove the IPD card from plug -X45 on the Control Interface Module.
- 8. Disconnect the plug-in connections for the fiber-optic cables and signal cables (5 plugs).
- Remove the retaining screws of the plug-in module (2 screws) and carefully remove the plug-in module.
   When removing the plug-in module, 5 additional plugs (2 at the top, 3 at the bottom) must be removed one after the other.
- 10. Unscrew the two retaining screws for the fan and attach the mounting device for the Powerblock at this position.

You can now remove the Powerblock.



When removing the Powerblock, ensure that you do not damage any signal cables.

## Installation

For installation, carry out the above steps in reverse order.



You must observe the specified tightening torques.

Carefully establish the plug-in connections and then ensure that they are secure.

The fiber-optic cable plugs must be reinstalled in their original slot. Fiber-optic cables and sockets are labeled appropriately to allow the correct assignment (U11, U21, U31).

# 11.4.3.3 Replacing the Powerblock, Power Module, frame size GX

# Replacing the Powerblock

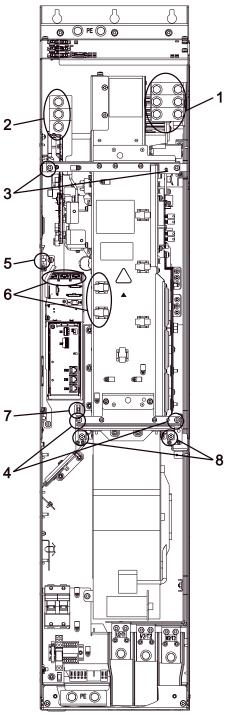


Figure 11-8 Replacing the Powerblock, Power Module, frame size GX

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA0.

## **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

### Removal

The steps for the removal procedure are numbered in accordance with the above figure.

- 1. Unscrew the connection to the motor feeder (6 screws).
- 2. Unscrew the connection to the line supply (3 screws).
- 3. Remove the retaining screws at the top (2 screws).
- 4. Remove the retaining screws at the bottom (2 screws).
- 5. Remove the retaining element of the electronic module (1 nut) and carefully remove the electronics module.
  - When removing the plug-in module, 5 additional connectors (2 at the top, 3 at the bottom) must be removed one after the other.
- 6. Disconnect the connectors for the fiber optic cables (5 plugs) and release the cable connection for the signal cables (2 connectors).
- 7. Disconnect the plug for the thermocouple.
- 8. Unscrew the two retaining screws for the fan and attach the tool for de-installing the powerblock at this position.

You can now remove the powerblock.

### **CAUTION**

When removing the powerblock, ensure that you do not damage any signal cables.

### Installation

To re-install the fan, carry out the above steps in reverse order.

## **CAUTION**

You must observe the specified tightening torques.

Carefully re-establish the plug connections and ensure that they are secure.

The fiber-optic cable plugs must be reinstalled in their original slot. Fiber-optic cables and sockets are labeled appropriately to allow the correct assignment (U11, U21, U31).

# Replacing the Powerblock

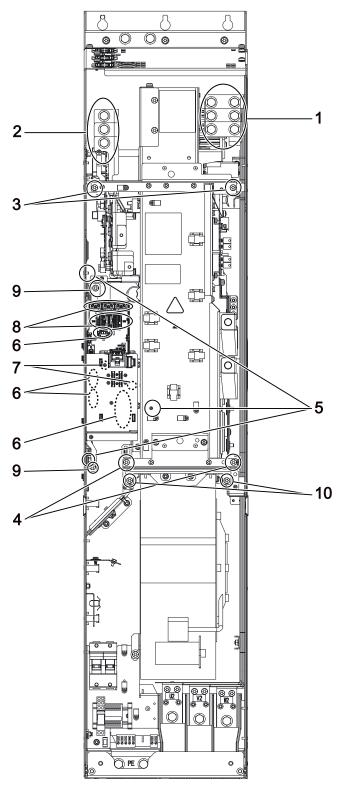


Figure 11-9 Replacing the Powerblock, Power Module, frame size GX

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA3.

## **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Unscrew the connection to the motor outgoing feeder (6 screws).
- 2. Unscrew the connection to the mains supply (3 screws).
- 3. Remove the retaining screws at the top (2 screws).
- 4. Remove the retaining screws at the bottom (2 screws).
- 5. Remove the retaining nuts of the supporting plate for the Control Unit and then remove the supporting plate itself (3 nuts).
- 6. Remove the DRIVE-CLiQ cables and connections on –X41 / –X42 / –X46 (6 plugs).
- 7. Take out the retaining screws for the IPD card (2 screws) and remove the IPD card from plug X45 on the Control Interface Module.
- 8. Disconnect the plug-in connections for the fiber-optic cables and signal cables (5 plugs).
- Remove the retaining screws of the plug-in module (2 screws) and carefully remove the plug-in module.
   When removing the plug-in module, 5 additional plugs (2 at the top, 3 at the bottom) must be removed one after the other.
- 10. Unscrew the two retaining screws for the fan and attach the equipment for assembling the Powerblock at this position.

You can now remove the Powerblock.



When removing the Powerblock, ensure that you do not damage any signal cables.

## Installation

For installation, carry out the above steps in reverse order.



You must observe the specified tightening torques.

Carefully establish the plug-in connections and then ensure that they are secure.

The fiber-optic cable plugs must be remounted at their original slot. Fiber-optic cables and sockets are accordingly labeled for correct assignment (U11, U21, U31).

# 11.4.3.4 Replacing the Control Interface Module, Power Module, frame size FX

# Replacing the Control Interface Module

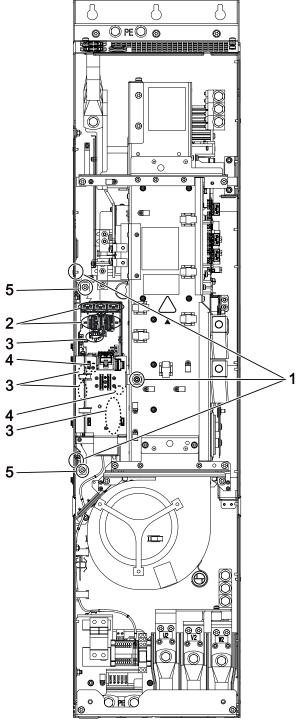


Figure 11-10 Replacing the Control Interface Module, Power Module, frame size FX

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA3.

# **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Remove the retaining nuts of the supporting plate for the Control Unit and then remove the supporting plate itself (3 nuts).
- 2. Disconnect the plug-in connections for the fiber-optic cables and signal cables (5 plugs).
- 3. Remove the DRIVE-CLiQ cables and connections on –X41 / –X42 / –X46 (6 plugs).
- 4. Take out the retaining screws for the IPD card (2 screws) and remove the IPD card from plug X45 on the Control Interface Module.
- 5. Remove the retaining screws for the Control Interface Module (2 screws). When removing the Control Interface Module, 5 additional plugs (2 at the top, 3 at the bottom) must be removed one after the other.



When removing the unit, ensure that you do not damage any signal cables.

## Installation

For installation, carry out the above steps in reverse order.



You must observe the specified tightening torques.

Carefully establish the plug-in connections and then ensure that they are secure.

The fiber-optic cable plugs must be remounted at their original slot. Fiber-optic cables and sockets are accordingly labeled for correct assignment (U11, U21, U31).

# 11.4.3.5 Replacing the Control Interface Board, Power Module, frame size FX

# Replacing the Control Interface Board

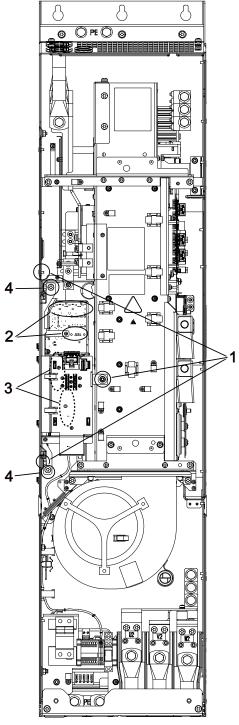


Figure 11-11 Replacing the Control Interface Board, Power Module, frame size FX

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA0.

### **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

#### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Remove the retaining nuts of the supporting plate for the Control Unit and then remove the supporting plate itself (3 nuts).
- 2. Disconnect the plug-in connections for the fiber-optic cables and signal cables (5 plugs).
- 3. Remove the DRIVE-CLiQ cables and connections on -X41 / -X42 (5 plugs).
- 4. Remove the retaining screws for the plug-in module (2 screws). When removing the plug-in module, 5 additional plugs (2 at the top, 3 at the bottom) must be removed one after the other.



When removing the plug-in module, ensure that you do not damage any signal cables.

The Control Interface Board can then be removed from the plug-in module.

### Installation

For installation, carry out the above steps in reverse order.

# /!\CAUTION

You must observe the specified tightening torques.

Carefully establish the plug-in connections and then ensure that they are secure.

The fiber-optic cable plugs must be remounted at their original slot. Fiber-optic cables and sockets are accordingly labeled for correct assignment (U11, U21, U31).

# 11.4.3.6 Replacing the Control Interface Module, Power Module, frame size GX

# Replacing the Control Interface Module

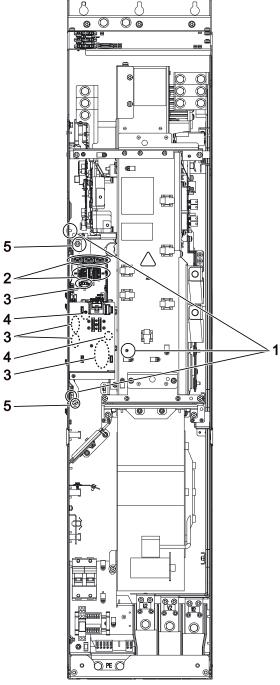


Figure 11-12 Replacing the Control Interface Module, Power Module, frame size  $\mathsf{GX}$ 

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA3.

# **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

#### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Remove the retaining nuts of the supporting plate for the Control Unit and then remove the supporting plate itself (3 nuts).
- 2. Disconnect the plug-in connections for the fiber-optic cables and signal cables (5 plugs).
- 3. Remove the DRIVE-CLiQ cables and connections on -X41 / -X42 / -X46 (6 plugs).
- 4. Take out the retaining screws for the IPD card (2 screws) and remove the IPD card from plug X45 on the Control Interface Module.
- 5. Remove the retaining screws for the Control Interface Module (2 screws). When removing the Control Interface Module, 5 additional plugs (2 at the top, 3 at the bottom) must be removed one after the other.



When removing the unit, ensure that you do not damage any signal cables.

### Installation

For installation, carry out the above steps in reverse order.



You must observe the specified tightening torques.

Carefully establish the plug-in connections and then ensure that they are secure.

The fiber-optic cable plugs must be remounted at their original slot. Fiber-optic cables and sockets are accordingly labeled for correct assignment (U11, U21, U31).

# 11.4.3.7 Replacing the Control Interface Board, Power Module, frame size GX

# Replacing the Control Interface Board

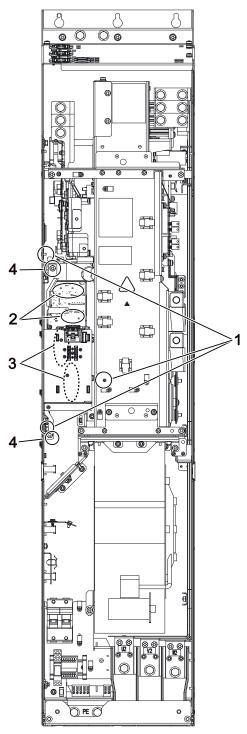


Figure 11-13 Replacing the Control Interface Board, Power Module, frame size GX

#### Note

This Programming and Operating Manual is only applicable to Power Modules with order numbers 6SL3310-1TE3x-xAA0.

# **Preparatory steps**

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the Powerblock
- Remove the front cover

#### Removal

The steps for the removal procedure are numbered in accordance with the above figure.

- 1. Remove the retaining nuts of the supporting plate for the Control Unit and then remove the supporting plate itself (3 nuts).
- 2. Disconnect the plug-in connections for the fiber-optic cables and signal cables (5 plugs).
- 3. Remove the DRIVE-CLiQ cables and connections on -X41 / -X42 (5 plugs).
- 4. Remove the retaining screws for the plug-in module (2 screws). When removing the plug-in module, 5 additional plugs (2 at the top, 3 at the bottom) must be removed one after the other.

# CAUTION

When removing the plug-in module, ensure that you do not damage any signal cables.

The Control Interface Board can then be removed from the plug-in module.

# Installation

For installation, carry out the above steps in reverse order.

# CAUTION

You must observe the specified tightening torques.

Carefully establish the plug-in connections and then ensure that they are secure.

The fiber-optic cable plugs must be remounted at their original slot. Fiber-optic cables and sockets are accordingly labeled for correct assignment (U11, U21, U31).

# 11.4.3.8 Replacing the fan, Power Module, frame size FX

# Replacing the fan

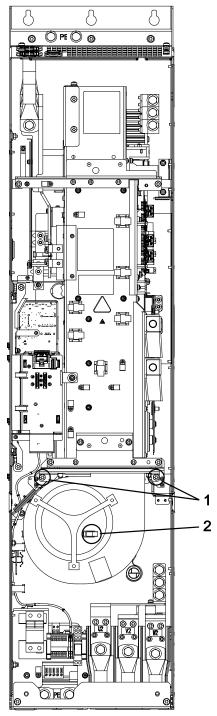


Figure 11-14 Replacing the fan, Power Module, frame size FX

# **Description**

The average service life of the device fans is 50,000 hours. In practice, however, the service life depends on other variables, including ambient temperature and the degree of cabinet protection and, therefore, may deviate from this value.

The fans must be replaced in good time to ensure that the device is available.

# Preparatory steps

- Disconnect the drive line-up from the power supply.
- Allow unimpeded access.
- · Remove the front cover.

#### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Remove the retaining screws for the fan (2 screws).
- 2. Disconnect the supply cables (1 x "L", 1 x "N").

You can now carefully remove the fan.

#### **CAUTION**

When removing the fan, ensure that the cables are not damaged.

# Installation

To re-install the fan, carry out the above steps in reverse order.

# CAUTION

You must observe the specified tightening torques.

Carefully re-establish the plug connections and ensure that they are secure.

# 11.4.3.9 Replacing the fan, Power Module, frame size GX

# Replacing the fan

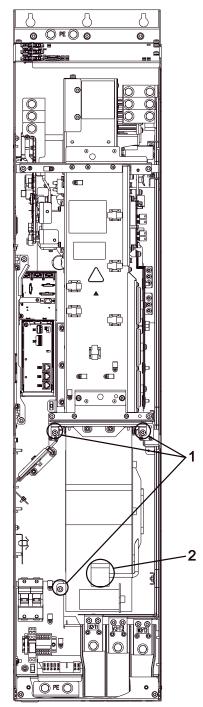


Figure 11-15 Replacing the fan, Power Module, frame size  $\mathsf{GX}$ 

# **Description**

The average service life of the device fans is 50,000 hours. In practice, however, the service life depends on other variables, including ambient temperature and the degree of cabinet protection and, therefore, may deviate from this value.

The fans must be replaced in good time to ensure that the device is available.

# Preparatory steps

- Disconnect the drive line-up from the power supply.
- Allow unimpeded access.
- · Remove the front cover.

#### Removal

The steps for the removal procedure are numbered in accordance with the previous diagram.

- 1. Remove the retaining screws for the fan (3 screws).
- 2. Disconnect the supply cables (1 x "L", 1 x "N").

You can now carefully remove the fan.

#### **CAUTION**

When removing the fan, ensure that the cables are not damaged.

# Installation

To re-install the fan, carry out the above steps in reverse order.

# CAUTION

You must observe the specified tightening torques.

Carefully re-establish the plug connections and ensure that they are secure.

11.4 Service and maintenance for Chassis format components

# Appendix A



# A.1 List of abbreviations

# Note:

The following list of abbreviations contains the abbreviations and their meanings used in the entire SINAMICS user documentation.

Abbreviation	Derivation of abbreviation	Meaning
Α		
A	Alarm	Alarm
AC	Alternating Current	Alternating current
ADC	Analog Digital Converter	Analog digital converter
Al	Analog Input	Analog input
AIM	Active Interface Module	Active Interface Module
ALM	Active Line Module	Active Line Module
AO	Analog Output	Analog output
AOP	Advanced Operator Panel	Advanced Operator Panel
APC	Advanced Positioning Control	Advanced positioning control
AR	Automatic Restart	Automatic restart
ASC	Armature Short-Circuit	Armature short-circuit
ASCII	American Standard Code for Information Interchange	American Standard Code for Information Interchange
ASM	Asynchronmotor	Induction motor
В		
BERO	-	Tradename for a type of contactless proximity switch
BI	Binector Input	Binector input
BIA	Berufsgenossenschaftliches Institut für Arbeitssicherheit	e-German Institute for Occupational Safety
BICO	Binector Connector Technology	Binector connector technology
BLM	Basic Line Module	Basic Line Module
ВО	Binector Output	Binector output
ВОР	Basic Operator Panel	Basic Operator Panel

Abbreviation	Derivation of abbreviation	Meaning
С		
С	Capacitance	Capacitance
C	-	Safety message
CAN	Controller Area Network	Serial bus system
CBC	Communication Board CAN	CAN communication board
CD	Compact Disc	Compact Disc
CDS	Command Data Set	Command data set
CF Card	CompactFlash Card	CompactFlash card
CI	Connector Input	Connector input
CLC	Clearance Control	Clearance control
CNC	Computer Numerical Control	Computer numerical control
CO	Connector Output	Connector output
CO/BO	Connector Output/Binector Output	Connector output/Binector output
COB-ID	CAN Object-Identification	CAN object identification
COM	Common contact of a change-over relay	Common contact of a change-over relay
COMM	Commissioning	Commissioning
CP	Communications Processor	Communications processor
CPU	Central Processing Unit	Central processing unit
CRC	Cyclic Redundancy Check	Cyclic redundancy check
CSM	Control Supply Module	Control Supply Module
CU	Control Unit	Control Unit
D		
DAC	Digital Analog Converter	Digital Analog Converter
DC	Direct Current	Direct current
DCB	Drive Control Block	Drive Control Block
DCC	Drive Control Chart	Drive Control Chart
DCC	Data Cross-Check	Data cross-check
DCN	Direct Current Negative	Direct current negative
DCP	Direct Current Positive	Direct current positive
DDS	Drive Data Set	Drive data set
DI	Digital Input	Digital input
DI/DO	Digital Input/Digital Output	Bidirectional digital input/digital output
DMC	DRIVE-CLiQ Hub Module Cabinet	DRIVE-CLiQ Hub Module Cabinet
DME	DRIVE-CLiQ Hub Module External	DRIVE-CLiQ Hub Module External
DO	Digital Output	Digital output
DO	Drive Object	Drive object
DP	Distributed I/Os	Distributed I/Os
DPRAM	Dual-Port Random Access Memory	Dual-Port Random Access Memory

Abbreviation	Derivation of abbreviation	Meaning
DRAM	Dynamic Random Access Memory	Dynamic Random Access Memory
DRIVE-CLiQ	Drive Component Link with IQ	Drive Component Link with IQ
DSC	Dynamic Servo Control	Dynamic servo control
E		
EASC	External Armature Short-Circuit	External armature short-circuit
EDS	Encoder Data Set	Encoder data set
ELCB	Earth Leakage Circuit Breaker	Earth leakage circuit breaker
ELP	Earth Leakage Protection	Earth leakage protection
EMC	Electromagnetic Compatibility	Electromagnetic compatibility
EMF	Electromagnetic Force	Electromagnetic force
EN	Europäische Norm	European Standard
EnDat	Encoder-Data-Interface	Encoder interface
EP	Enable Pulses	Enable Pulses
EPOS	Einfachpositionierer	Basic positioner
ES	Engineering System	Engineering system
ESB	Ersatzschaltbild	Equivalent circuit diagram
ESD	Electrostatic Sensitive Devices	Electrostatic sensitive devices
ESR	Extended Stop and Retract	Extended stop and retract
F		
F	Fault	Fault
FAQ	Frequently Asked Questions	Frequently asked questions
FBL	Free Blocks	Free function blocks
FCC	Function Control Chart	Function Control Chart
FCC	Flux Current Control	Flux current control
FD	Function Diagram	Function diagram
F-DI	Failsafe Digital Input	Failsafe digital input
F-DO	Failsafe Digital Output	Failsafe digital output
FEM	Fremderregter Synchronmotor	Separate-field synchronous motor
FEPROM	Flash-EPROM	Non-volatile write and read memory
FG	Function Generator	Function generator
FI	-	Fault current
FO	Fiber-Optic Cable	Fiber optic cable
FPGA	Field Programmable Gate Array	Field Programmable Gate Array
FW	Firmware	Firmware

Abbreviation	Derivation of abbreviation	Meaning
G		
GB	Gigabyte	Gigabyte
GC	Global Control	Global Control Telegram (Broadcast Telegram)
GND	Ground	Reference potential for all signal and operating voltages, usually defined with 0 V (also designated as M)
GSD	Gerätestammdatei	Device master file: describes the features of a PROFIBUS slave
GSV	Gate Supply Voltage	Gate supply voltage
GUID	Globally Unique Identifier	Globally unique identifier
Н		
HF	High Frequency	High frequency
HFD	Hochfrequenzdrossel	High-frequency reactor
НМІ	Human Machine Interface	Human Machine Interface
HTL	High-Threshold Logic	High-threshold logic
HW	Hardware	Hardware
1		
I/O	Input/Output	Input/Output
I2C	Inter Integrated Circuit	Internal serial data bus
IASC	Internal Armature Short-Circuit	Internal armature short-circuit
ID	Identifier	Identifier
IEC	International Electrotechnical Commission	International standard in electrical engineering
IF	Interface	Interface
IGBT	Insulated Gate Bipolar Transistor	Bipolar transistor with insulated control electrode
IGCT	Integrated Gate-Controlled Thyristor	Semiconductor circuit-breaker with integrated control electrode
IL	Impulslöschung	Pulse suppression
IP	Internet Protocol	Internet Protocol
IPO	Interpolator	Interpolator
IT	Isolé Terré	Insulated three-phase supply system
IVP	Internal Voltage Protection	Internal voltage protection
J		
JOG	Jogging	Jogging
K		
KIP	Kinetische Pufferung	Kinetic buffering


Abbreviation	Derivation of abbreviation	Meaning
Кр	-	Proportional gain
KTY	-	Special temperature sensor
L		
L	-	Formula symbol for inductance
LED	Light Emitting Diode	Light Emitting Diode
LIN	Linearmotor	Linear motor
LR	Lageregler	Position controller
LSB	Least Significant Bit	Least Significant Bit
LSC	Line-Side Converter	Line-Side Converter
LSS	Line Side Switch	Line Side Switch
LU	Length Unit	Length Unit
M		
М	-	Formula symbol for torque
M	Masse	Reference potential for all signal and operating voltages, usually defined with 0 V (also designated as GND)
MB	Megabyte	Megabyte
MCC	Motion Control Chart	Motion Control Chart
MDS	Motor Data Set	Motor data set
MLFB	Maschinenlesbare Fabrikatebezeichnung	Machine-readable product designation
MMC	Man-Machine Communication	Man-Machine Communication
MMC	Micro Memory Card	Micro Memory Card
MSB	Most Significant Bit	Most Significant Bit
MSC	Motor-Side Converter	Motor-Side Converter
MSCY_C1	Master Slave Cycle Class 1	Cyclic communication between master (class 1) and slave
MT	Messtaster	Probe
N		
N. C.	Not Connected	Not connected
N	No Report	No report or internal message
NAMUR	Normenarbeitsgemeinschaft für Mess- und Regeltechnik in der chemischen Industrie	Standardization association for measurement and control in chemical indstries
NC	Normally Closed (contact)	Normally Closed (contact)
NC	Numerical Control	Numerical control
NEMA	National Electrical Manufacturers Association	Standards association in USA
NO	Normally Open (contact)	Normally Open (contact)
0		
OA	Open Architecture	Open Architecture

Abbreviation	Derivation of abbreviation	Meaning
OC	Operating Condition	Operating condition
OEM	Original Equipment Manufacturer	Original Equipment Manufacturer
OLP	Optical Link Plug	Optical link plug
OMI	Option Module Interface	Option Module Interface
Р		
p	-	Setting parameter
РВ	PROFIBUS	PROFIBUS
PcCtrl	PC Control	Master control
PD	PROFIdrive	PROFIdrive
PDS	Power unit Data Set	Power unit data set
PE	Protective Earth	Protective Earth
PELV	Protective Extra Low Voltage	Protective Extra Low Voltage
PEM	Permanenterregter Synchronmotor	Permanent-field synchronous motor
PG	Programmiergerät	Programming device
PI	Proportional Integral	Proportional Integral
PID	Proportional Integral Differential	Proportional Integral Differential
PLC	Programmable Logic Controller	Programmable logic controller
PLL	Phase-Locked Loop	Phase-Locked Loop
PN	PROFINET	PROFINET
PNO	PROFIBUS Nutzerorganisation	PROFIBUS User Organization (PROFIBUS International)
PPI	Point to Point Interface	Point to point interface
PRBS	Pseudo Random Binary Signal	Pseudo Random Binary Signal
PROFIBUS	Process Field Bus	Serial data bus
PS	Power Supply	Power supply
PSA	Power Stack Adapter	Power stack adapter
PTC	Positive Temperature Coefficient	Positive Temperature Coefficient
PTP	Point-To-Point	Point-to-point
PWM	Pulse Width Modulation	Pulse width modulation
PZD	Prozessdaten	Process data
Q		
R		
r	-	Display parameter (read only)
RAM	Random Access Memory	Read and write memory
RCCB	Residual Current Circuit Breaker	Residual current circuit breaker
RCD	Residual Current Device	Residual current device
RFG	Ramp-Function Generator	Ramp-function generator

Abbreviation	Derivation of abbreviation	Meaning
RJ45	Registered Jack 45	Describes an 8-pole connector system for data transfer with shielded or unshielded multicore copper cables
RKA	Rückkühlanlage	Cooling unit
RO	Read Only	Read only
RPDO	Receive Process Data Object	Receive Process Data Object
RS232	Recommended Standard 232	Interface standard for conducted serial data transfer between a transmitter and a receiver (also designated as EIA232)
RS485	Recommended Standard 485	Interface standard for a conducted differential, parallel and/or serial bus system (data transfer between several transmitters and receivers, also designated as EIA485)
RTC	Real Time Clock	Real time clock
S		
S1	-	Continuous duty
S3	-	Intermittent duty
SBC	Safe Brake Control	Safe brake control
SBH	Sicherer Betriebshalt	Safe Operating Stop
SBR	-	Safe Acceleration Monitor
SCA	Safe Cam	Safe cam
SD Card	SecureDigital Card	Secure Digital Card
SE	Sicherer Software-Endschalter	Safe software limit switch
SG	Sicher reduzierte Geschwindigkeit	Safely reduced speed
SGA	Sicherheitsgerichteter Ausgang	Safety-related output
SGE	Sicherheitsgerichteter Eingang	Safety-related input
SH	Sicherer Halt	Safe standstill
SP	Safety Integrated	Safety Integrated
SIL	Safety Integrity Level	Safety Integrity Level
SLM	Smart Line Module	Smart Line Module
SLP	Safely-Limited Position	Safely-Limited Position
SLS	Safely-Limited Speed	Safely Limited Speed
SLVC	Sensorless Vector Control	Sensorless Vector Control
SM	Sensor Module	Sensor Module
SMC	Sensor Module Cabinet	Sensor Module Cabinet
SME	Sensor Module External	Sensor Module External
SN	Sicherer Software-Nocken	Safe software cam
sos	Safe Operating Stop	Safe operating stop
SP	Service Pack	Service pack
SPC	Setpoint Channel	Setpoint channel

Abbreviation	Derivation of abbreviation	Meaning
SPI	Serial Peripheral Interface	Serial I/O interface
SS1	Safe Stop 1	Safe Stop 1 (time-monitored, ramp-monitored)
SS2	Safe Stop 2	Safe Stop 2
SSI	Synchronous Serial Interface	Synchronous serial interface
SSM	Safe Speed Monitor	Safe feedback from speed monitor (n < nx)
SSR	Safe Stop Ramp	Safe brake ramp
STO	Safe Torque Off	Safely switched-off torque
STW	Steuerwort	Control word
SVA	Space-vector approximation	Space-vector approximation
T		
ТВ	Terminal Board	Terminal Board
TIA	Totally Integrated Automation	Totally Integrated Automation
TM	Terminal Module	Terminal Module
TN	Terre Neutre	Grounded three-phase supply system
Tn	-	Integral time
TPDO	Transmit Process Data Object	Transmit Process Data Object
TT	Terre Terre	Grounded three-phase supply system
TTL	Transistor-Transistor Logic	Transistor-Transistor-Logic
Tv	-	Derivative action time
U		
UL	Underwriters Laboratories Inc.	Underwriters Laboratories Inc.
UPS	Uninterruptible Power Supply	Uninterruptible power supply
V		
VC	Vector Control	Vector control
Vdc	-	DC link voltage
VdcN	-	Partial DC link voltage negative
VdcP	-	Partial DC link voltage positive
VDE	Verband Deutscher Elektrotechniker	Association of German Electrical Engineers
VDI	Verein Deutscher Ingenieure	Assocation of German Engineers
VPM	Voltage Protection Module	Voltage Protection Module
Vpp	Volt peak to peak	Volt peak to peak
VSM	Voltage Sensing Module	Voltage Sensing Module
W		
WZM	Werkzeugmaschine	Machine tool
X		
XML	Extensible Markup Language	Extensible Markup Language (standard language for Web publishing and document management)

Abbreviation	Derivation of abbreviation	Meaning
Υ		
Z		
ZK	Zwischenkreis	DC link
ZM	Zero Mark	Zero mark
ZSW	Zustandswort	Status word

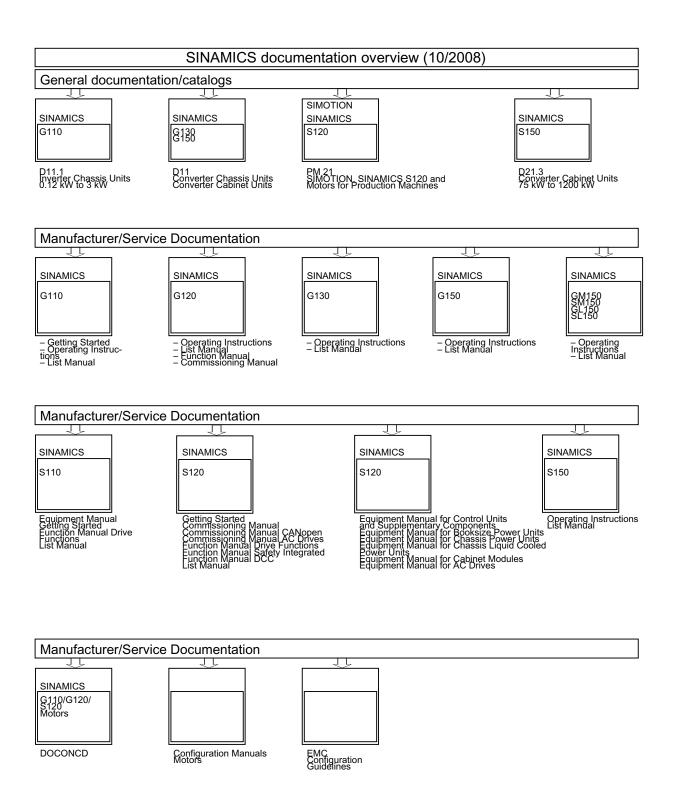

If you come across any misprints in this document, please let us know using this form. We would also be grateful for any suggestions and recommendations for improvement.

To:	From
SIEMENS AG	Name:
I DT MC MS1 P.O. Box 3180	Address of your Company/Dept.
D-91050 Erlangen, Federal Republic of Germany	Street:
	Postal code: Location:
Fax: +49 (0) 9131 / 98 - 2176 (documentation) mailto:docu.motioncontrol@siemens.com	Phone: /
http://www.siemens.com/automation/service&support	Fax: /

Suggestions and/or corrections

# Index

A Anti-condensation measures, 335 Anti-freeze protection, 333 Autotransformer, 37  B Basic Operator Panel BOP20, 250 Biocide, 334	Control Unit CU310 PN, 218 Coolant, 328, 332 Coolant connection, 114 Coolant mix, 330 Coolant temperatures, 328 Cooling circuit, 325 Cooling circuit configuration, 328 Cooling clearances, 64, 103, 320 Corrosion protection, 333 CUA32 Control Unit Adapter, 240
Braking Modules, 152	D
Braking resistors in blocksize format, 145 Braking resistors, Chassis, 162	Description of the interfaces Control Unit Adapter CUA31, 234 Control Unit CU310 DP, 201 Control Unit CU310 PN, 219
C	Power Modules Chassis, 125
Cable Installation, 315 Cavitation, 328 Components Basic Operator Panel BOP20, 250 Braking Modules, 152 Braking resistors in blocksize format, 145 Braking resistors, Chassis, 162 Control Unit Adapter CUA31, 232 Control Unit CU310 DP, 200 Control Unit CU310 PN, 218 CUA32 Control Unit Adapter, 240 DRIVE-CLiQ cabinet gland, 281 DRIVE-CLiQ coupling, 286 dv/dt filter plus Voltage Peak Limiter built-in unit, 188 Line filters, 39 Line reactors, 45 Motor reactors, 181 Motor reactors, Blocksize, 167 Power Modules Chassis, 122 Power Modules PM340 blocksize, 61 Safe Brake Relay, 273 Screening Kit, 290 Sinusoidal filter, Chassis, 184 Connection methods, 114 Control cabinet design, 305 Control Unit LEDs during booting, 210, 226 Control Unit Adapter CUA31, 232	Dew point, 335 Diagnostics using LEDs on Sensor Module Cabinet 10, 258, 268 using LEDs on Sensor Module Cabinet 20, 258, 268 Dimension drawings Blocksize line reactors, 46 Chassis line filter, 41 Chassis line reactors, 50 Control Unit Adapter CUA31, 237 Control Unit CU310 DP, 213 Control Unit CU310 PN, 229 CUA32 Control Unit Adapter, 246 Line filter blocksize, 40 Motor reactors Chassis, 182 Motor reactors, blocksize, 168 Power Modules Chassis, 134 Power Modules PM340 blocksize, 76 Screening Kit, 291 Sensor Module Cabinet-Mounted SMC10, 259 Sensor Module Cabinet-Mounted SMC20, 269 Sinusoidal filter, Chassis, 187 Dimension Drawings DRIVE-CLiQ cabinet gland, 283 DRIVE-CLiQ cabinet gland, 281 DRIVE-CLiQ coupling, 286 dv/dt filter plus Voltage Peak Limiter built-in unit, 188

Control Unit CU310 DP, 200

E	0
EMC Directive, 315 Equipotential bonding, 336 Equipotential Bonding, 318 ESD information, 9	Option module, brake control, 273 Overcurrent, 312 Overcurrent protection, 307
11	Р
H Heat dissipation, 320 Hotline, 7	Power loss, 323 Power Modules Blocksize Liquid Cooled, 100 Power Modules Chassis, 122 Power Modules PM340 blocksize, 61 Power supply, 311
Inhibitor, 333 Installation	Power Supply Units, 311 Pressure, 327 Pressure drop, 328
Basic Operator Panel BOP20, 253 Braking Modules, 158 DRIVE-CLiQ cabinet gland, 285 Interface descriptions	R Rated short-circuit current, 28
CUA32 Control Unit Adapter, 241 Power Modules blocksize, 66 Isolating transformer, 37	Repairs, 337 Replacing components, 338 Replacing the fan, 338 Residual risks, 12
L	0
Layout of the Components, 314 LEDs on Sensor Module Cabinet 10, 258, 268 on Sensor Module Cabinet 20, 258, 268 Line contactor, 309 Line disconnecting device, 307 Line filter versions, 33 Line filters, 39 Line frequency, 28 Line reactor versions, 33 Line reactor versions, 33 Line reactors, 45 Line supply voltage, 28	S Safe Brake Relay, 273 Safety information DRIVE-CLiQ cabinet gland, 281, 286 Line filter, 39 Line reactors, 45 Motor reactors, 167, 181 Power Modules Blocksize Liquid Cooled, 101 Power Modules in chassis format, 122 Power Modules PM340 blocksize, 63 Sensor Module Cabinet-Mounted SMC10, 254 Sensor Module Cabinet-Mounted SMC20, 263 Screening Kit, 290 Screw terminals, 319
M	Service and maintenance, 338
Maintenance, 337 Motor reactors, 181 Motor reactors, Blocksize, 167 Mounting Power Modules PM340 blocksize, 83 Screening Kit, 300	Shielding, 290 Sinusoidal filter, Chassis, 184 Standards, 30 Support, 7 System data, 28
	Т
	Technical data Blocksize line filter, 44

Blocksize line reactors, 57 Braking Modules, 162 Braking resistors, 165 Braking resistors Blocksize, 150 DRIVE-CLiQ cabinet gland, 286 DRIVE-CLiQ Coupling, 289 Motor reactors, blocksize, 178 Power Modules blocksize, 87 Sensor Module Cabinet-Mounted SMC10, 261 Sensor Module Cabinet-Mounted SMC20, 272 **Technical specifications** Chassis line filter, 44 Control CU310 PN, 231 Control Unit Adapter 31 (CUA31), 239 Control Unit Adapter 32 (CUA32), 247 Control Unit CU310 DP, 217 Line reactors, 59 Motor reactors, 183 Motor reactors Chassis, 183 Power Modules in chassis format, 138

Sinusoidal filter, built-in unit, 187

# ٧

Ventilation, 321

Siemens AG Industry Sector Drive Technologies Motion Control Systems P.O. Box 3180 91050 ERLANGEN GERMANY Subject to change without prior notice © Siemens AG 2008

www.siemens.com/motioncontrol